KLV-23M1

SERVICE MANUAL

US Model
Canadian Model

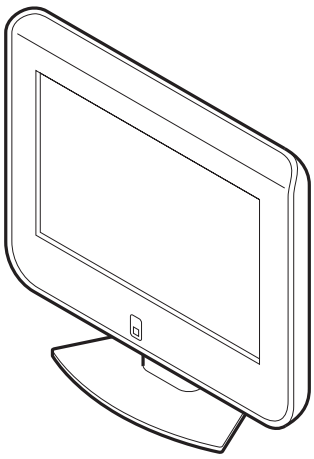

AT2 CHASSIS

SPECIFICATIONS

Television system:
American TV standard

Channel coverage:
VHF: 2-13/UHF: 14-69/CATV: 1-125

Antenna:
75-ohm external terminal for VHF/UHF

Screen size (measured diagonally):
23 inches

Panel System:
LCD (Liquid Crystal Display) Panel

Display resolution:
1,366 dots (horizontal) × 768 lines (vertical)

VIDEO 1/2 IN:
S VIDEO (4-pin mini DIN):
Y: 1.0 Vp-p, 75 ohms unbalanced, sync negative
C: 0.286 Vp-p (Burst signal), 75 ohms
VIDEO: 1 Vp-p, 75 ohms unbalanced, sync negative
AUDIO: 500 mVrms (100% modulation)
Impedance: 47 kilohms

LCD Color TV

SONY

HD/DVD 3 IN:

Y, P_B, P_R (Component Video):
- Y: 1.0 Vp-p, 75 ohms unbalanced, sync negative
- P_B: 0.7 Vp-p, 75 ohms
- P_R: 0.7 Vp-p, 75 ohms
- Signal format: 480i, 480p, 720p, 1080i

AUDIO: 500 mVrms (100% modulation)
Impedance: 47 kilohms

HDMI 4 IN:

HDMI: Video: 480i, 480p, 720p, 1080i
Audio: Two channel linear PCM 32, 44.1 and 48 kHz, 16, 20 and 24 bits

AUDIO: 500 mVrms (100% modulation)
Impedance: 47 kilohms

AUDIO OUT:

500 mVrms (100% modulation)
More than 1 Vrms at the maximum volume setting (Variable)
More than 500 mVrms (Fixed)

Headphones:

Stereo mini jack
Impedance: 16 ohms

Speaker:

Woofer: ø70 mm (2)
Tweeter: ø28 mm (2)

Speaker output:

4 W + 4 W

Power requirement:

120 V AC, 60 Hz

Power consumption:

In use: 95 W
In standby: Less than 1 W

Dimensions (W/H/D):

Including TV stand: 605 × 525 × 242 mm (23 7/8 × 20 3/4 × 9 5/8 inches) (approx.)
Without TV stand: 605 × 475 × 102 mm (23 7/8 × 18 3/4 × 4 1/4 inches) (approx.)

Mass:

Including TV stand: 11.6 kg (25 lb. 9 1/8 oz.)
Without TV stand: 10.0 kg (22 lb. 3/4 oz.)

Supplied accessories:

Remote control RM-Y1109 (1)
Size AA batteries (2)
75-ohm coaxial cable (1)
AC power cord (1)
Operating Instructions (1)
Quick Setup Guide (1)
Warranty Card (1)

Optional accessories:

Headphones plug adaptor
Connecting cables
Wall-Mount Bracket SU-W210

Note

Some optional accessories may be out of stock.

Design and specifications are subject to change without notice.

WARNING AND CAUTIONS

CAUTION

These servicing instructions are for use by qualified service personnel only To reduce the risk of electric shock, do not perform any servicing other than that contained in the operating instructions unless you are qualified to do so.

WARNING!!

An isolation transformer should be used during any service to avoid possible shock hazard, because of live chassis. The chassis of this receiver is directly connected to the ac power line.

⚠ SAFETY-RELATED COMPONENT WARNING!!

Components identified by shading and ⚠ mark on the schematic diagrams, exploded views, and in the parts list are critical for safe operation. Replace these components with Sony parts whose part numbers appear as shown in this manual or in supplements published by Sony. Circuit adjustments that are critical for safe operation are identified in this manual. Follow these procedures whenever critical components are replaced or improper operation is suspected.

ATTENTION!!

Ces instructions de service sont à l'usage du personnel de service qualifié seulement. Pour prévenir le risque de choc électrique, ne pas faire l'entretien autre que celui contenu dans le Mode d'emploi à moins que vous soyez qualifié faire ainsi.

Afin d'eviter tout risque d'electrocution provenant d'un châssis sous tension, un transformateur d'isolement doit etre utilisé lors de tout dépannage. Le châssis de ce récepteur est directement raccordé à l'alimentation du secteur

⚠ ATTENTION AUX COMPOSANTS RELATIFS A LA SECURITE!!

Les composants identifies par une trame et par une marque ⚠ sur les schemas de principe, les vues explosees et les listes de pieces sont d'une importance critique pour la securite du fonctionnement. Ne les remplacer que par des composants Sony dont le numero de piece est indique dans le present manuel ou dans des supplements publies par Sony. Les reglages de circuit dont l'importance est critique pour la securite du fonctionnement sont identifies dans le present manuel. Suivre ces procedures lors de chaque remplacement de composants critiques, ou lorsqu'un mauvais fonctionnement suspecte.

SAFETY CHECK-OUT

After correcting the original service problem, perform the following safety checks before releasing the set to the customer:

1. Check the area of your repair for unsoldered or poorly-soldered connections. Check the entire board surface for solder splashes and bridges.
2. Check the interboard wiring to ensure that no wires are "pinched" or contact high-wattage resistors.
3. Check that all control knobs, shields, covers, ground straps, and mounting hardware have been replaced. Be absolutely certain that you have replaced all the insulators.
4. Look for unauthorized replacement parts, particularly transistors, that were installed during a previous repair. Point them out to the customer and recommend their replacement.
5. Look for parts which, though functioning, show obvious signs of deterioration. Point them out to the customer and recommend their replacement.
6. Check the line cords for cracks and abrasion. Recommend the replacement of any such line cord to the customer.
7. Check the antenna terminals, metal trim, "metallized" knobs, screws, and all other exposed metal parts for AC Leakage. Check leakage as described right.

LEAKAGE TEST

The AC leakage from any exposed metal part to earth ground and from all exposed metal parts to any exposed metal part having a return to chassis, must not exceed 0.5 mA (500 microamperes). Leakage current can be measured by any one of three methods.

1. A commercial leakage tester, such as the Simpson 229 or RCA WT-540A. Follow the manufacturers' instructions to use these instruments.
2. A battery-operated AC milliammeter. The Data Precision 245 digital multimeter is suitable for this job.
3. Measuring the voltage drop across a resistor by means of a VOM or battery-operated AC voltmeter. The "limit" indication is 0.75 V, so analog meters must have an accurate low-voltage scale. The Simpson 250 and Sanwa SH-63Trd are examples of a passive VOMs that are suitable. Nearly all battery operated digital multimeters that have a 2 V AC range are suitable. (See Fig. A)

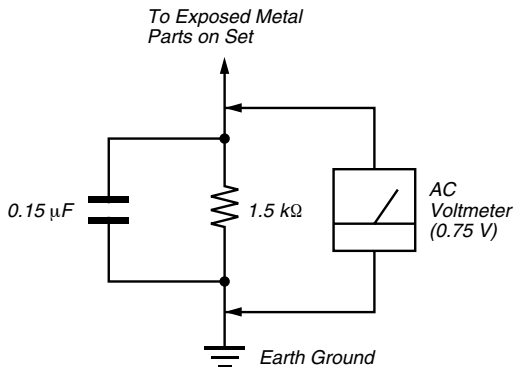

Fig. A. Using an AC voltmeter to check AC leakage.

WARNING!!

SAFETY-RELATED COMPONENT WARNING!!
COMPONENTS IDENTIFIED BY SHADING AND MARK ⚠ ON THE SCHEMATIC DIAGRAMS, EXPLODED VIEWS AND IN THE PARTS LIST ARE CRITICAL FOR SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY. CIRCUIT ADJUSTMENTS THAT ARE CRITICAL FOR SAFE OPERATION ARE IDENTIFIED IN THIS MANUAL. FOLLOW THESE PROCEDURES WHENEVER CRITICAL COMPONENTS ARE REPLACED OR IMPROPER OPERATION IS SUSPECTED.

AVERTISSEMENT!!
ATTENTION AUX COMPOSANTS RELATIFS À LA SÉCURITÉ!!
LES COMPOSANTS IDENTIFIÉS PAR UNE TRAME ET UNE MARQUE ! SONT CRITIQUES POUR LA SÉCURITÉ. NE LES REMPLACER QUE PAR UNE PIÈCE PORTANT LE NUMÉRO SPECIFIÉ. LES RÉGLAGES DE CIRCUIT DONT L'IMPORTANCE EST CRITIQUE POUR LA SÉCURITÉ DU FONCTIONNEMENT SONT IDENTIFIÉS DANS LE PRÉSENT MANUEL. SUIVRE CES PROCÉDURES LORS DE CHAQUE REMPLACEMENT DE COMPOSANTS CRITIQUES, OU LORSQU'UN MAUVAIS FONCTIONNEMENT EST SUSPECTÉ.

TABLE OF CONTENTS

1. DISASSEMBLY 1-1

1-1. STAND REMOVAL 1-1
1-2. REAR CABINET ASSY REMOVAL 1-1
1-3. G1 AND PB BOARDS REMOVAL 1-2
1-4. U1 BOARD REMOVAL 1-2
1-5. P AND TU BOARDS REMOVAL 1-3
1-6. A1 AND B BOARDS REMOVAL 1-3
1-7. LCD PANEL REMOVAL 1-4
1-8. H1 BOARD REMOVAL 1-5
1-9. H2 BOARD REMOVAL 1-5

2. ADJUSTMENT 2-1

2-1. AGING 2-1
2-1-1. Aging setting 2-1
2-1-2. Aging conditions 2-1
2-2. Measurement equipment 2-1
2-3. ADJUSTMENT OF SIGNAL LEVEL 2-1
2-3-1. Check AD calibration registration items 2-1
2-3-2. Y Level/COLOR adjustment of component input 2-1
2-3-3. Y Level/COLOR adjustment of HDMI input 2-2
2-3-4. Y Level/COLOR adjustment of Video input (by using a jig) 2-2
2-3-5. Y Level/COLOR adjustment of RF input 2-2
2-4. WHITE BALANCE ADJUSTMENT 2-2
2-4-1. White balance adjustment of color temperature “Cool” 2-2
2-4-2. White balance adjustment of color temperature “Neutral” 2-3
2-4-3. White balance adjustment of color temperature “Warm” 2-3

3. DIAGRAMS 3-1

3-1. BLOCK DIAGRAMS 3-1
3-2. FRAME DIAGRAMS 3-8
3-3. CIRCUIT BOARDS LOCATION 3-9
3-4. SCHEMATIC DIAGRAMS AND PRINTED WIRING BOARDS 3-9
(1) Schematic Diagrams of A1 Board 3-10
(2) Schematic Diagrams of B Board 3-14
(3) Schematic Diagrams of G1 Board 3-22
(4) Schematic Diagram of H1, H2 and PB Boards 3-23
(5) Schematic Diagrams of P Board 3-24
(6) Schematic Diagrams of TU Board 3-26
(7) Schematic Diagrams of U1 Board 3-27
3-5. SEMICONDUCTORS 3-28

4. EXPLODED VIEWS 4-1

4-1. CABINET ASSY AND STAND 4-2
4-2. CHASSIS-1 4-3
4-3. CHASSIS-2 4-4
4-4. BEZEL ASSY 4-5
4-5. PACKING MATERIALS 4-6

5. ELECTRICAL PARTS LIST 5-1

SECTION 1
DISASSEMBLY

1-1. STAND REMOVAL

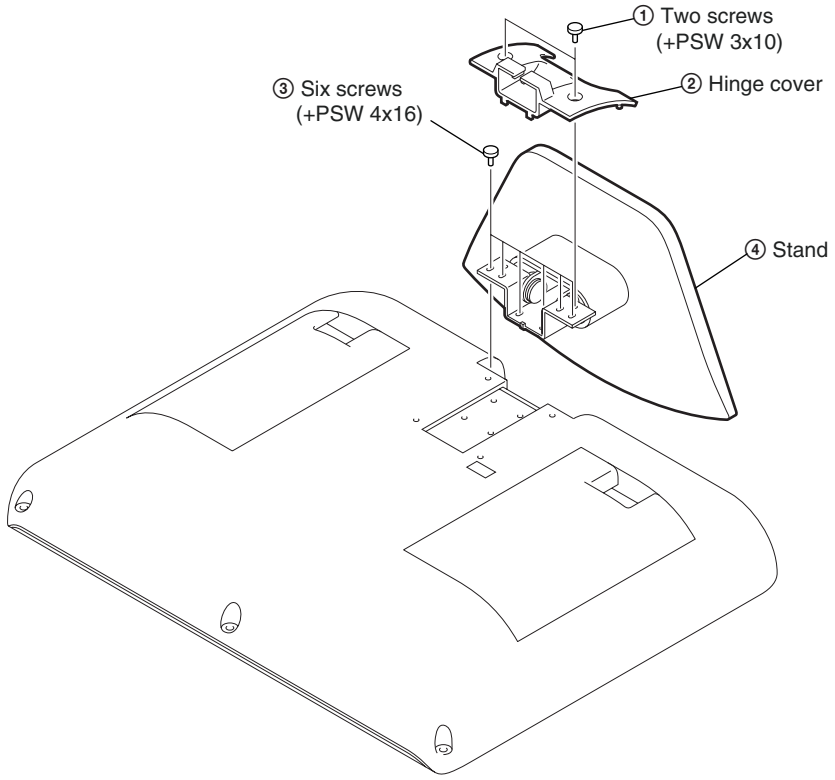

1-2. REAR CABINET ASSY REMOVAL

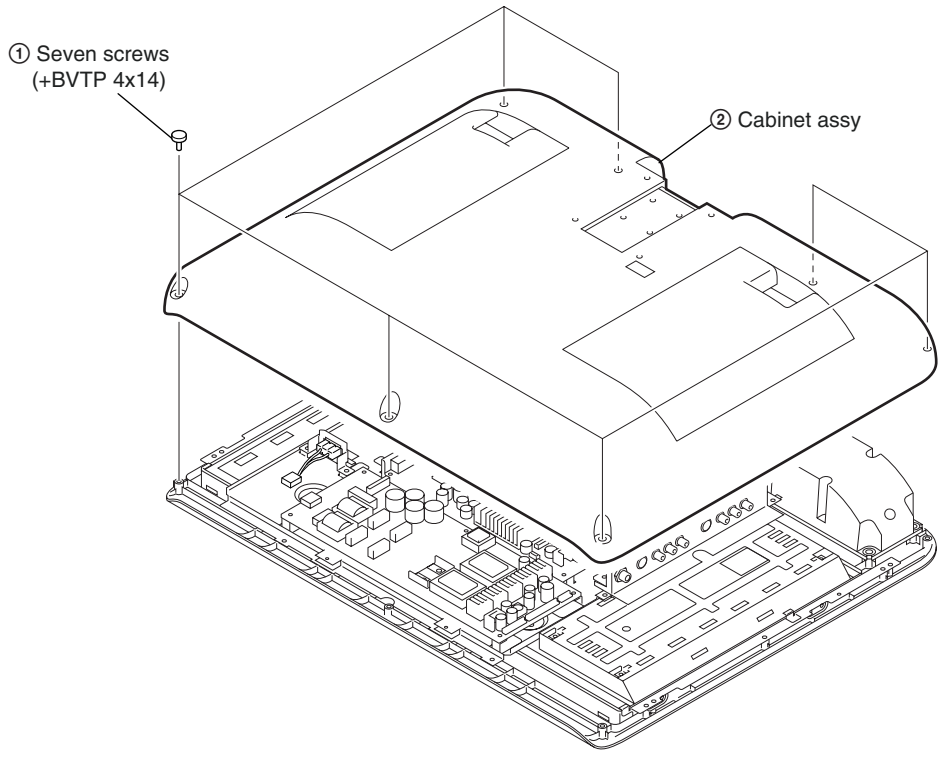

1-3. G1 AND PB BOARDS REMOVAL

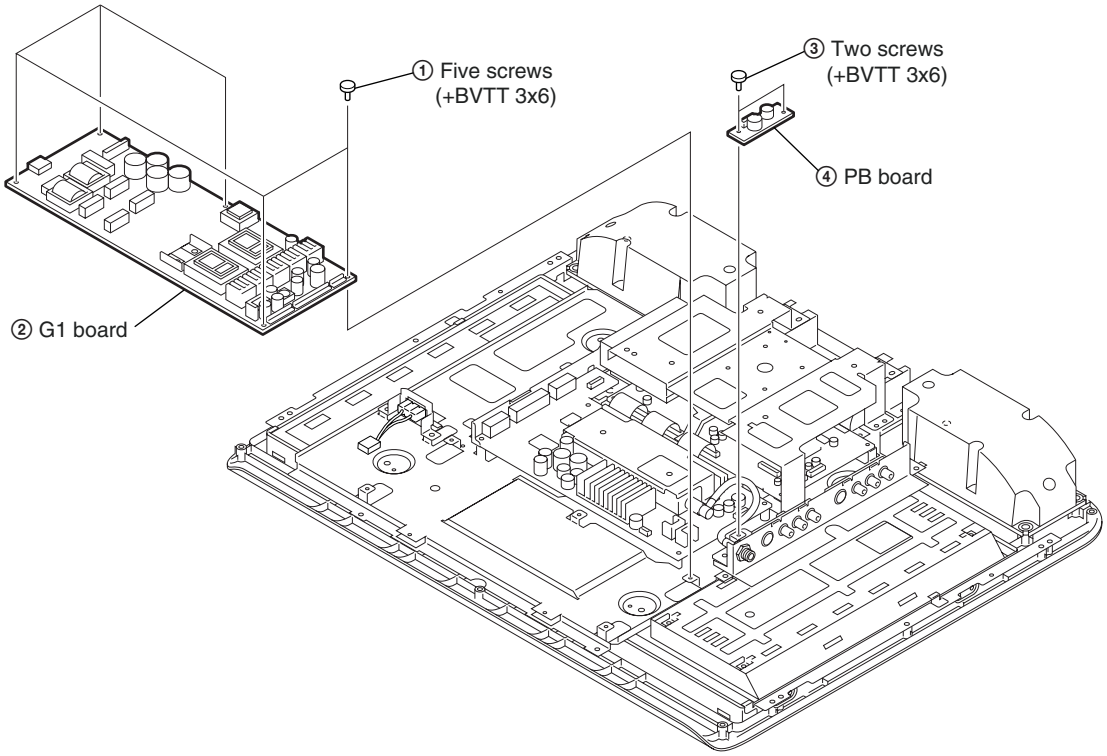

1-4. U1 BOARD REMOVAL

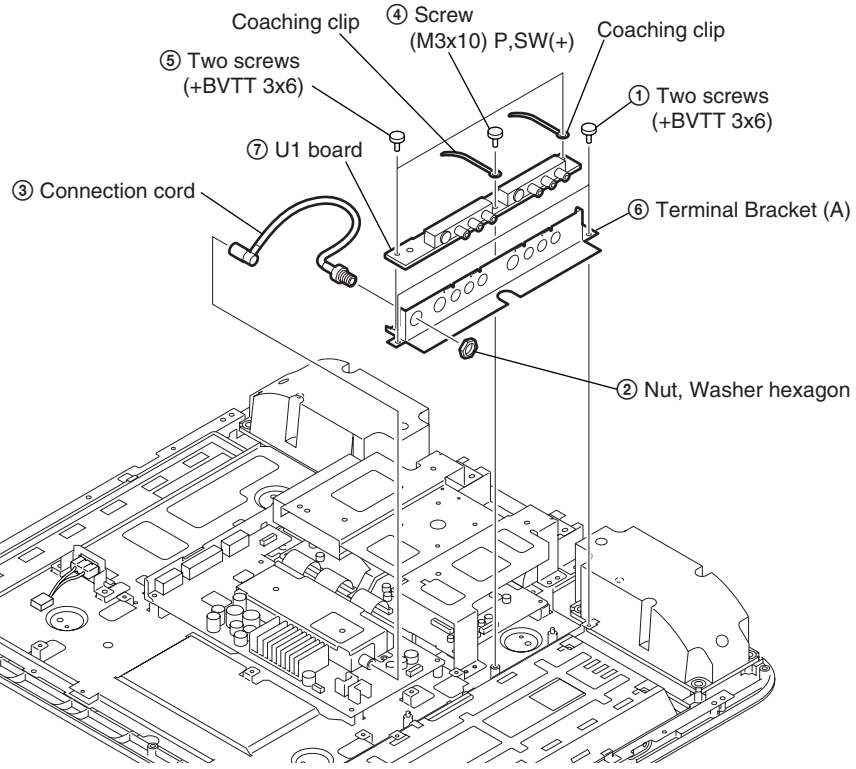

1-5. P AND TU BOARDS REMOVAL

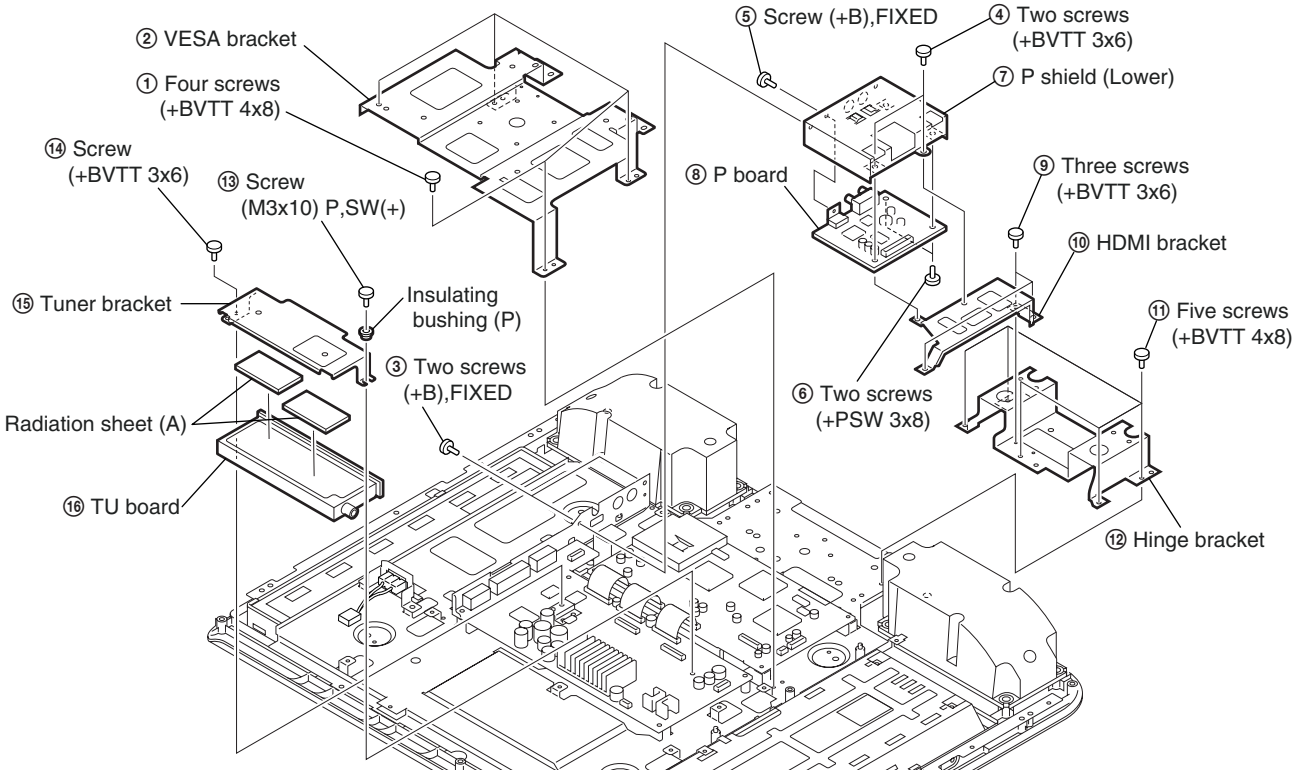

1-6. A1 AND B BOARDS

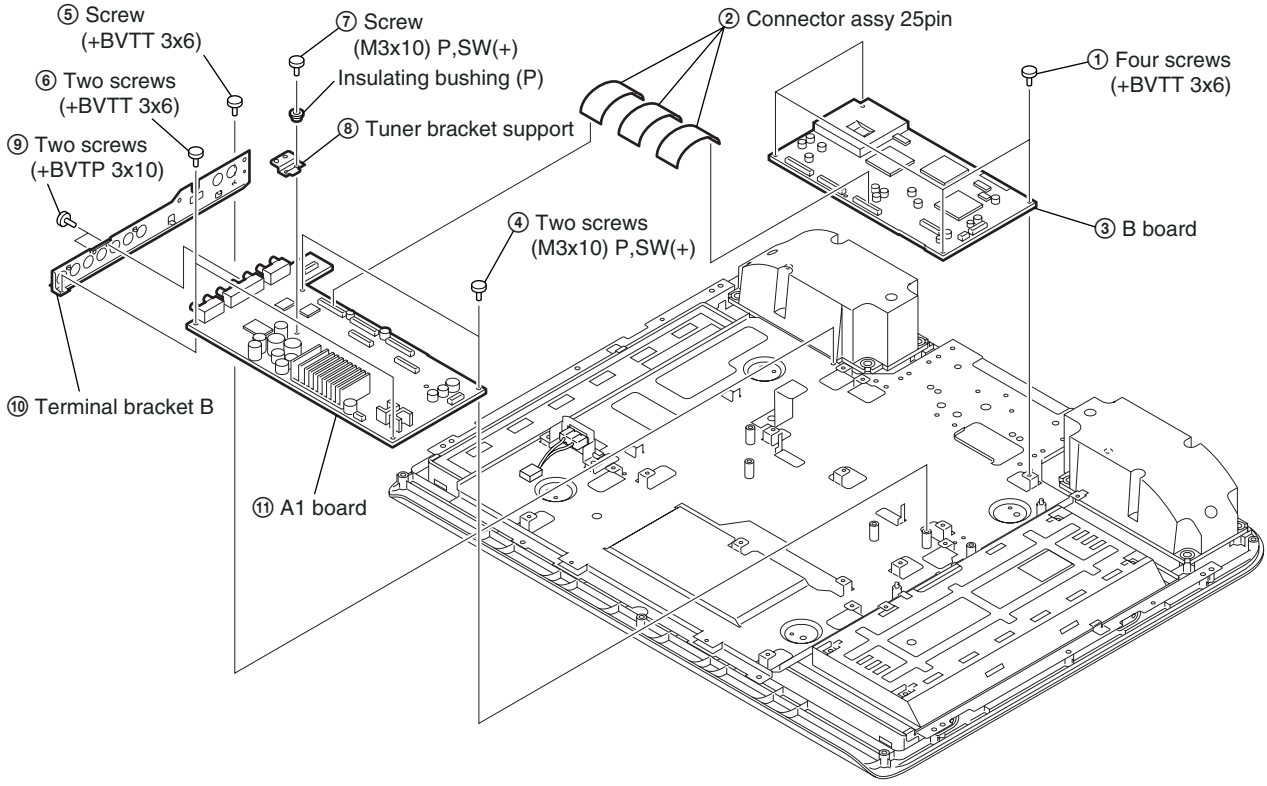
⑤ Screw (+BVTT 3x6)
⑥ Two screws (+BVTT 3x6)
⑨ Two screws (+BVTP 3x10)
⑦ Screw (M3x10) P,SW(+)
Insulating bushing (P)
⑧ Tuner bracket support
② Connector assy 25pin
① Four screws (+BVTT 3x6)
③ B board
④ Two screws (M3x10) P,SW(+)
⑩ Terminal bracket B
⑪ A1 board

1-7. LCD PANEL REMOVAL

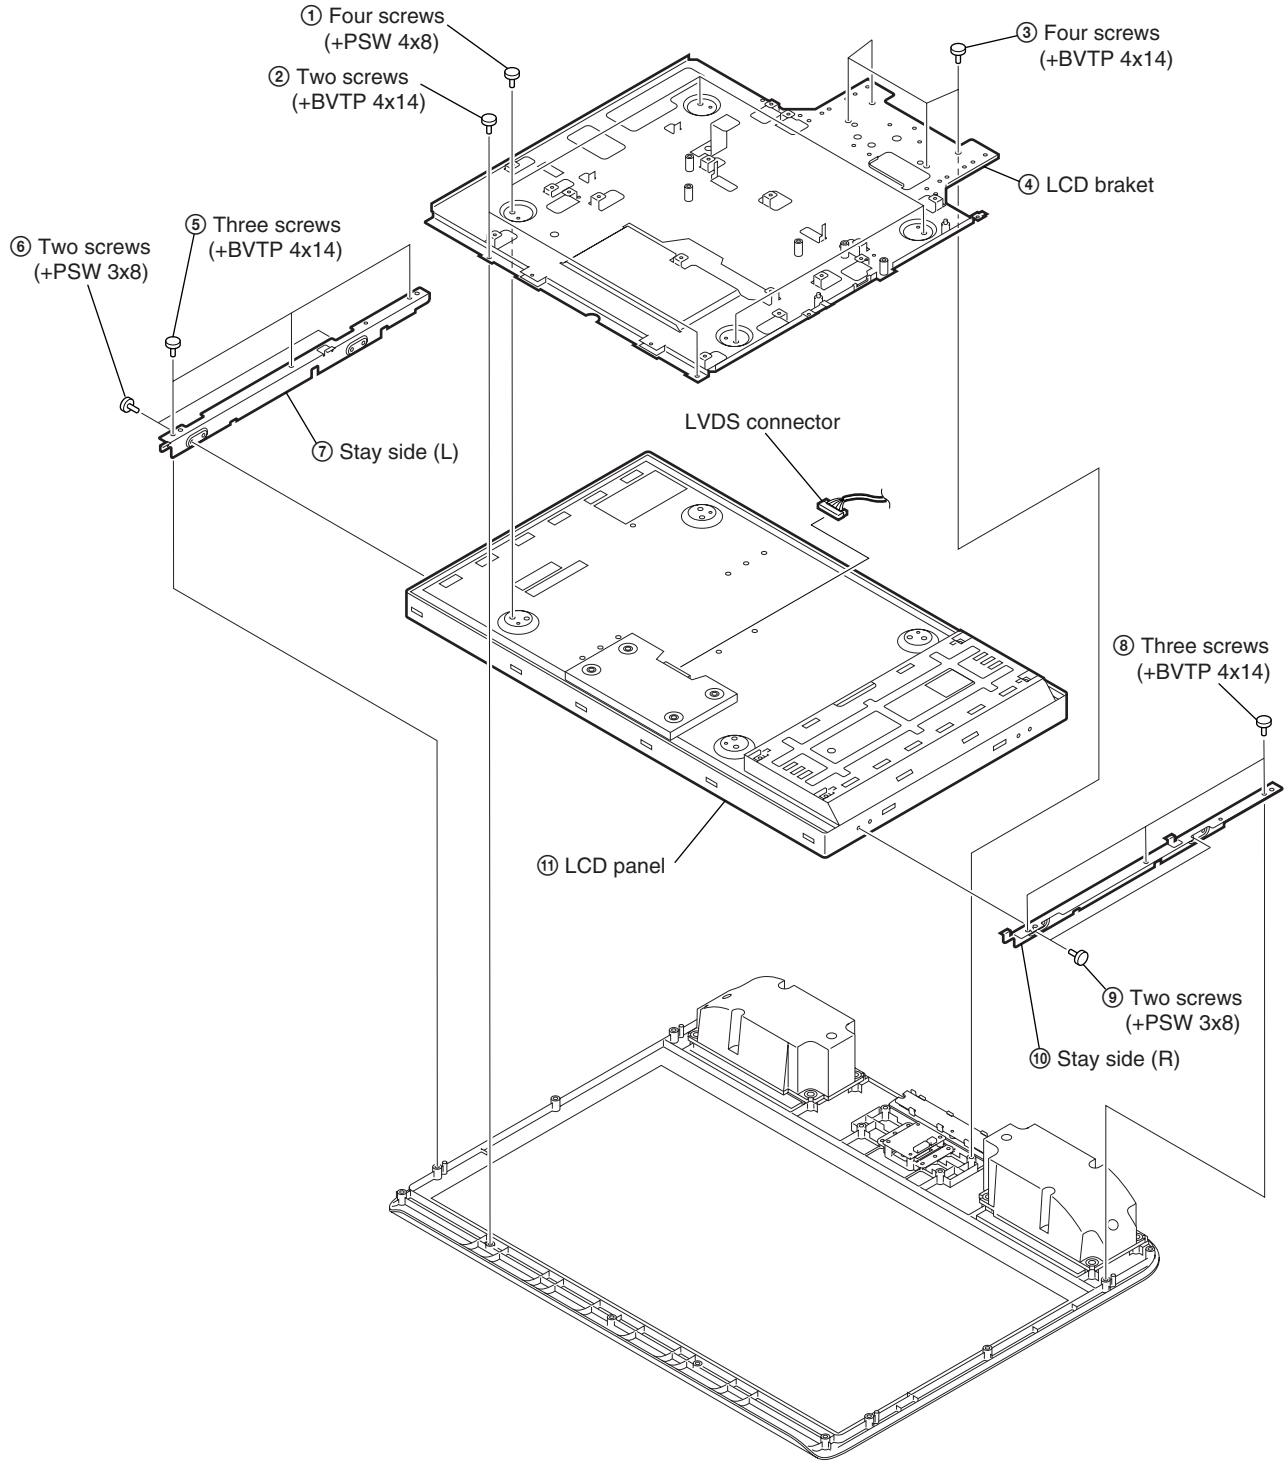

1-8. H1 BOARD REMOVAL

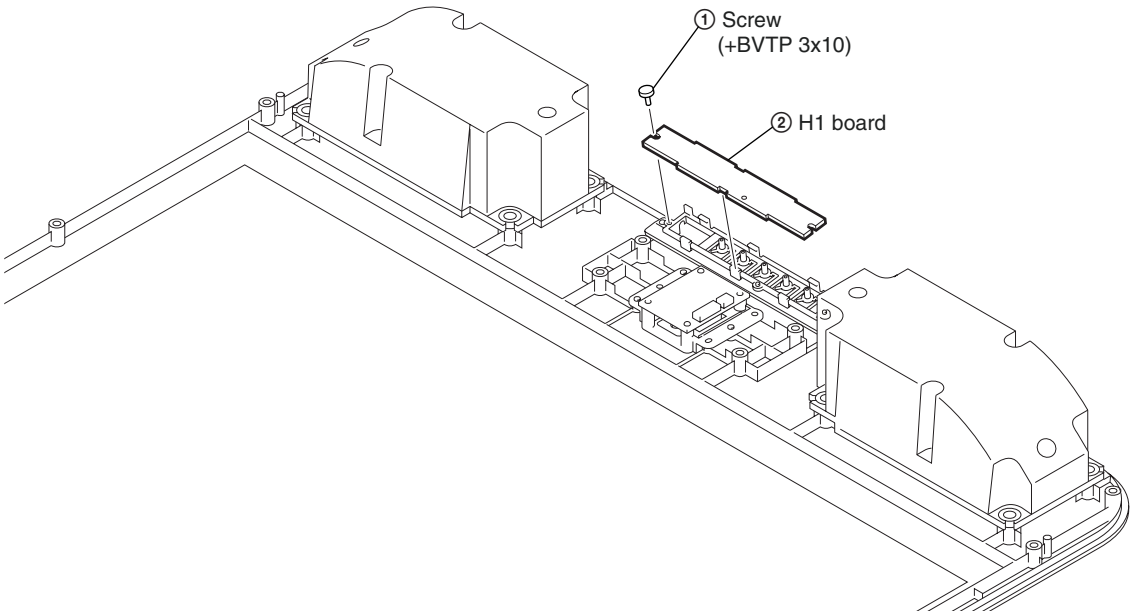

1-9. H2 BOARD REMOVAL

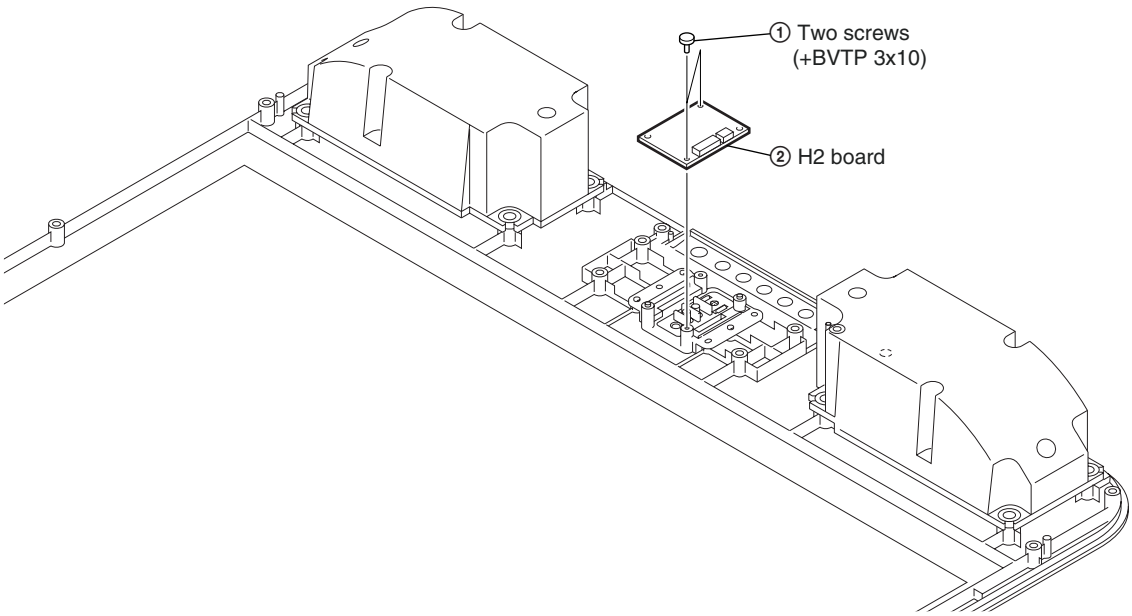

SECTION 2
ADJUSTMENTS

2-1. AGING

2-1-1. Aging setting

1. To set aging mode on no input signal, change the register. And do the “service mode”.

[AginIg setting]
“MON_CON_REG_2”=217

2-1-2. Aging conditions

Applied voltage	: Rated
Interval of time	: Over 30 min
Ambient temperature	: 22°C to 28°C
Pattern	: All-white is set by aging mode

[Transition of LED indication during aging]
When AGING_TIMER > 0
Green (0.5sec) -> Off (0.5sec) -> Green (0.5sec) -> Off (0.5sec)
When AGING_TIMER = 0
Green (3.0sec) -> Off (3.0sec) -> Green (3.0sec) -> Off (3.0sec)

Note:
After aging, if power was shut down befor W/B adjustment, adjust W/B after aging more than 30 seconds.

2-2. Measurement equipment

1. Color analyzer (CA-210) manufactured by MINOLTA.
2. Signal generator.
1) Use the NTSC Video signals with 7.5 IRE SETUP.
2) When the HDMI signal (1080i, 720p) generated by VG-828 is used, be careful that the H center position deviates by 44 dots.

2-3. ADJUSTMENT OF SIGNAL LEVEL

2-3-1. Check AD calibration registration items

1. Set following items.

Item	Default value
AD_Y_FSET_TV	128
AD_Y_OFSET_V	128
AD_Y_OFSET_S	128
AD_Y_OFSET_D1	128
AD_Y_OFSET_D2	128
AD_Y_OFSET_D3	128
AD_Y_OFSET_D4	128
AD_Y_OFST_HDMI_D1	128
AD_Y_OFST_HDMI_D1	128
AD_Y_OFST_HDMI_D3	128
AD_Y_OFST_HDMI_D4	128
AD_Y_OFST_HDMI_VGA	128
AD_C_OFSET_TV	128
AD_C_OFSET_V	128
AD_C_OFSET_S	128
AD_C_OFSET_D1	122
AD_C_OFSET_D2	123
AD_C_OFSET_D3	128
AD_C_OFSET_D4	128
AD_C_OFST_HDMI_D1	128
AD_C_OFST_HDMI_D2	128
AD_C_OFST_HDMI_D3	128
AD_C_OFST_ HDMI_D4	128
AD_C_OFST_ HDMI_VGA	128
ADJ_TARGET_BL_IN_Y	3328
ADJ_Y_DEADBAND	16
ADJ_Y_LOOPATTEN	16
ADJ_C_LOOPATTEN	16
AD_ADJ_TIME_OUT	80
ADJ_AREA_H2_VB1	180
ADJ_AREA_H2_VB2	180
ADJ_AREA_H2_VB3	1020
ADJ_AREA_H2_VB4	1220
ADJ_AREA_H2_OFFSET	10
ADJ_AREA_V2	380

2-3-2. Y Level/COLOR adjustment of component input

1. Set “PICTURE_MODE” = 2 (Pro) and change the register setting to the following values.

Format	Item	Data
Picture Save	PICTURE	100 (max)
	BRIGHTNESS	50 (center)
	Color	25 (center)
	USER_CTRL	0 (all off)

2. Set “THUNDER_ENABLE” = 0 (Bolt is set to through mode) .
3. Input the D3 (1080i) all-white signal (100 IRE) .
4. Adjust CCP’s Y_LEVEL to set the value of BOLT’s G OUT as follows.

Item	Standard
Video_g	3328/4080 ±16

5. Input the D3 (1080i) color-bar signal (100 IRE) .
6. Adjust CCP’s C_LEVEL to set the value of BOLT’s B OUT as follows.

Item	Standard
Video_b	VB1=VB4 ±16

7. Save the adjustment values in the D3 EEPROM.

8. Add the following offsets to the values of step 7 and copy the obtained values to the EEPROM for D1, D2, and D4 respectively.

Item	D1	D2	D4
Y_LEVEL OFFSET	±0	±0	±0
C_LEVEL OFFSET	-6	-5	±0

2-3-3. Y Level/COLOR adjustment of HDMI input

1. Copy the Y Level/COLOR adjustment values of component input to the EEPROM for HDMI D1, D2, D3, D4, and VGA respectively.
   Copy the D2 adjustment values for VGA.

2-3-4. Y Level/COLOR adjustment of Video input (by using a jig)

1. Set PICTURE_MODE = 2 (Pro), and then change the register setting to the following values.

Format	Item	Data
Picture Save	PICTURE	100 (max)
	BRIGHTNESS	50 (center)
	Color	25 (center)
	Hue	25 (center)
	USER_CTRL	0 (all off)

2. Set THUNDER_ENABLE = 0 (Bolt is set to through mode) .
3. Input the Video 1 (composite) all-white signal (100 IRE) .
4. Adjust CCP's Y_LEVEL to set the value of BOLT's G OUT as follows.

Item	Standard
Video_g	3328/4080 ±16

5. Input the Video 1 (composite) color-bar signal (75 IRE) .
6. Adjust CCP's C_LEVEL to set the value of BOLT's B OUT as follows.

Item	Standard
Video_b	VB1=VB4 ±16

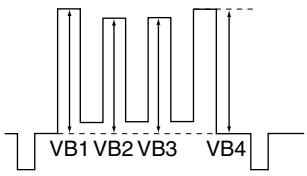

7. Write the adjustment values in the VIDEO EEPROM.
8. Add the following offsets to the values of step 7, and then copy the obtained values to the Svideo EEPROM.

Item	S-VIDEO
Y_LEVEL OFFSET	±0
C_LEVEL OFFSET	±0

2-3-5. Y Level/COLOR adjustment of RF input

1. Set PICTURE_MODE = 2 (Pro) and change the register setting to the following values.

Format	Item	Data
Picture Save	PICTURE	100 (max)
	BRIGHTNESS	50 (center)
	Color	25 (center)
	Hue	25 (center)
	USER_CTRL	0 (all off)

2. Set THUNDER_ENABLE = 0 (Bolt is set to through mode) .
3. Input the RF all-white signal (RF modulated 100 IRE signal) .
4. Adjust CCP's Y_LEVEL to set the value of BOLT's G OUT as follows.

Item	Standard
Video_g	3328/4080 ±16

5. Input the RF color-bar signal (RF modulated 75% color bar) .
6. Adjust CCP's C_LEVEL to set the value of BOLT's B OUT as follows.

Item	Standard
Video_b	VB1=VB4 ±16

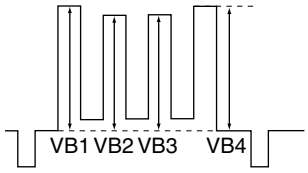

7. Write the adjustment values in the RF EEPROM.

2-4. WHITE BALANCE ADJUSTMENT

This adjustment uses ECS

2-4-1. White balance adjustment of color temperature "Cool"

1. Set PICTURE_MODE = 2 (Pro) and change the register setting to the following values.

Item	Data
PICTURE	100 (max)
BRIGHTNESS	50 (center)
Color	25 (center)
Hue	25 (center)
COLOR_INDEX	1 (high)
USER_CTRL	0 (all off)
SCALER_MODE	3 (full)

2. Input the 1080i 80% all-gray signal from the Video 4 input.

3. Adjust W/B in the R_DRIVE and B_DRIVE modes to the specified highlight adjustment values below.

Format	Item	Setting		
		Cool	Neutral	Warm
Color Save	R_DRV	134	137	142
	G_DRV	128	128	128
	B_DRV	139	133	120
	R_BKG	110	110	110
	G_BKG	128	128	128
	B_BKG	110	110	115

4. Input the 1080i 20% all-gray signal from the Video 4 input. Control and adjust the SG level so that Y becomes 10Nit.

5. Adjust W/B in the R_BKG and B_BKG modes to the specified background adjustment values below (when Y = 10Nit) .

	23”		Tolerance
	H/L	C/O	
x	0.269	0.269	H/L 1.0JND
y	0.268	0.268	C/O 1.5JND
Y	Not specified	20	C/O 1

6. Adjust W/B while tracking steps 1 to 5 so that the above specifications are completely satisfied.
7. Perform Color Save.

2-4-2. White balance adjustment of color temperature “Neutral”

1. Set COLOR_INDEX = 2 (Neutral) .
2. Adjust the value of R_DRIVE, B_DRIVE, R_BKG and B_BKG to the specification below in the same steps as color temperature “Cool” of 2-4-1.

	23”		Tolerance
	H/L	C/O	
x	0.277	0.277	H/L 1.0JND
y	0.278	0.278	C/O 1.5JND
Y	Not specified	20	C/O 1

3. Perform Color Save.

2-4-3. White balance adjustment of color temperature “Warm”

1. Set COLOR_INDEX = 3 (Warm) .
2. Adjust the value of R_DRIVE, B_DRIVE, R_BKG and B_BKG to the specification below in the same steps as color temperature “Cool” of 2-4-1.

	23”		Tolerance
	H/L	C/O	
x	0.296	0.296	H/L 1.0JND
y	0.300	0.300	C/O 1.5JND
Y	Not specified	20	C/O 1

3. Perform Color Save.
4. After adjustment, restore the setting of the registers that are not saved by Color Save to their default setting.

SECTION 3
DIAGRAMS

3-1. BLOCK DIAGRAMS

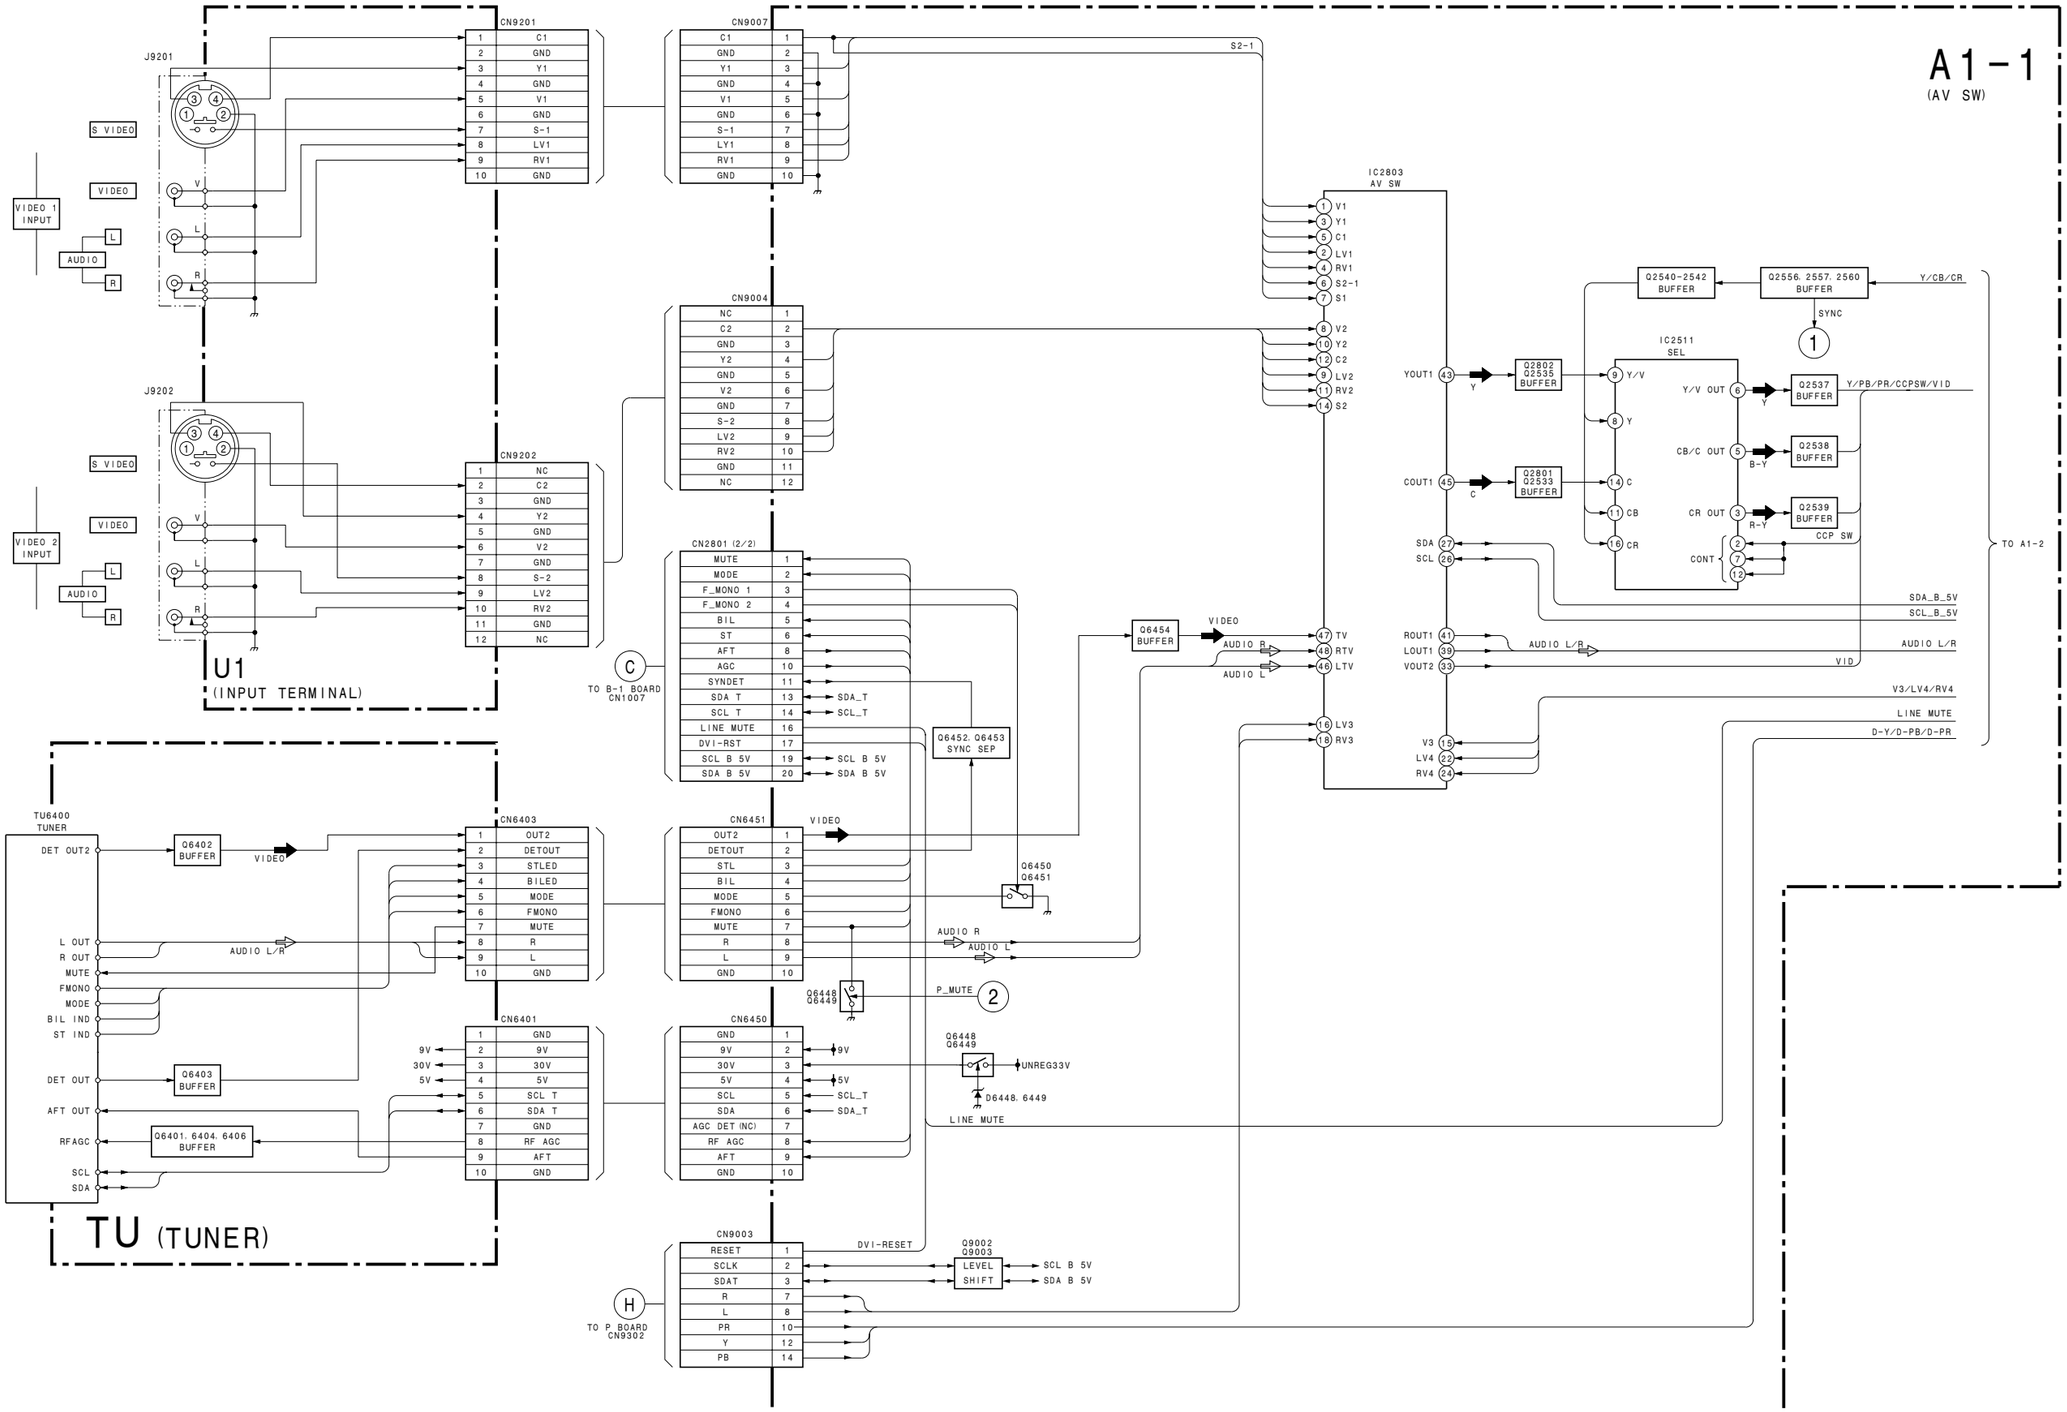

A1-2
(AV SW, AUDIO AMP)

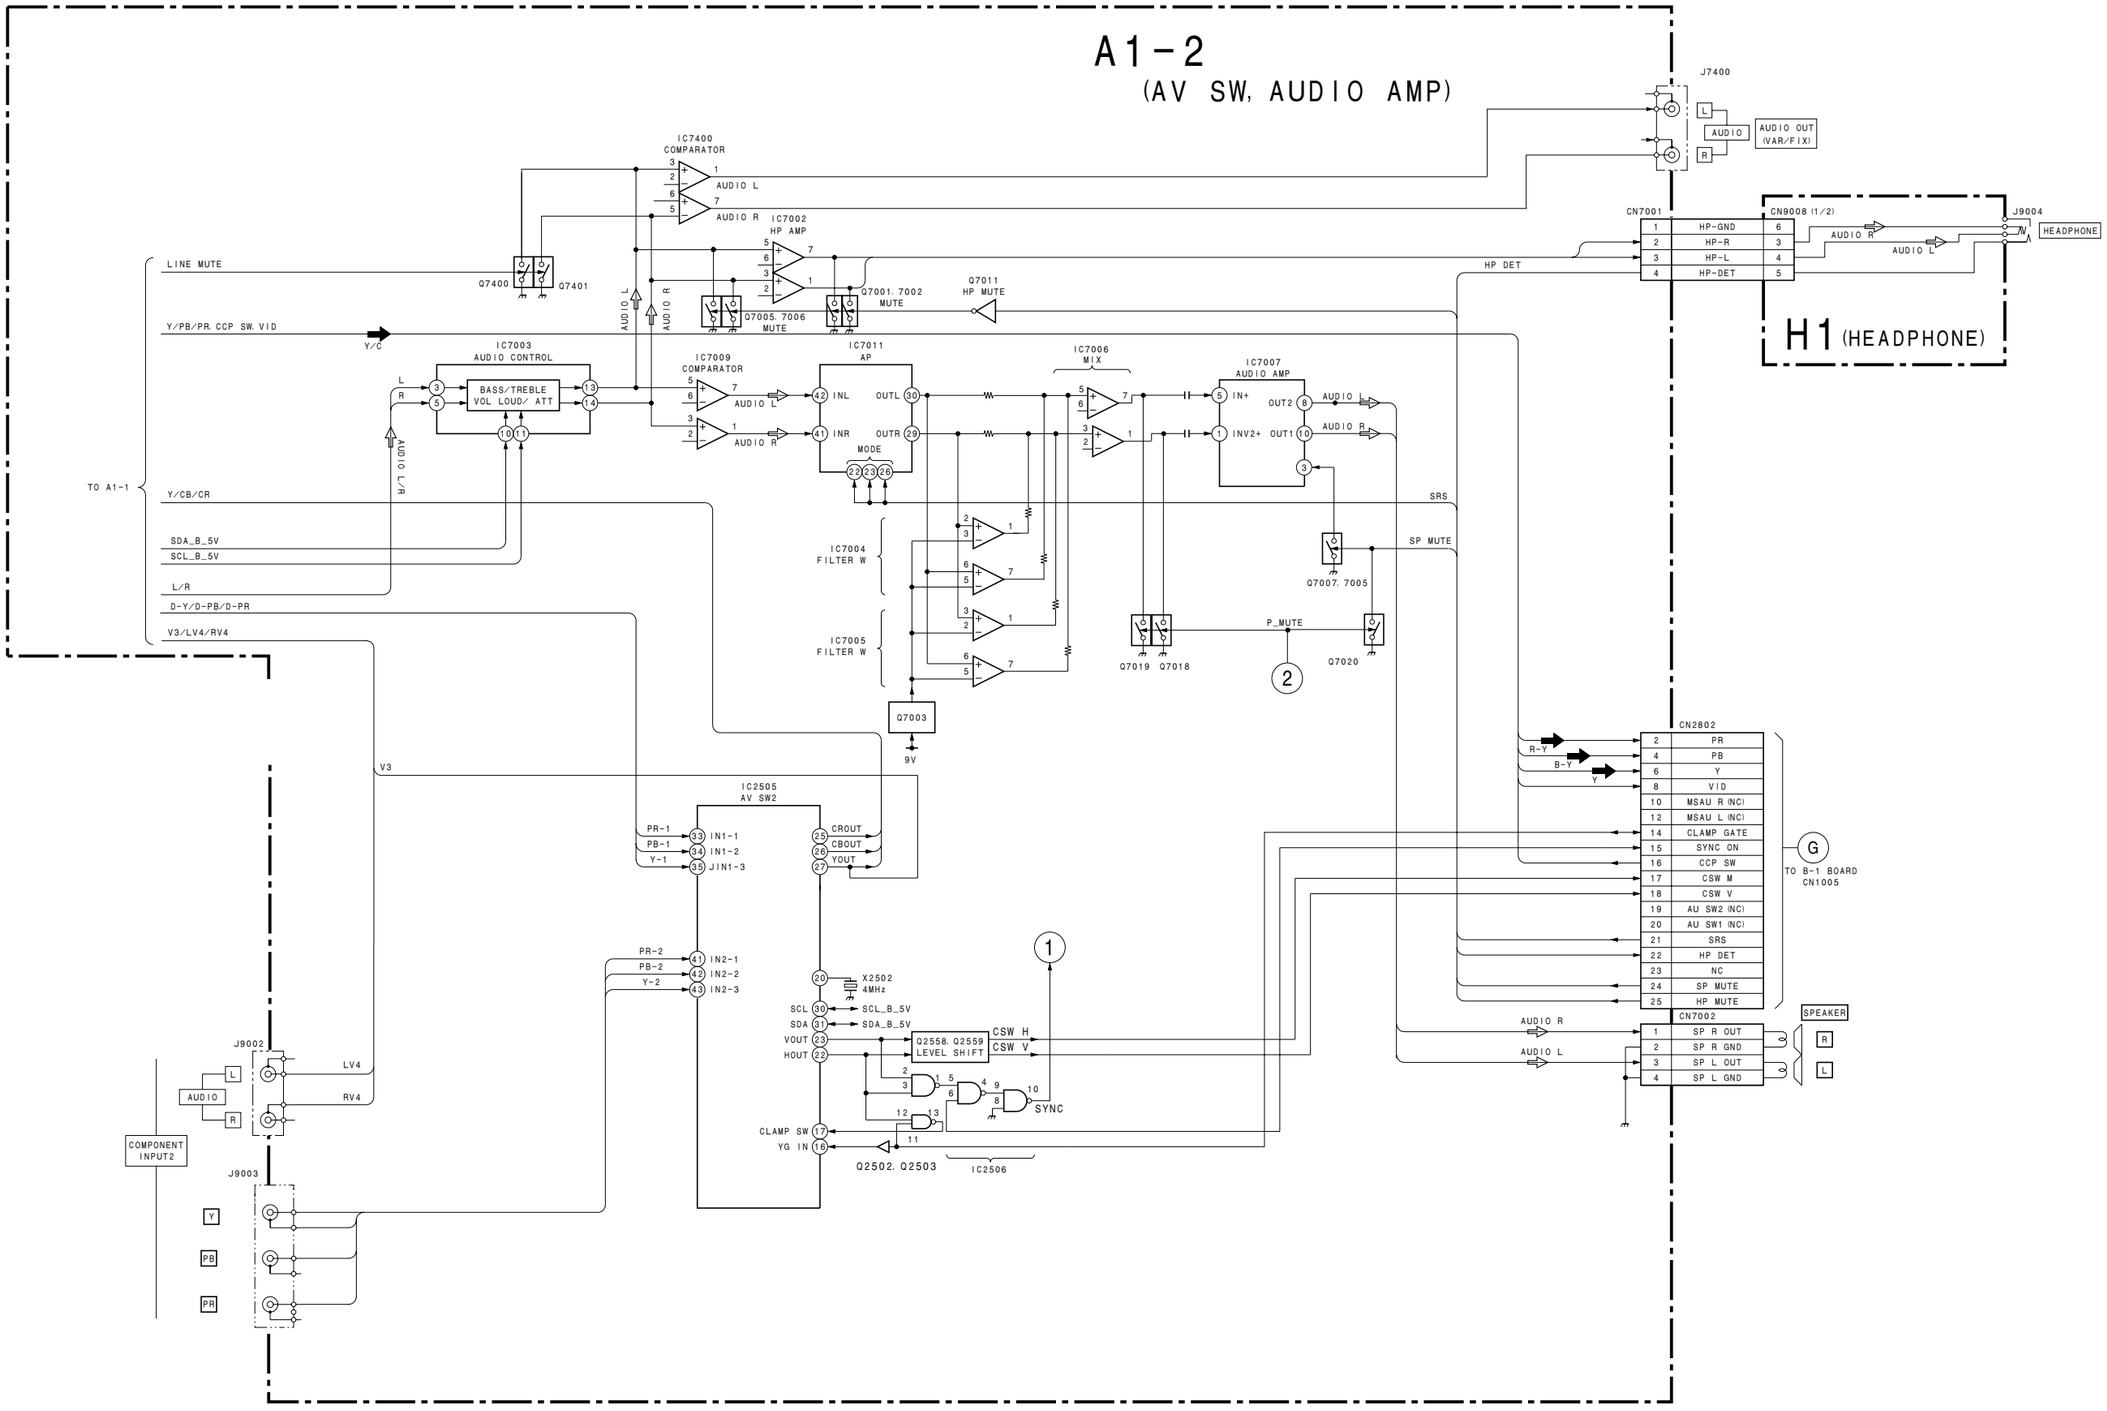

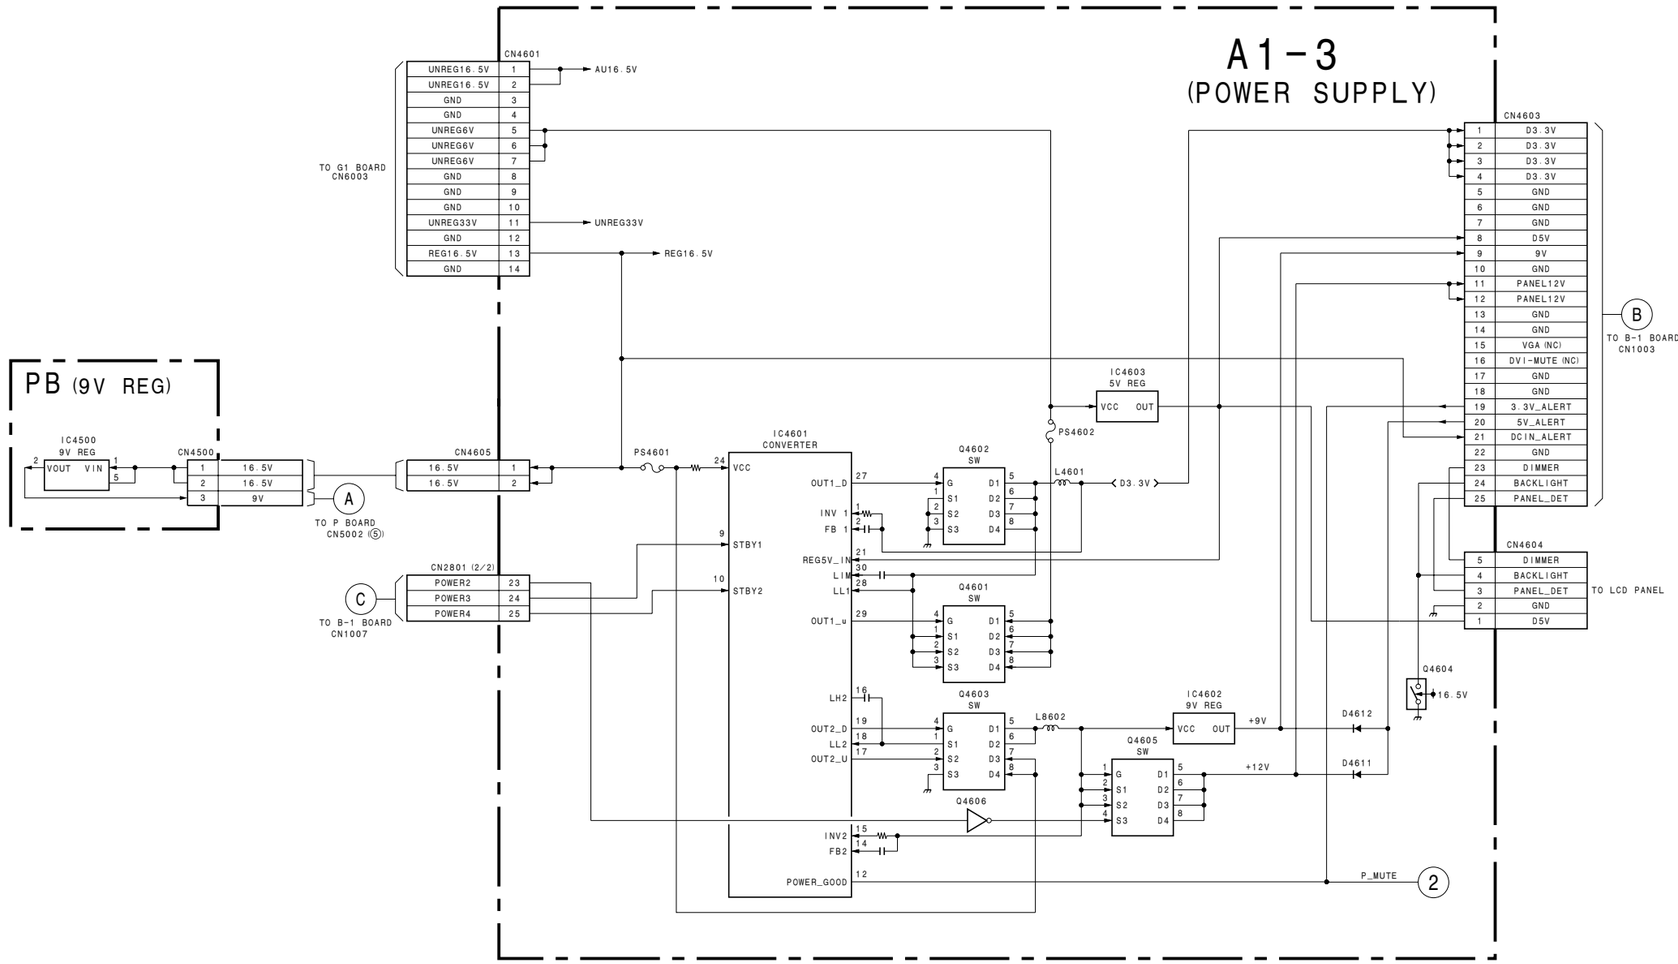
A1-3
(POWER SUPPLY)
PB (9V REG)
IC4500
9V REG
VOUT VIN
CN4500
1 16.5V
2 16.5V
3 9V
TO P BOARD
CN5002 (5)
CN4601
UNREG16.5V 1
UNREG16.5V 2
GND 3
GND 4
UNREG6V 5
UNREG6V 6
UNREG6V 7
GND 8
GND 9
GND 10
UNREG33V 11
GND 12
REG16.5V 13
GND 14
TO G1 BOARD
CN6003
AU16.5V
UNREG33V
REG16.5V
CN4605
16.5V 1
16.5V 2
PS4601
PS4602
IC4601
CONVERTER
VCC
OUT1_D
INV 1
FB 1
STBY1
STBY2
REG5V_IN
LIM
LL1
OUT1_u
LH2
OUT2_D
LL2
OUT2_U
INV2
FB2
POWER_GOOD
Q4602
SW
Q4601
SW
Q4603
SW
Q4605
SW
Q4606
L4601
L8602
D3.3V
IC4603
5V REG
VCC OUT
IC4602
9V REG
+9V
+12V
D4612
D4611
Q4604
16.5V
CN2801 (2/2)
POWER2 23
POWER3 24
POWER4 25
TO B-1 BOARD
CN1007
P_MUTE
2
CN4603
1 D3.3V
2 D3.3V
3 D3.3V
4 D3.3V
5 GND
6 GND
7 GND
8 D5V
9 9V
10 GND
11 PANEL12V
12 PANEL12V
13 GND
14 GND
15 VGA (NC)
16 DVI-MUTE (NC)
17 GND
18 GND
19 3.3V_ALERT
20 5V_ALERT
21 DC IN_ALERT
22 GND
23 DIMMER
24 BACKLIGHT
25 PANEL_DET
B
TO B-1 BOARD
CN1003
CN4604
5 DIMMER
4 BACKLIGHT
3 PANEL_DET
2 GND
1 D5V
TO LCD PANEL

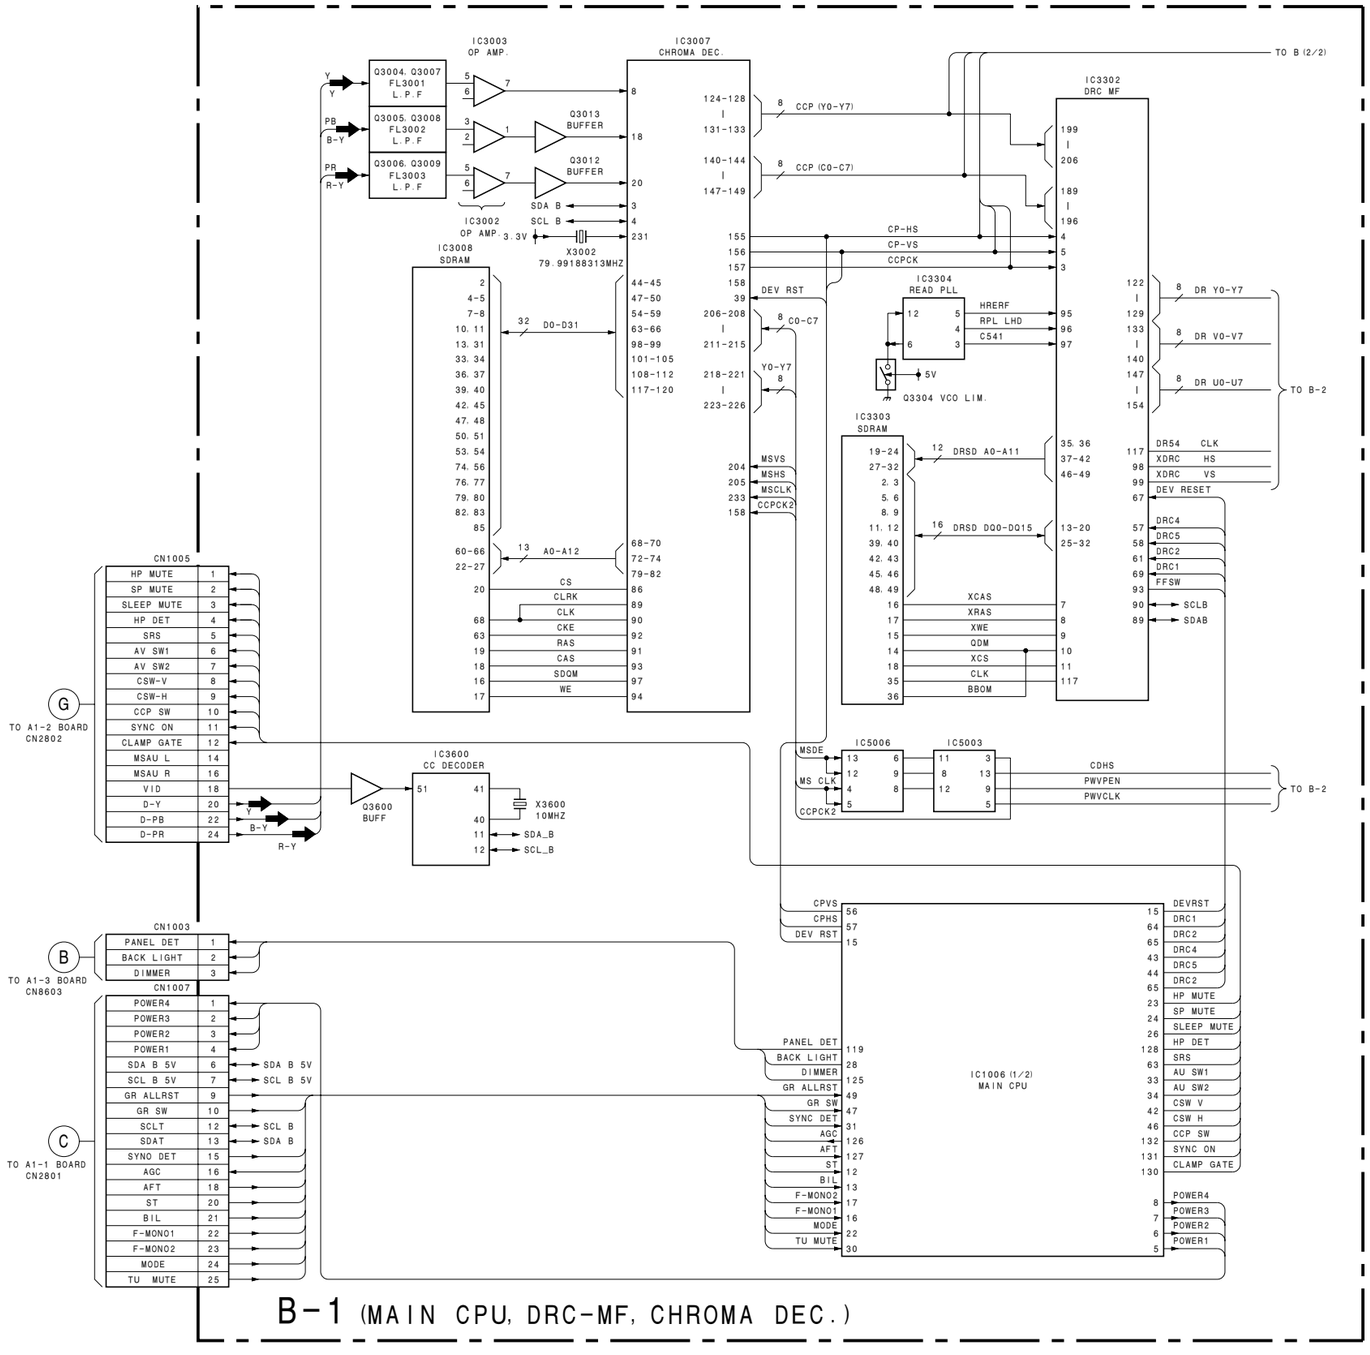

B-1 (MAIN CPU, DRC-MF, CHROMA DEC.)

B-2 (CPU, LCD DRIVE, SCAN CONV., DRC-MF, CHROMA DEC.

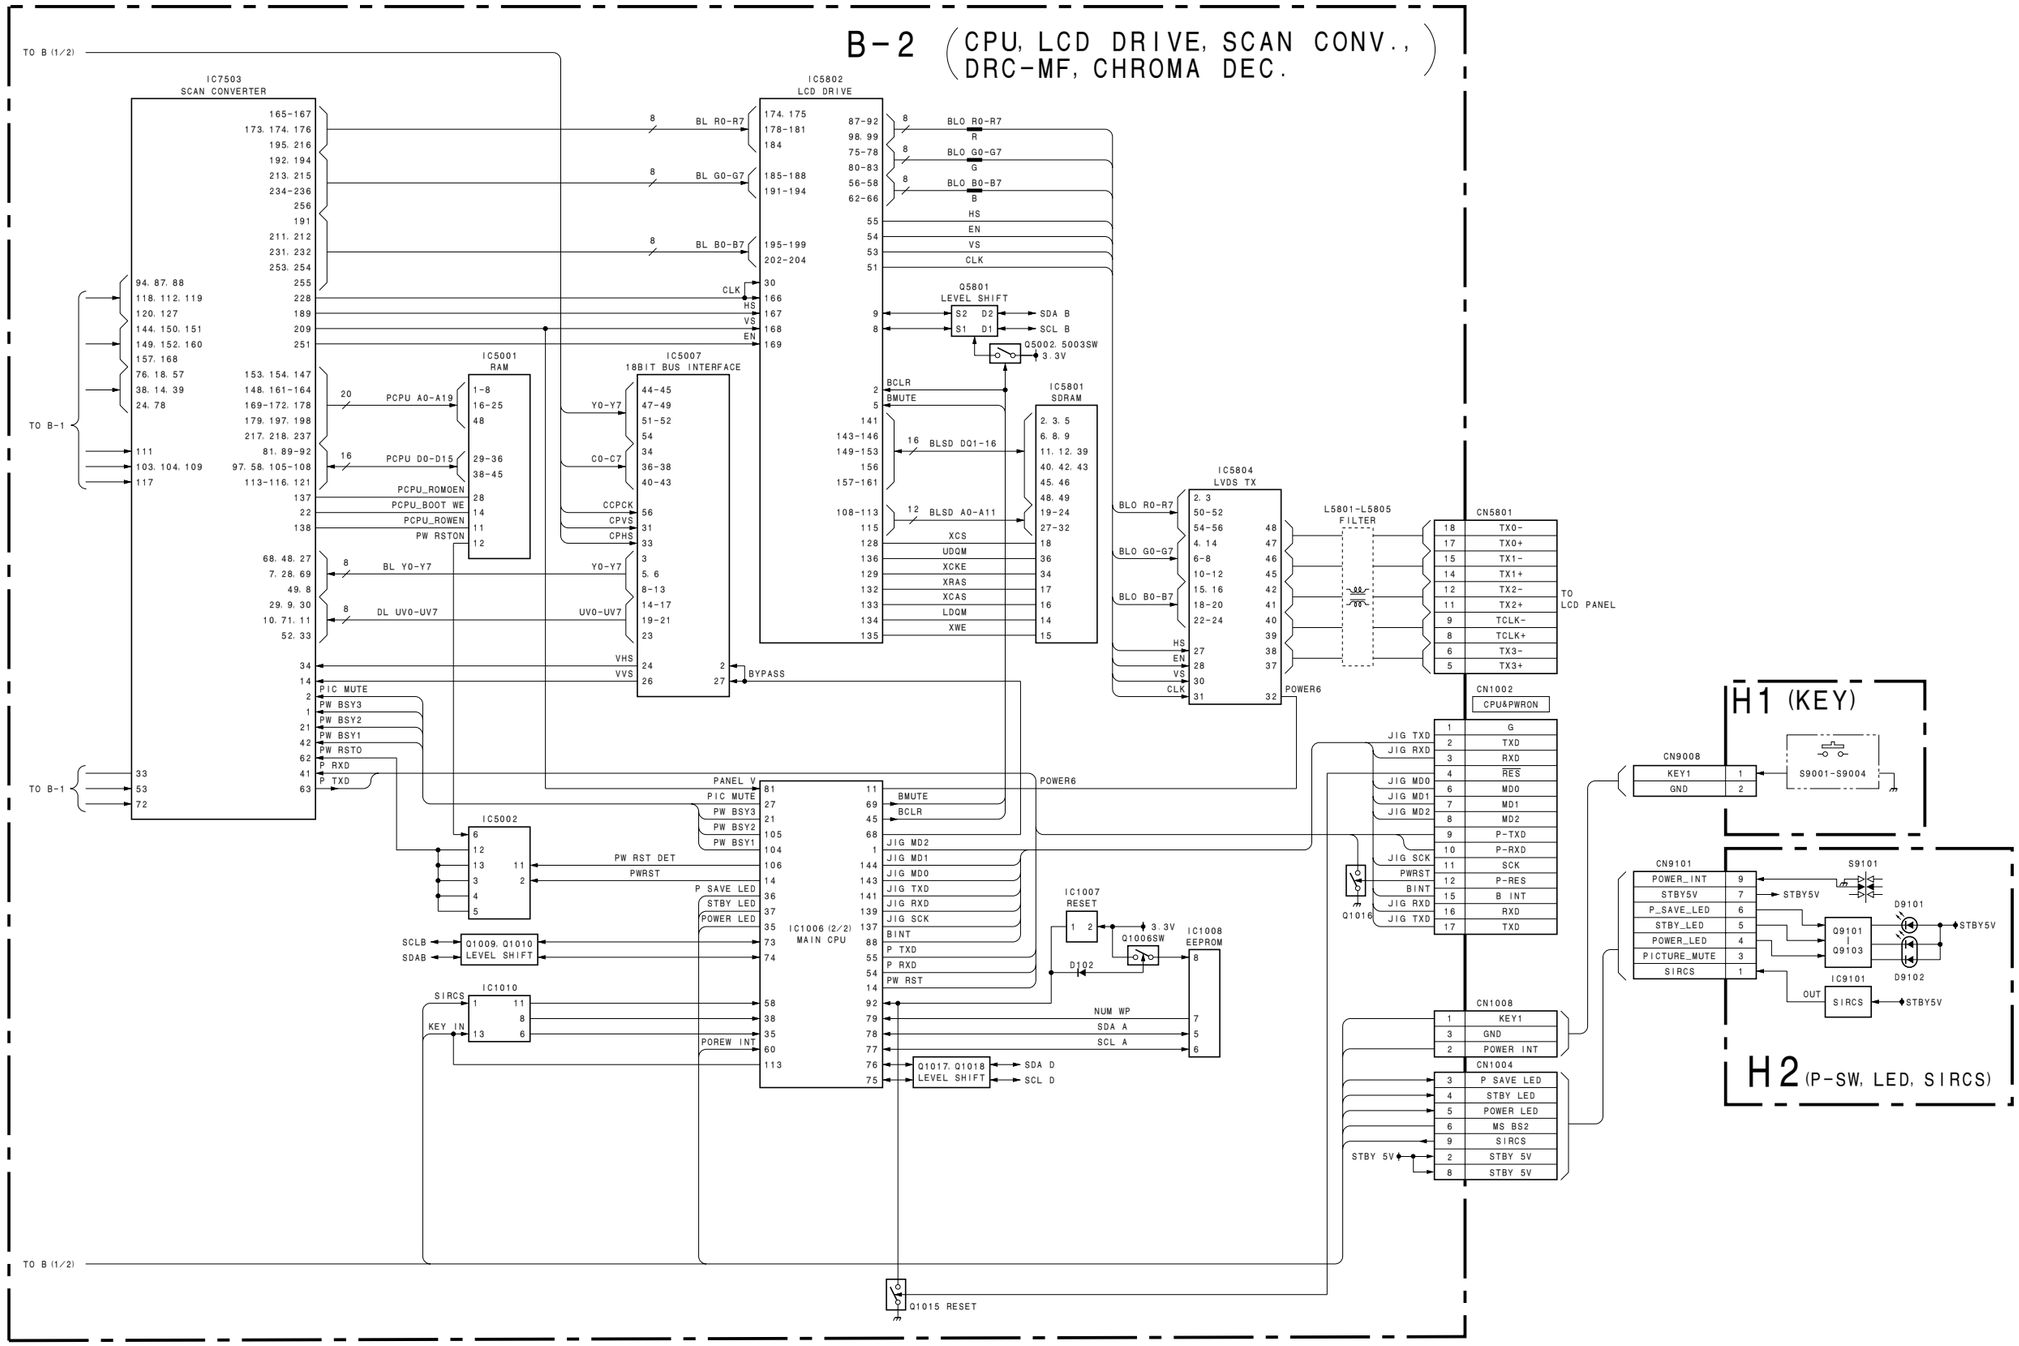

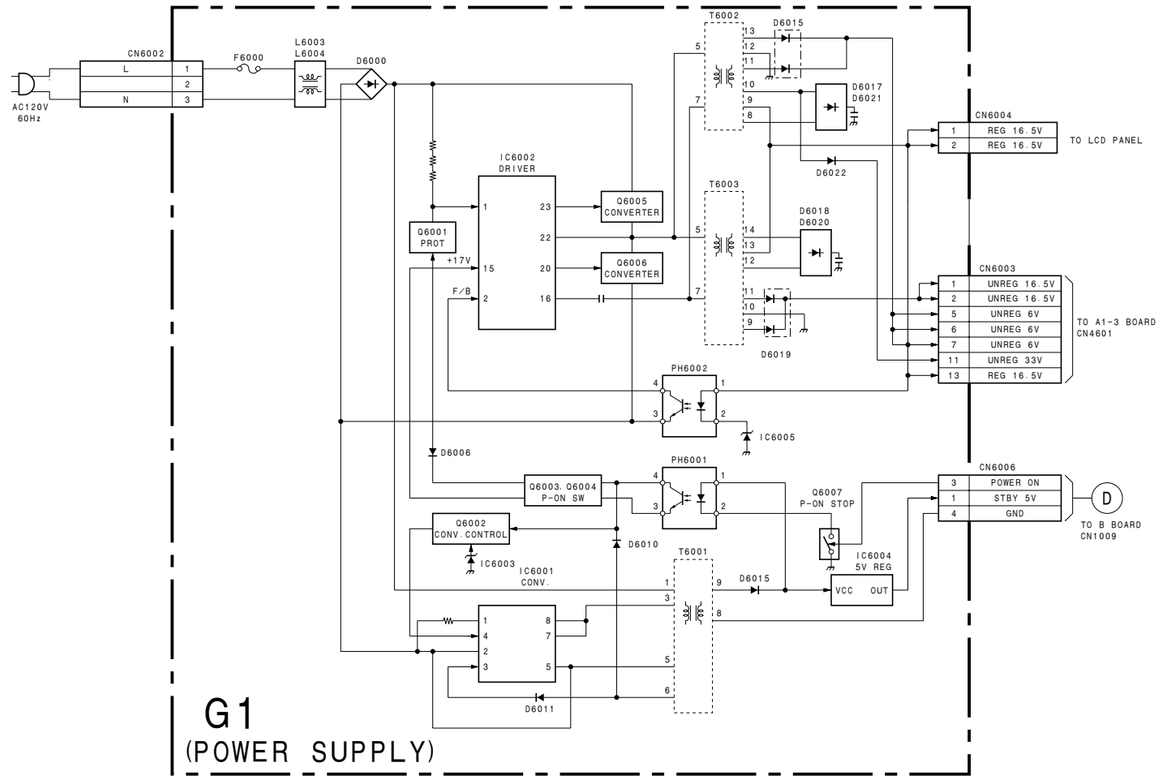
CN6002
L
N
1
2
3
AC120V
60Hz
F6000
L6003
L6004
D6000
T6002
D6015
D6017
D6021
D6022
CN6004
REG 16.5V
REG 16.5V
TO LCD PANEL
IC6002
DRIVER
Q6005
CONVERTER
Q6006
CONVERTER
Q6001
PROT
+17V
F/B
T6003
D6018
D6020
D6019
CN6003
UNREG 16.5V
UNREG 16.5V
UNREG 6V
UNREG 6V
UNREG 6V
UNREG 33V
REG 16.5V
TO A1-3 BOARD
CN4601
PH6002
IC6005
D6006
PH6001
Q6003, Q6004
P-ON SW
Q6007
P-ON STOP
CN6006
POWER ON
STBY 5V
GND
TO B BOARD
CN1009
Q6002
CONV. CONTROL
IC6003
IC6001
CONV.
D6010
T6001
IC6004
5V REG
VCC
OUT
D6015
D6011
G1
(POWER SUPPLY)

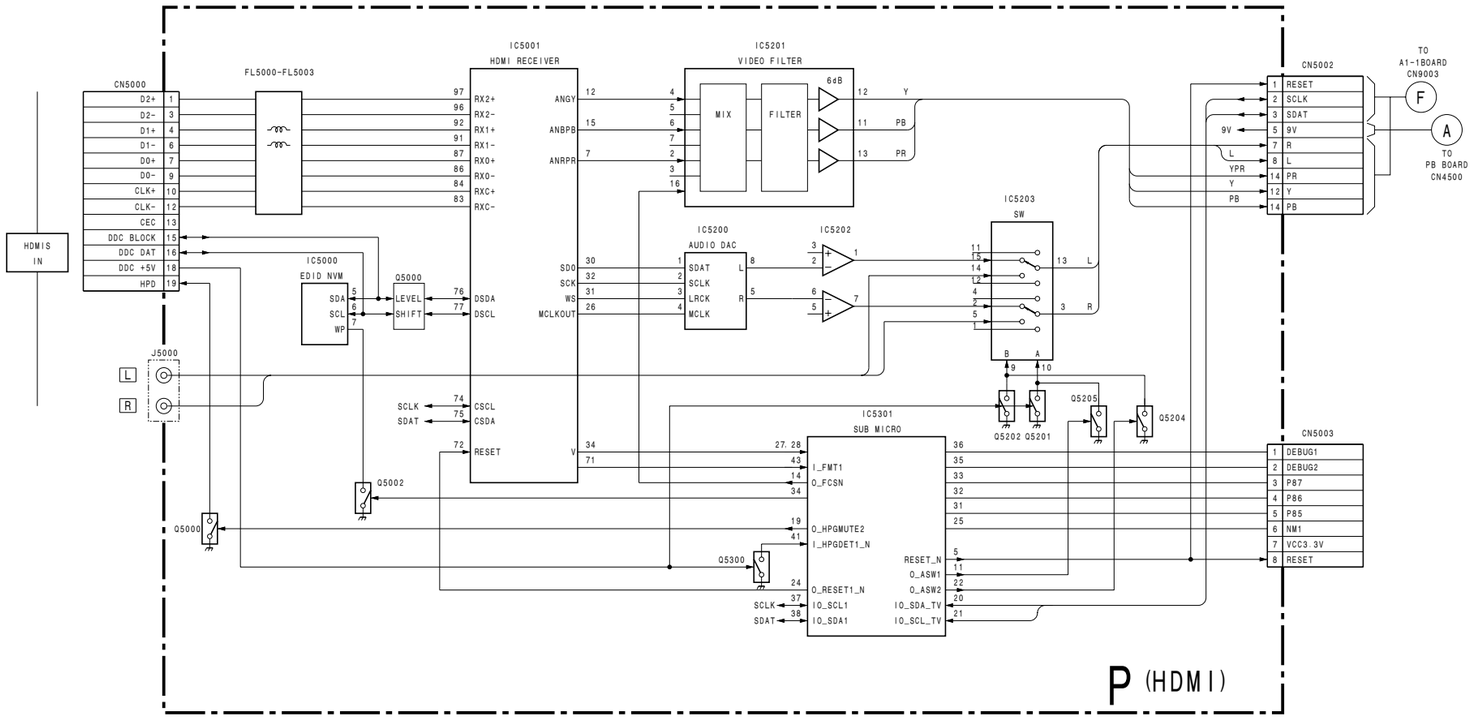
HDMI S IN
CN5000
D2+ 1
D2- 3
D1+ 4
D1- 6
D0+ 7
D0- 9
CLK+ 10
CLK- 12
CEC 13
DDC BLOCK 15
DDC DAT 16
DDC +5V 18
HPD 19
FL5000-FL5003
IC5001
HDMI RECEIVER
97 RX2+
96 RX2-
92 RX1+
91 RX1-
87 RX0+
86 RX0-
84 RXC+
83 RXC-
ANGY 12
ANBPB 15
ANRPR 7
IC5201
VIDEO FILTER
MIX
FILTER
6dB
12 Y
11 PB
13 PR
IC5000
EDID NVM
SDA 5
SCL 6
WP 7
Q5000
LEVEL SHIFT
76 DSDA
77 DSCL
IC5200
AUDIO DAC
SDO 30
SCK 32
WS 31
MCLKOUT 26
SDAT 1
SCLK 2
LRCK 3
MCLK 4
L 8
R 5
IC5202
IC5203
SW
13 L
3 R
B 9
A 10
J5000
L
R
SCLK 74
SDAT 75
CSCL
CSDA
72 RESET
V 34
71
Q5002
Q5000
Q5300
IC5301
SUB MICRO
27, 28
43 I_FMT1
14 O_FCSN
34
19 O_HPGMUTE2
41 I_HPGDET1_N
24 O_RESET1_N
37 IO_SCL1
38 IO_SDA1
36
35
33
32
31
25
5 RESET_N
11 O_ASW1
22 O_ASW2
20 IO_SDA_TV
21 IO_SCL_TV
Q5202 Q5201
Q5205
Q5204
CN5002
1 RESET
2 SCLK
3 SDAT
5 9V
7 R
8 L
14 PR
12 Y
14 PB
9V
L
YPR
Y
PB
TO A1-1BOARD CN9003
F
A
TO PB BOARD CN4500
CN5003
1 DEBUG1
2 DEBUG2
3 P87
4 P86
5 P85
6 NM1
7 VCC3.3V
8 RESET
P (HDMI)

3-2. FRAME DIAGRAMS

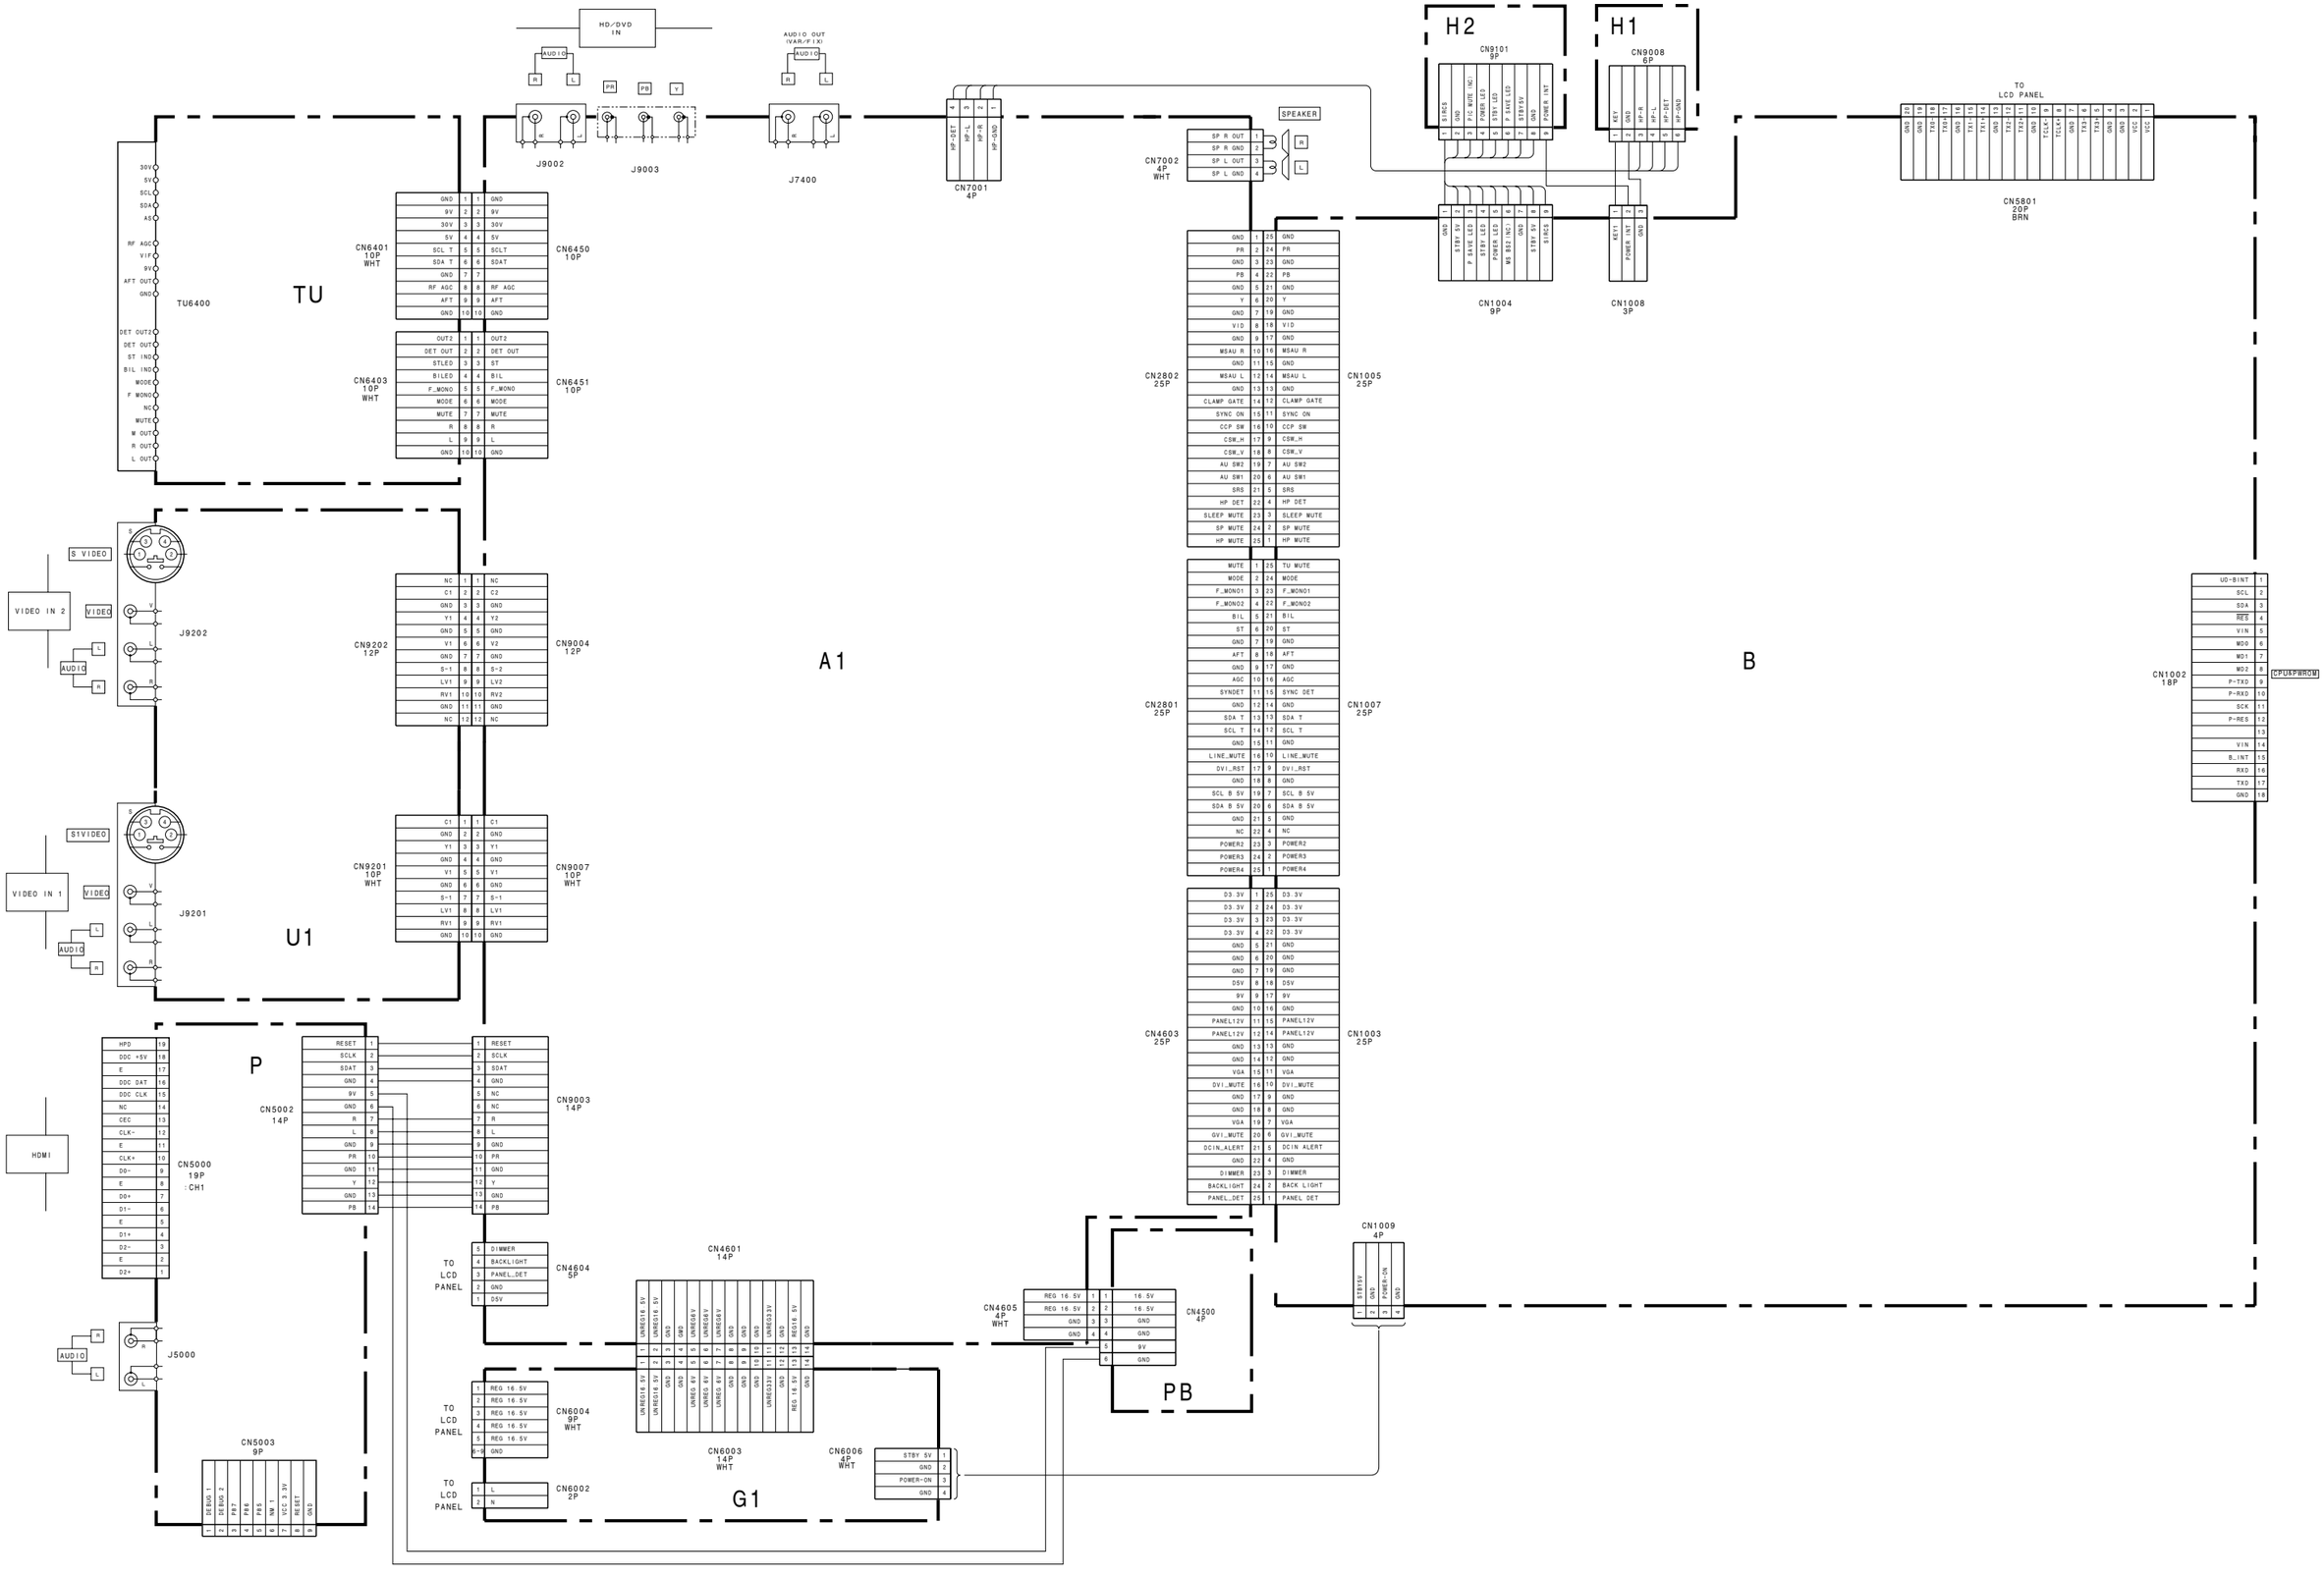

3-3. CIRCUIT BOARDS LOCATION

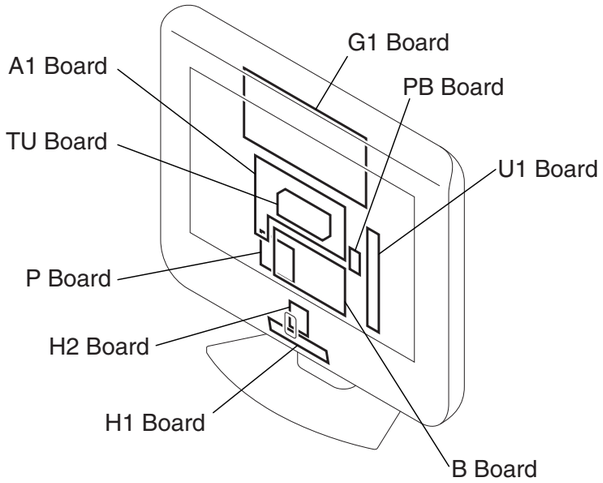

3-4. SCHEMATIC DIAGRAMS AND PRINTED WIRING BOARDS

Note:

- All capacitors are in µF unless otherwise noted. (pF: µµF)
  Capacitors without voltage indication are all 50 V.
- Indication of resistance, which does not have one for rating electrical power, is as follows.

  Pitch: 5 mm

  Rating electrical power 1/4 W (CHIP : 1/10 W)

- All resistors are in ohms.
- : nonflammable resistor.
- : fusible resistor.
- △ : internal component.
- : panel designation, and adjustment for repair.
- All variable and adjustable resistors have characteristic curve B, unless otherwise noted.
- ⊥ : earth-ground.
- : earth-chassis.
- When replacing the part in below table, be sure to perform the related adjustment.
- All voltages are in V.
- Readings are taken with a 10 M digital multimeter.
- Readings are taken with a color-bar signal input.
- Voltage variations may be noted due to normal production tolerances.
- ✻ : Can not be measured.
- Circled numbers are waveform references.
- : B + bus.
- : B – bus.
- ⇨ : Signal path.

Note: The components identified by shading and mark ⚠ are critical for safety. Replace only with part number specified.

Note: Les composants identifiés par un tramé et une marque ⚠ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

Terminal name of semiconductors in silk screen printed circuit (✻)

	Device	Printed symbol	Terminal name	Circuit
①	Transistor	T	Collector / Base Emitter	
②	Transistor	—	Collector / Base Emitter	
③	Diode		Cathode / Anode	
④	Diode	T	Cathode / Anode (NC)	
⑤	Diode	—	Cathode / Anode (NC)	
⑥	Diode	T	Common / Anode Cathode	
⑦	Diode	—	Common / Anode Cathode	
⑧	Diode	T	Common / Anode Anode	
⑨	Diode	—	Common / Anode Anode	
⑩	Diode	T	Common / Cathode Cathode	
⑪	Diode	—	Common / Cathode Cathode	
⑫	Diode	∣	Anode Anode Cathode / Cathode Anode Anode	
⑬	Transistor (FET)	∣	Drain / Source Gate	
⑭	Transistor (FET)	⊢	Drain / Source Gate	
⑮	Transistor (FET)	∣	□ Source □ Drain □ Gate	
⑯	Transistor	∣	□ Emitter □ Collector □ Base	
⑰	Transistor	⫴	C2 B1 E1 / E2 B2 C1	
⑱	Transistor	⫴	C1 B2 E2 / E1 B1 C2	
⑲	Transistor	—	C1 B2 E2 / E1 B1 C2	
⑳	Transistor	—	C1 B2 E2 / E1 B1 C2	
㉑	Transistor	—	E2 B1 E1 / C2 C1(B2)	
㉒	Transistor	—	(B2) / B1 E1 E2 / C1 C2	
㉓	Transistor	—	(B2) / E2 E1 B1 / C2 C1	
–	Discrete semiconductot			

(Chip semiconductors that are not actually used are included.)

Ver.1.6

(1) Schematic Diagrams of A1 Board

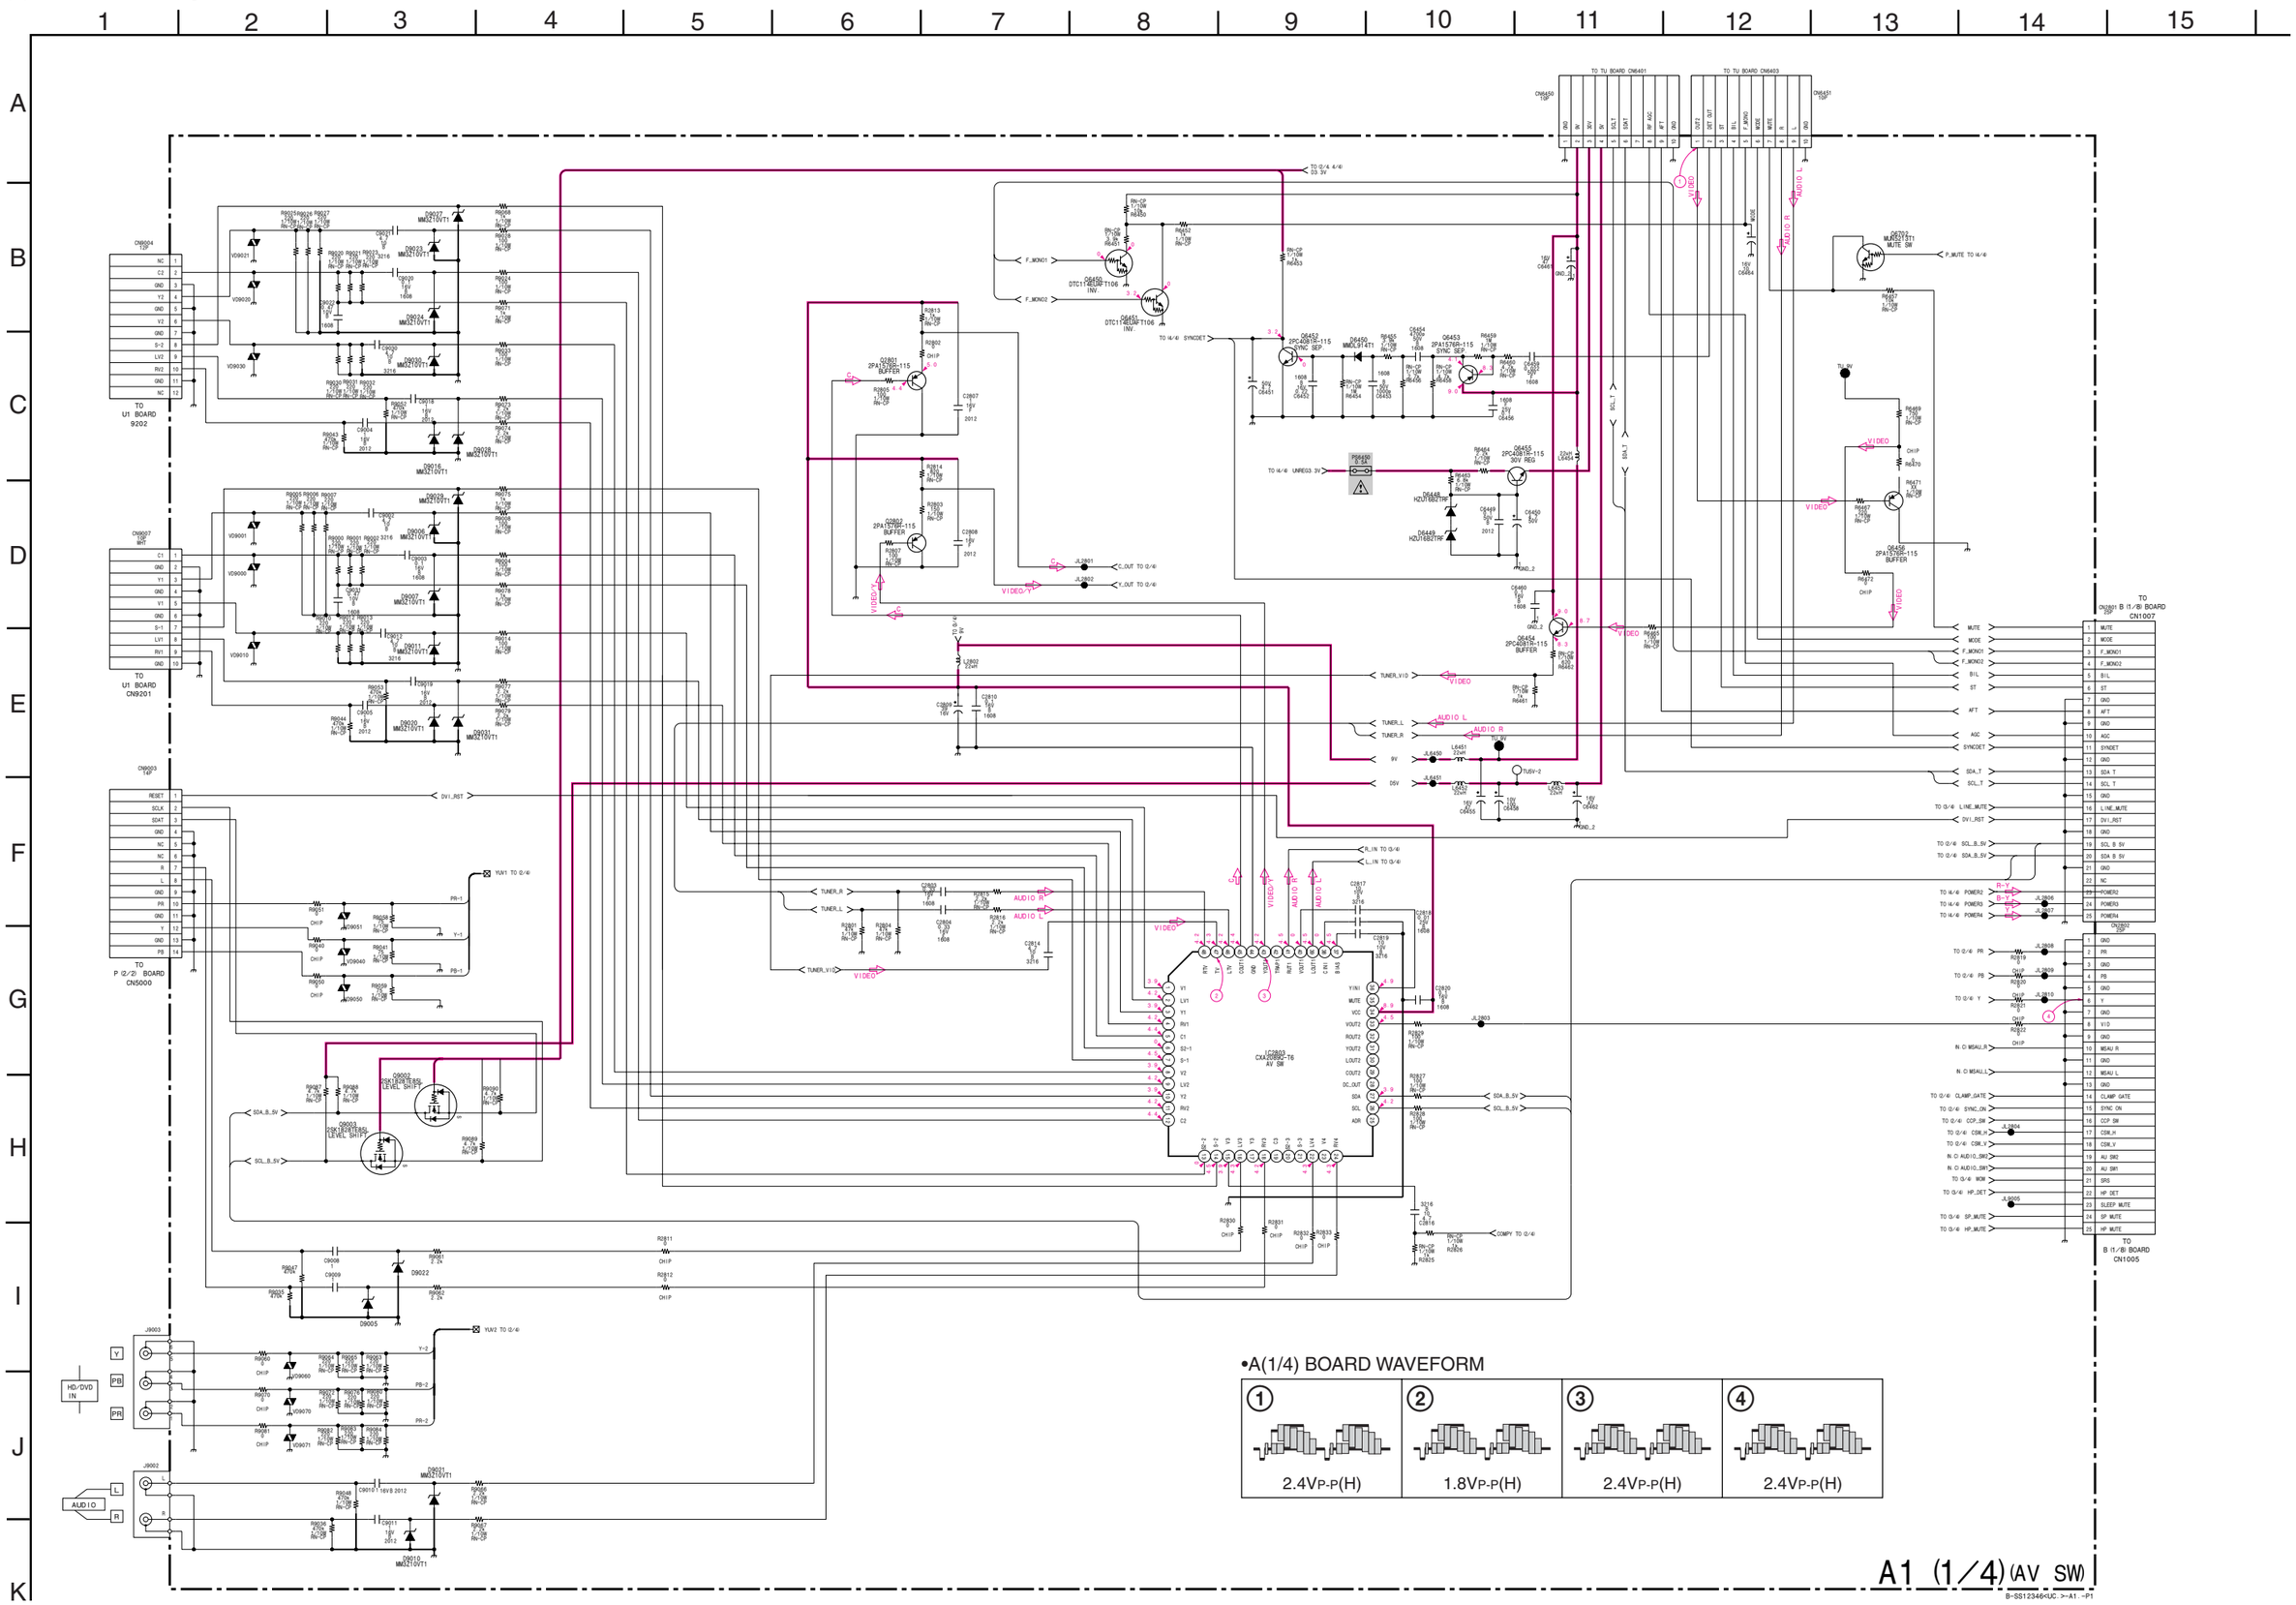

•A(2/4) BOARD WAVEFORM

① 160mVP-P(4MHz)

② 2.4VP-P(H)

③ 2.1VP-P(H)

A1 (2/4) (VIDEO SW)

B-SS12346<UC. >-A1. -P2

A1 (3/4)

(AUDIO CONTROL, AUDIO OUTPUT)

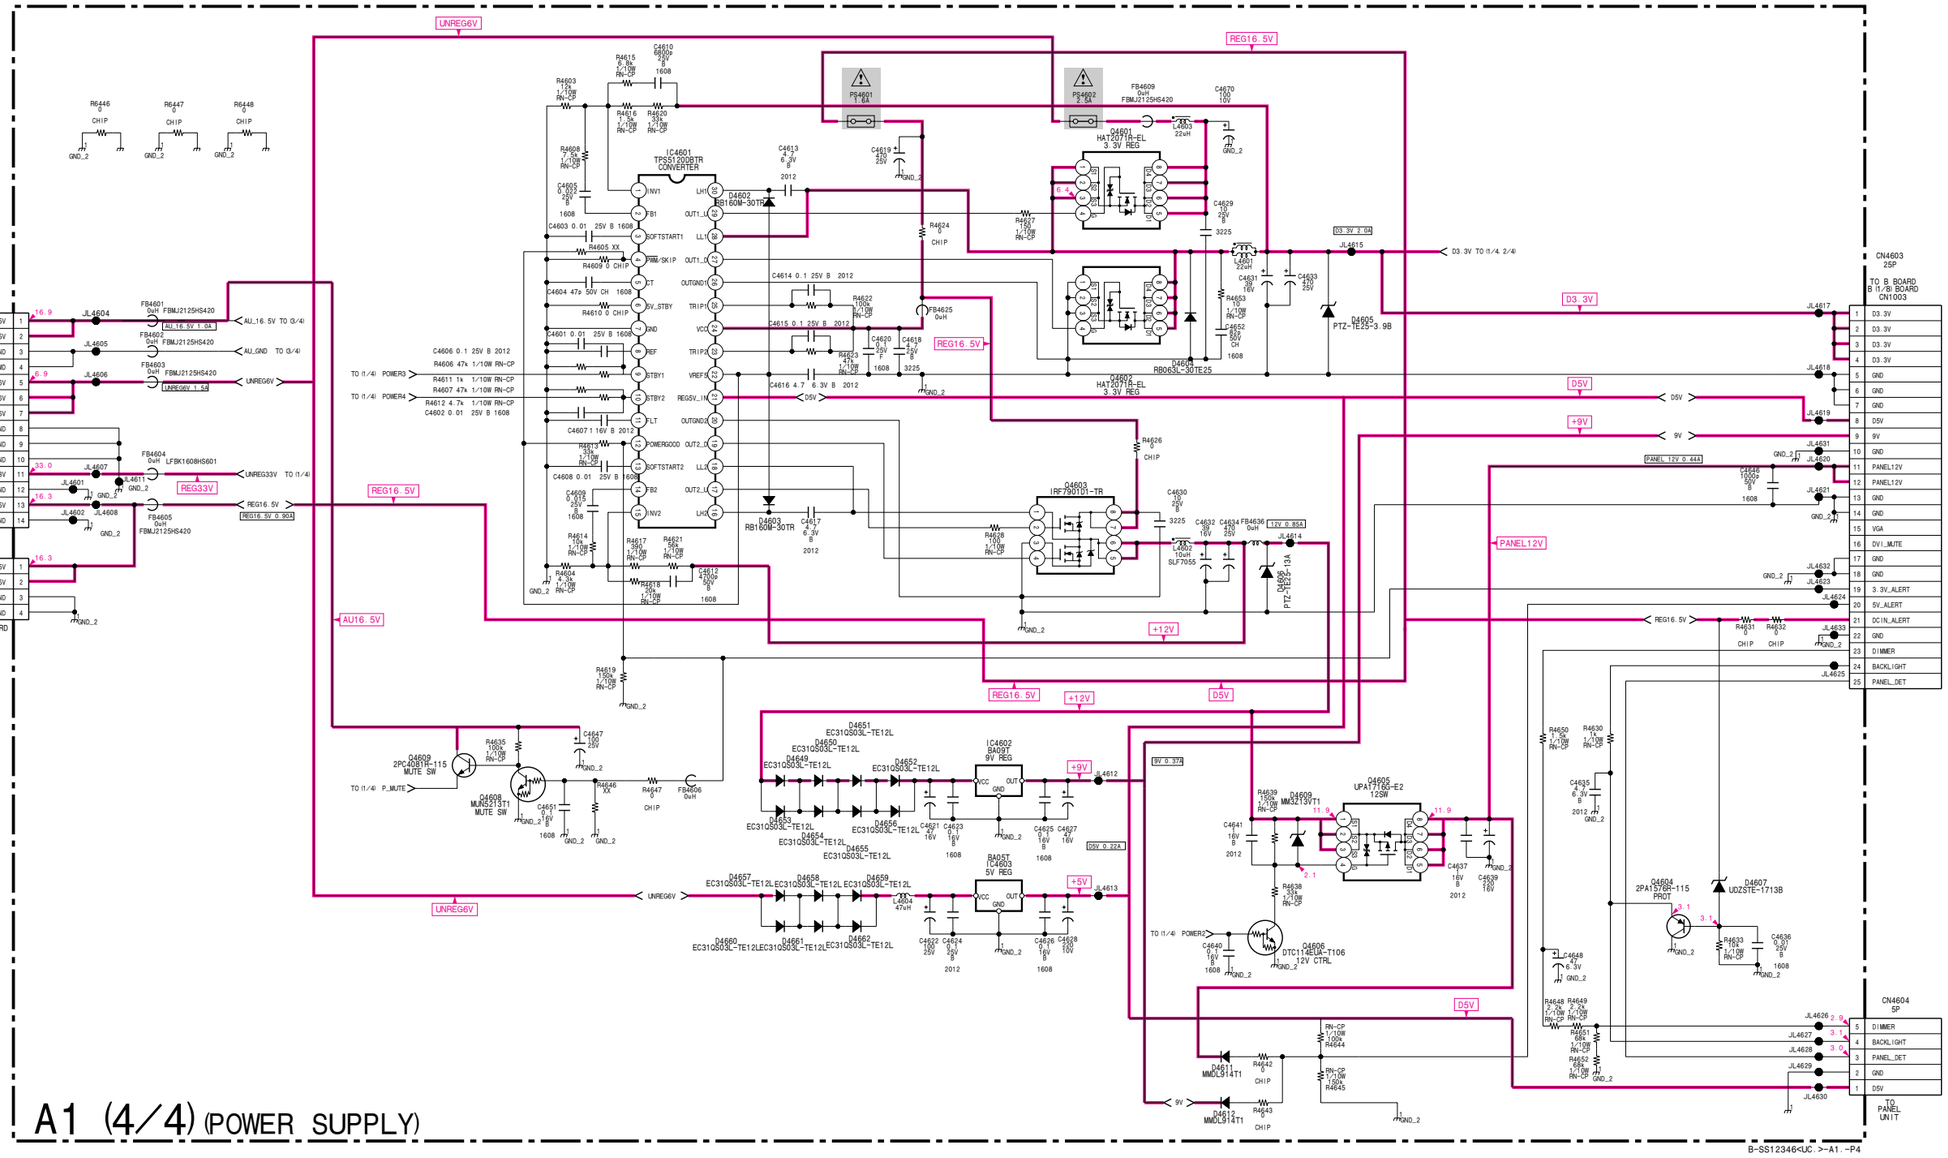
UNREG6V
REG16.5V
REG33V
AU16.5V
+12V
D5V
+9V
D3.3V
PANEL12V
CN4601 14P
TO G1 BOARD CN6003
CN4605 4P
TO PB BOARD CN4500
IC4601 TPS5120DBTR CONVERTER
IC4602 BA09T 9V REG
IC4603 BA05T 5V REG
Q4601 HAT2071R-EL 3.3V REG
Q4602 HAT2071R-EL 3.3V REG
Q4603 IRF7901D1-TR
D4603 RB160M-30TR
D4605 PTZ-TE25-3.9B
D4606 RB063L-30TE25
D4609 MM3213VT1
D4610 PTZ-TE25-13A
Q4605 UPA1715G-E2 12SW
Q4606 DTC114EUA-T106 12V CTRL
Q4608 MUN5213T1 MUTE SW
Q4609 2PC4081R-115 MUTE SW
D4651 EC31QS03L-TE12L
D4652 EC31QS03L-TE12L
D4653 EC31QS03L-TE12L
D4654 EC31QS03L-TE12L
D4655 EC31QS03L-TE12L
D4656 EC31QS03L-TE12L
D4657 EC31QS03L-TE12L
D4658 EC31QS03L-TE12L
D4659 EC31QS03L-TE12L
D4660 EC31QS03L-TE12L
D4661 EC31QS03L-TE12L
D4662 EC31QS03L-TE12L
D4650 EC31QS03L-TE12L
D4611 MMDL914T1
D4612 MMDL914T1
PS4601 1.6A
PS4602 2.5A
CN4603 25P
TO B BOARD B (1)/B) BOARD CN1003
CN4604 5P
TO PANEL UNIT
A1 (4/4) (POWER SUPPLY)
B-SS12346<UC:>-A1.-P4

(2) Schematic Diagrams of B Board

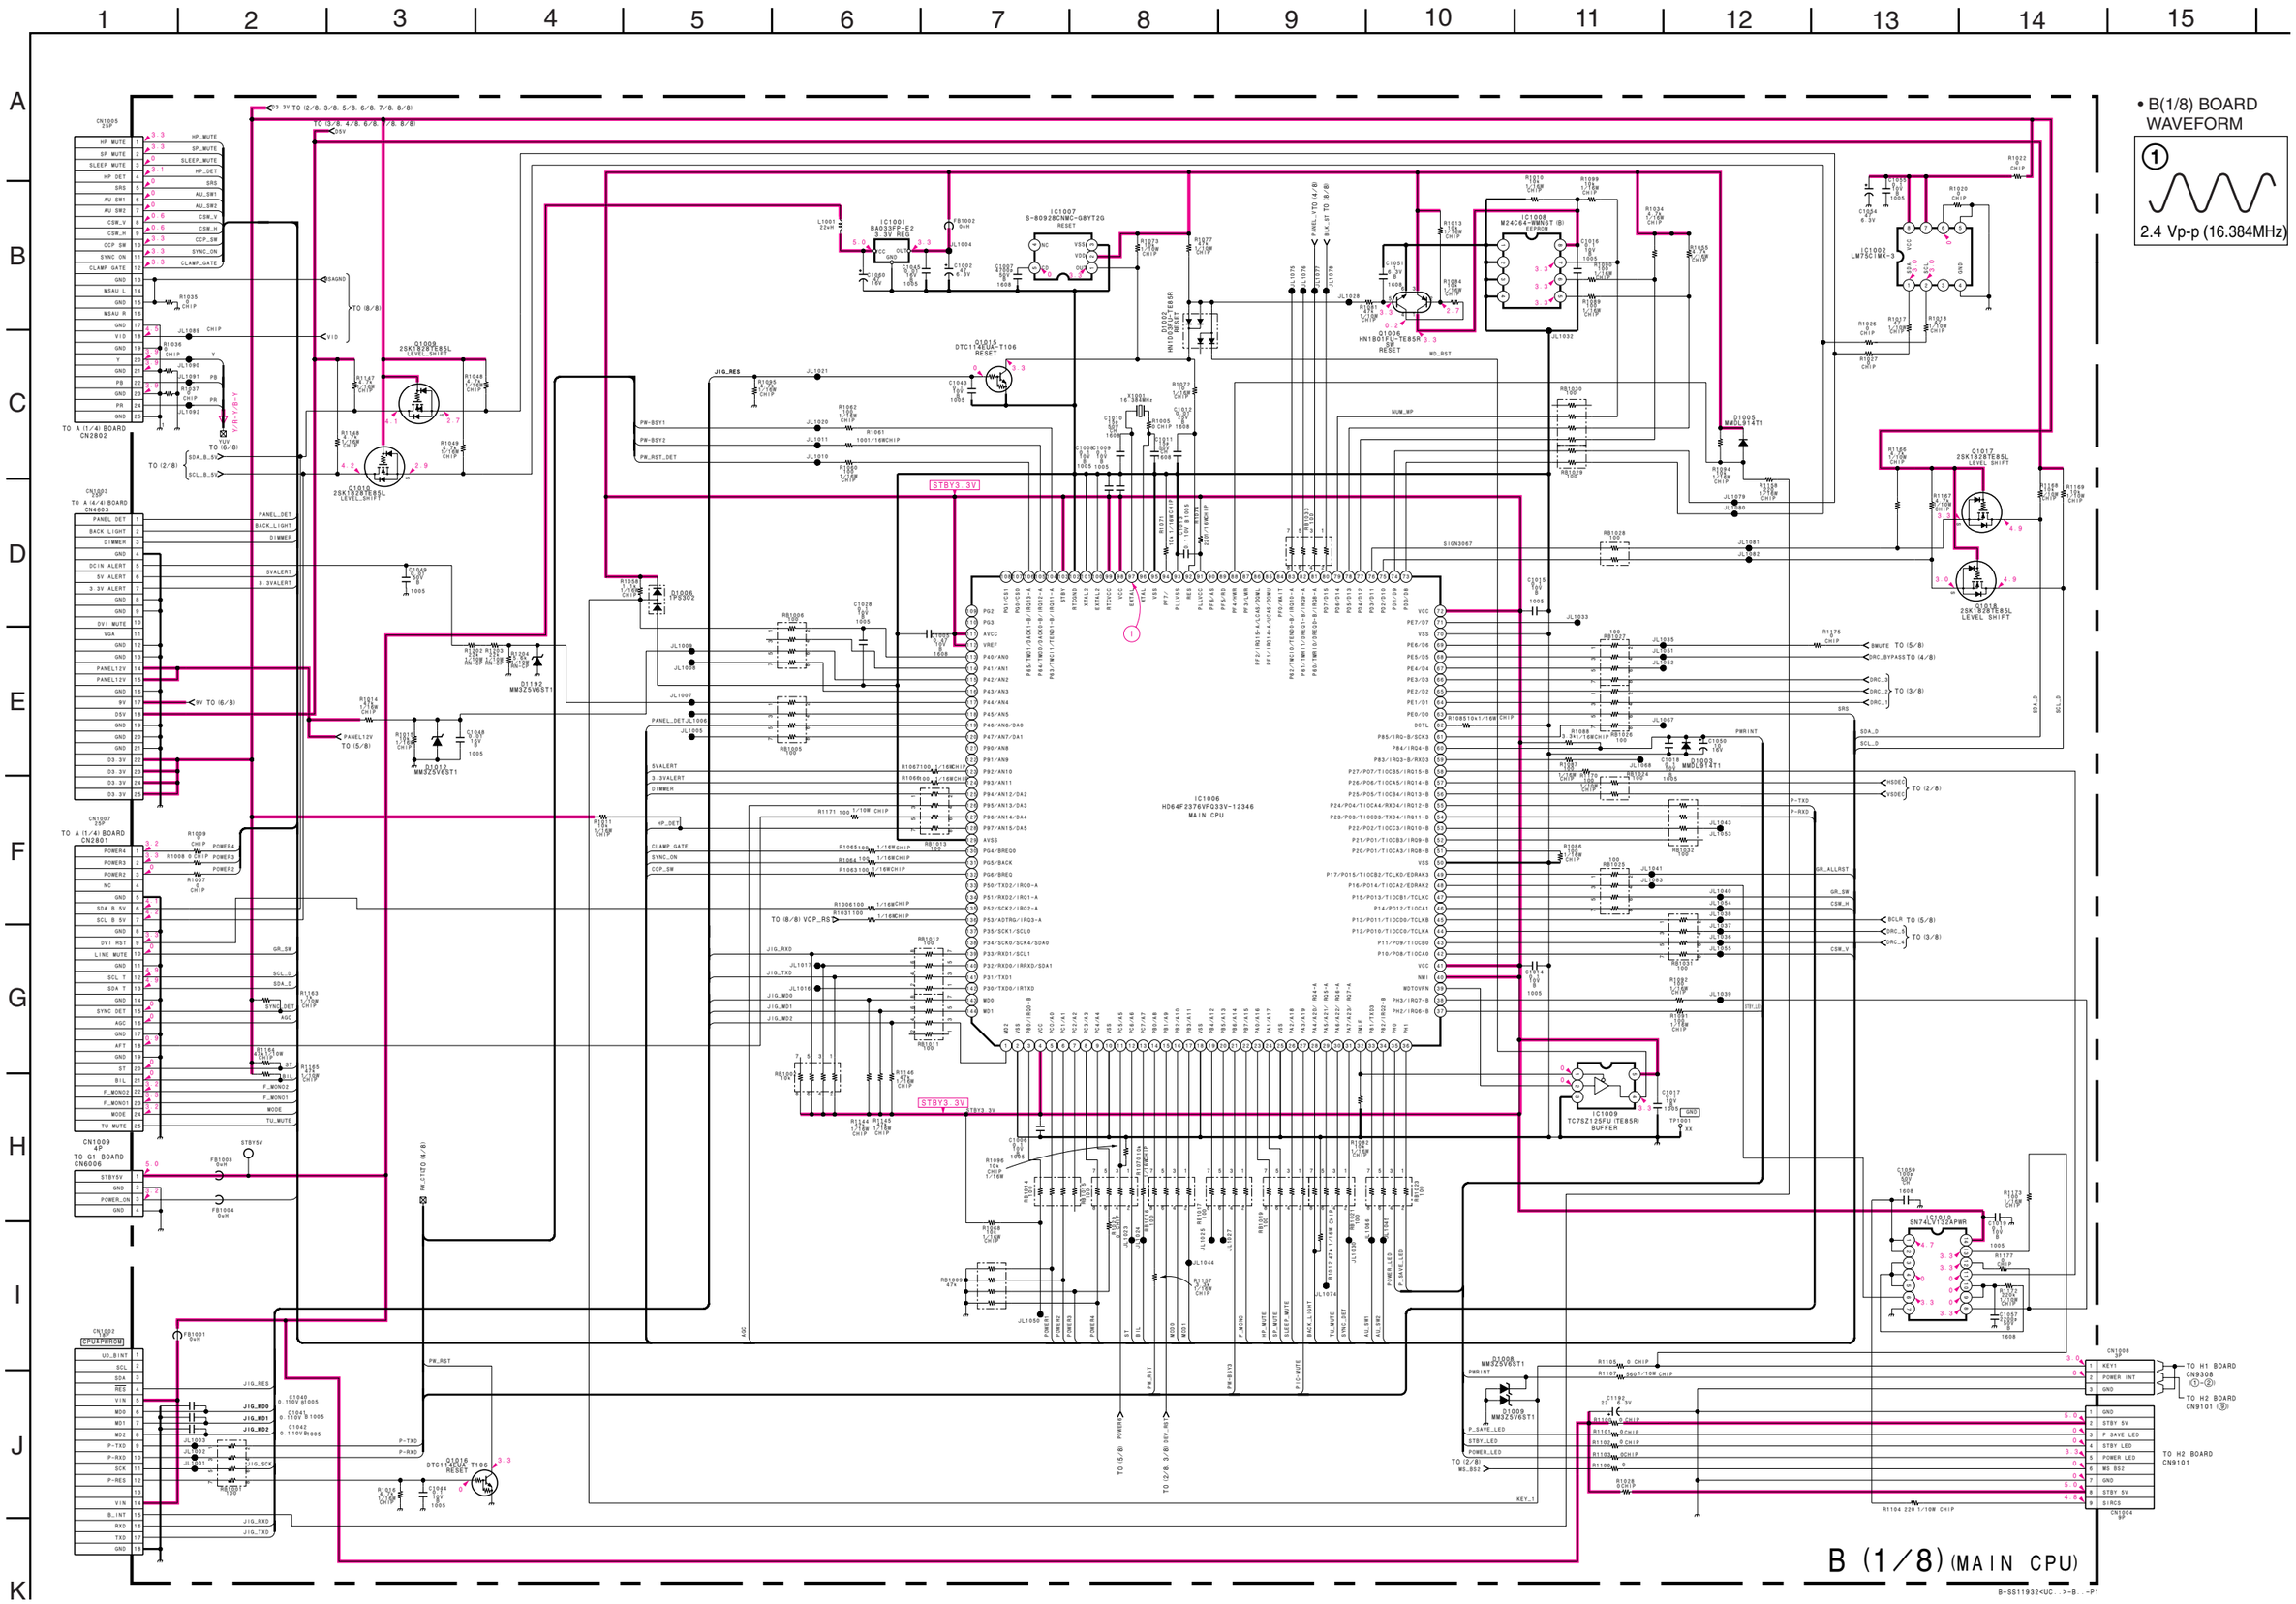

• B(2/8) BOARD WAVEFORMS

①	②
2.0 Vp-p (H)	4.0 Vp-p (79.9918MHz)

B (2/8)
(CHROMA DECODER/ 3D COMB FILTER/)

B-SS11932<UC..>-B..-P2

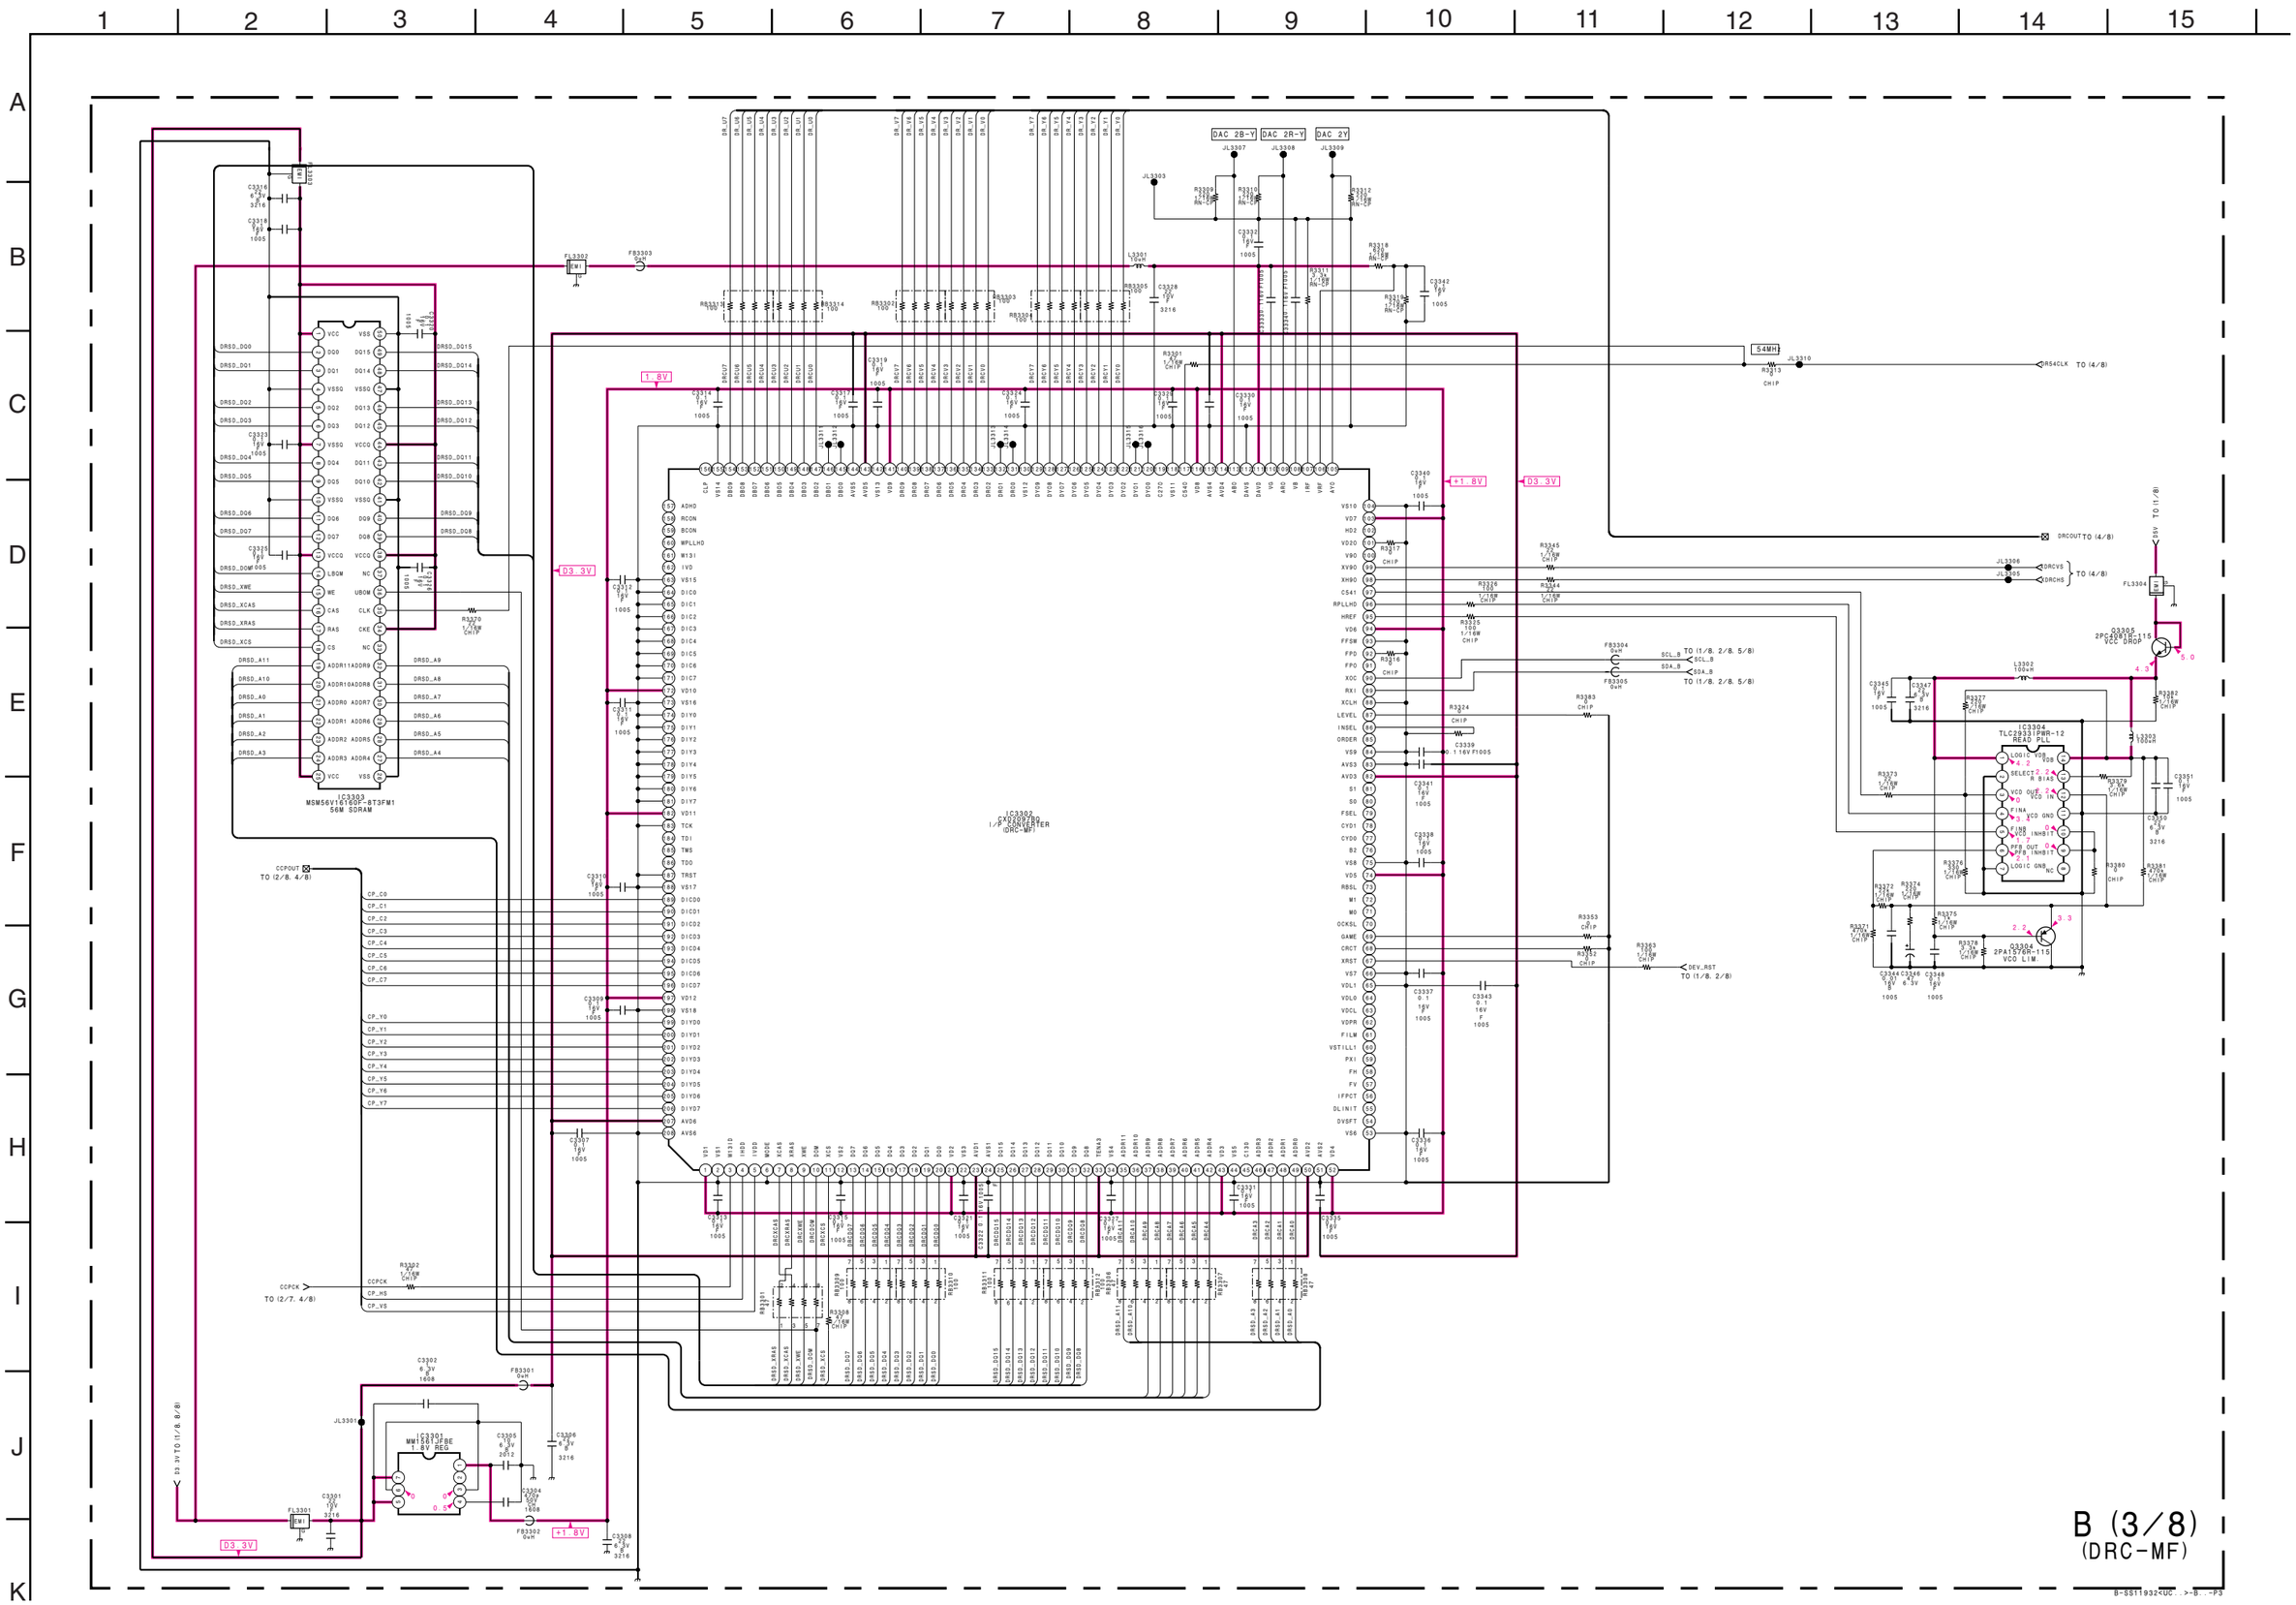
IC3302
CXD2097BQ
I/F CONVERTER
(DRC-MF)
IC3303
MSM56V16160F-8T3FM1
56M SDRAM
IC3304
TLC2933PWR-12
READ PLL
IC3301
MM1561JFBE
1.8V REG
Q3305
2PC4081R-115
VCC DROP
Q3303
2PA1576R-115
VCO LIM
1_8V
D3_3V
+1_8V
DAC_2B-Y
DAC_2R-Y
DAC_2Y
54MH
DRCOUT TO (4/8)
DRCVS
DRCHS
TO (4/8)
RS4CLK TO (4/8)
SCL_B
SDA_B
TO (1/8, 2/8, 5/8)
DEV_RST
TO (1/8, 2/8)
CCPOUT
TO (2/8, 4/8)
CCPCK
TO (2/7, 4/8)
D3_3V TO (1/8, 8/8)
B (3/8)
(DRC-MF)
B-SS11932<UC..>-B..-P3

• B(4/8) BOARD WAVEFORM

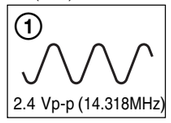

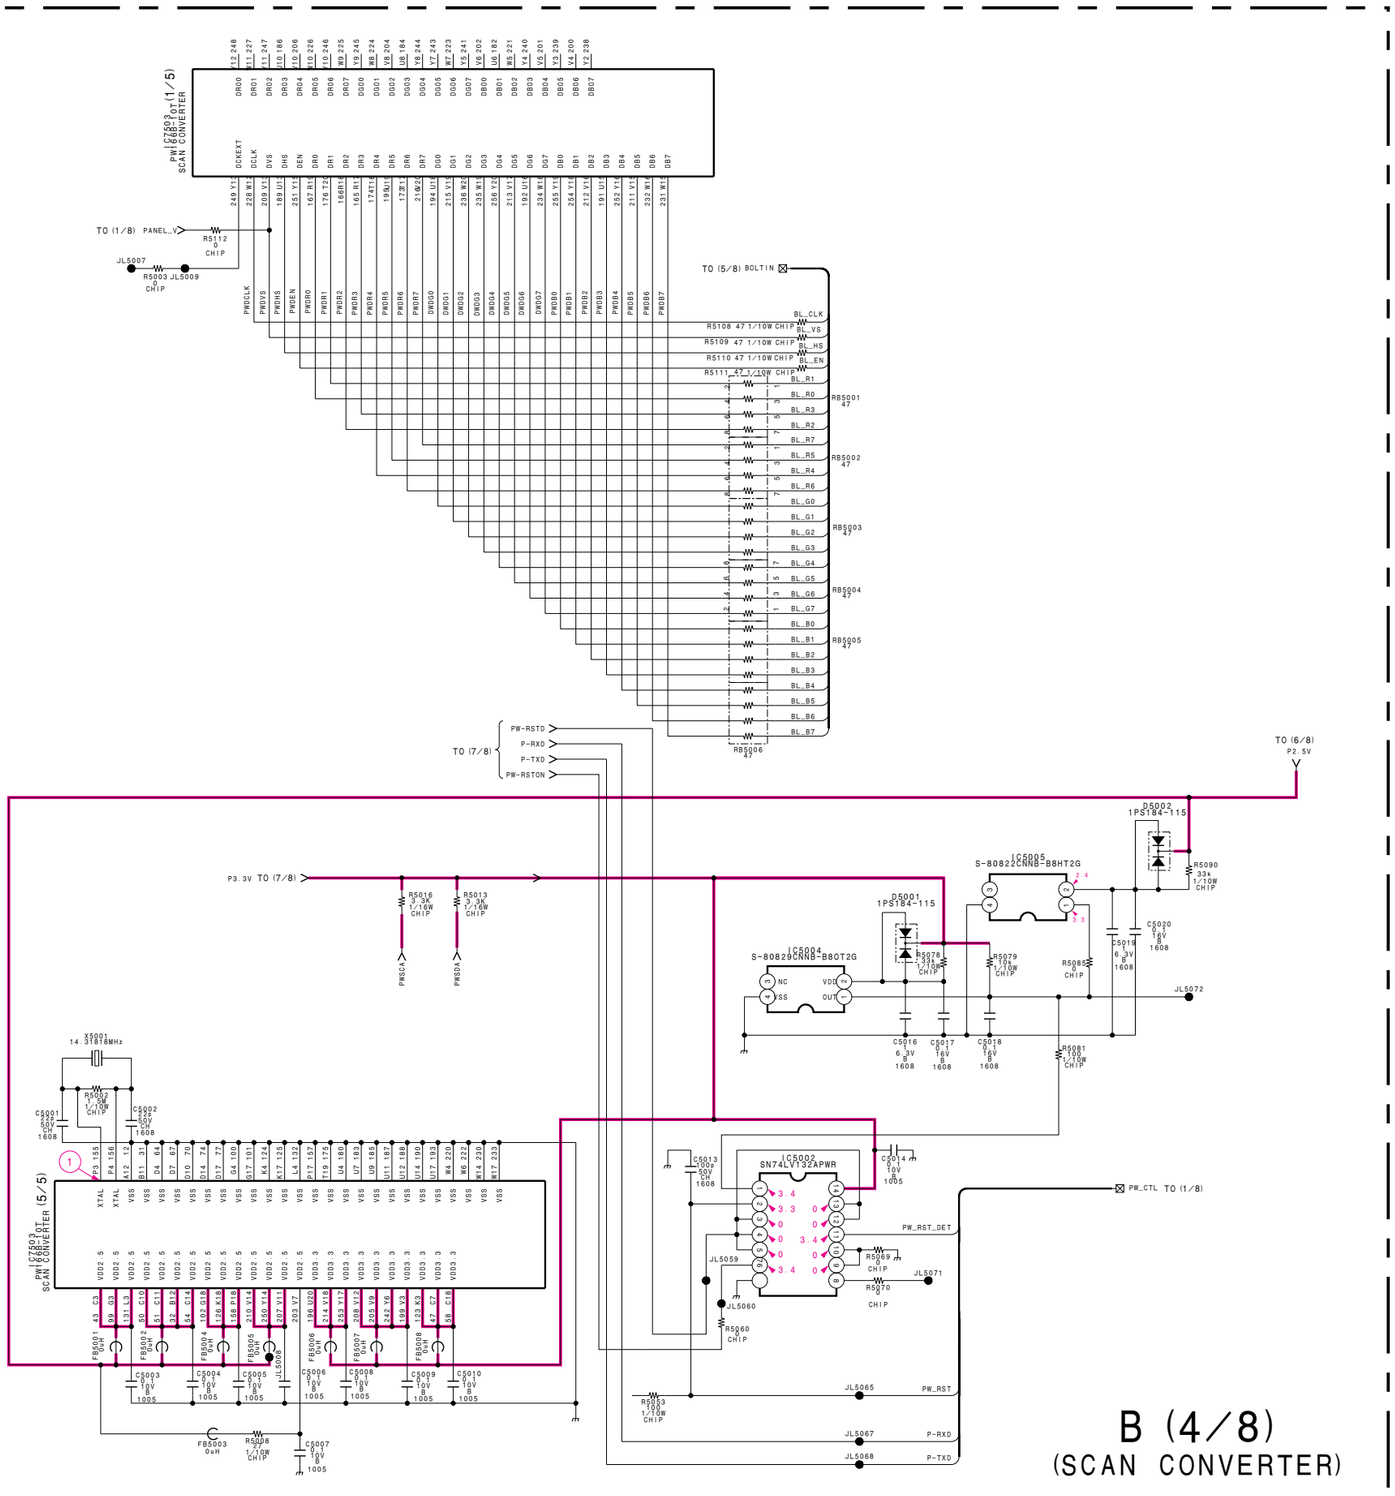

B (4/8)
(SCAN CONVERTER)

B-SS11932<UC..>-B..-P4

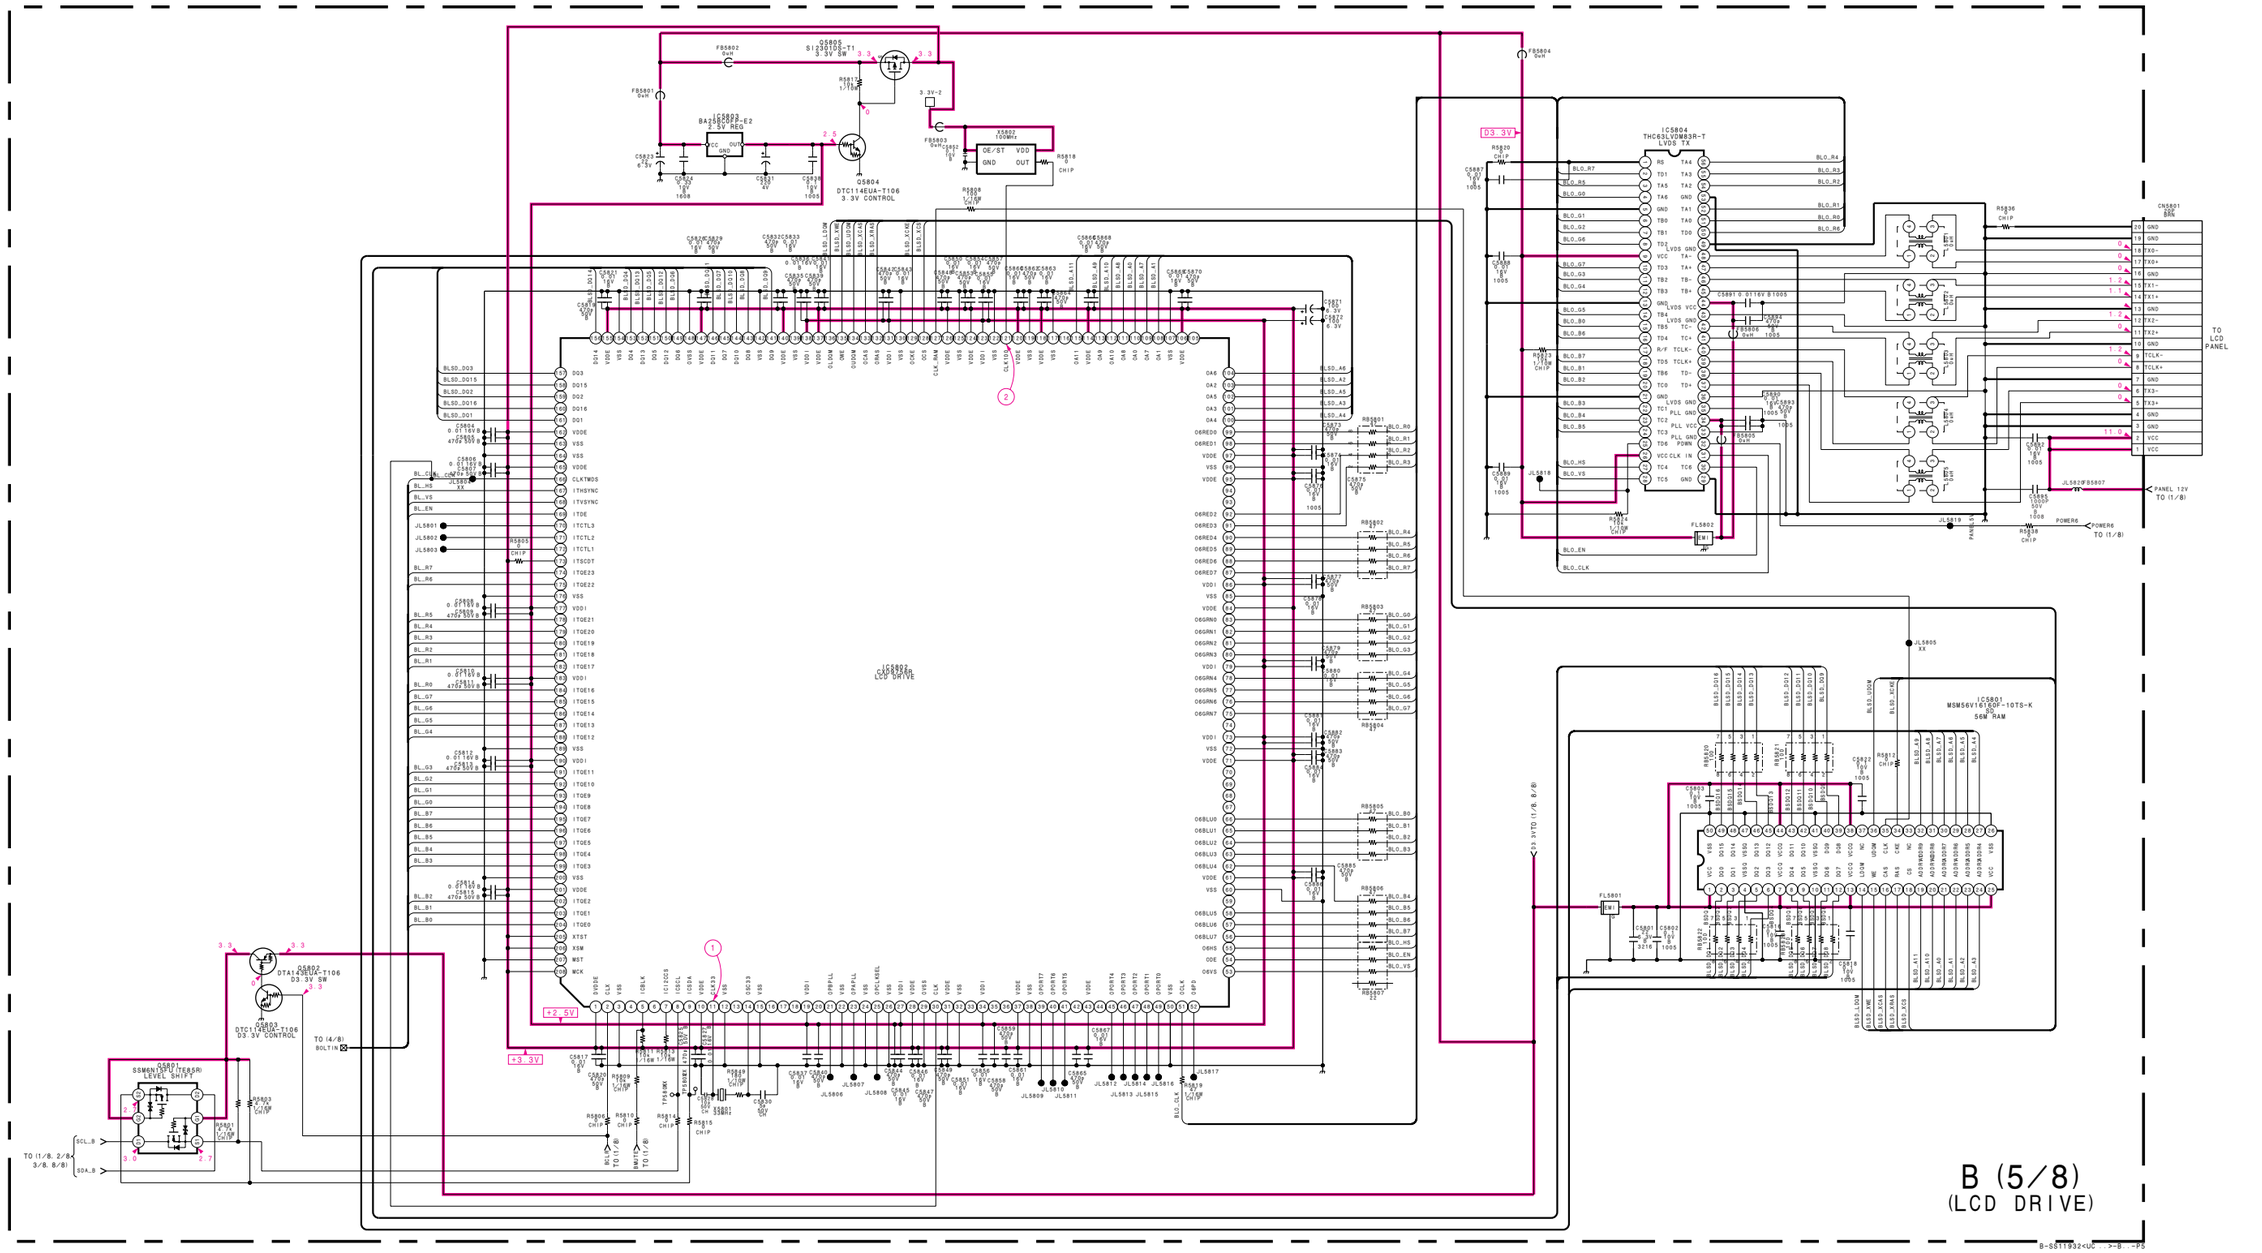

• B(5/8) BOARD WAVEFORMS

①	②
0.2 Vp-p(33MHz)	0.6 Vp-p(100MHz)

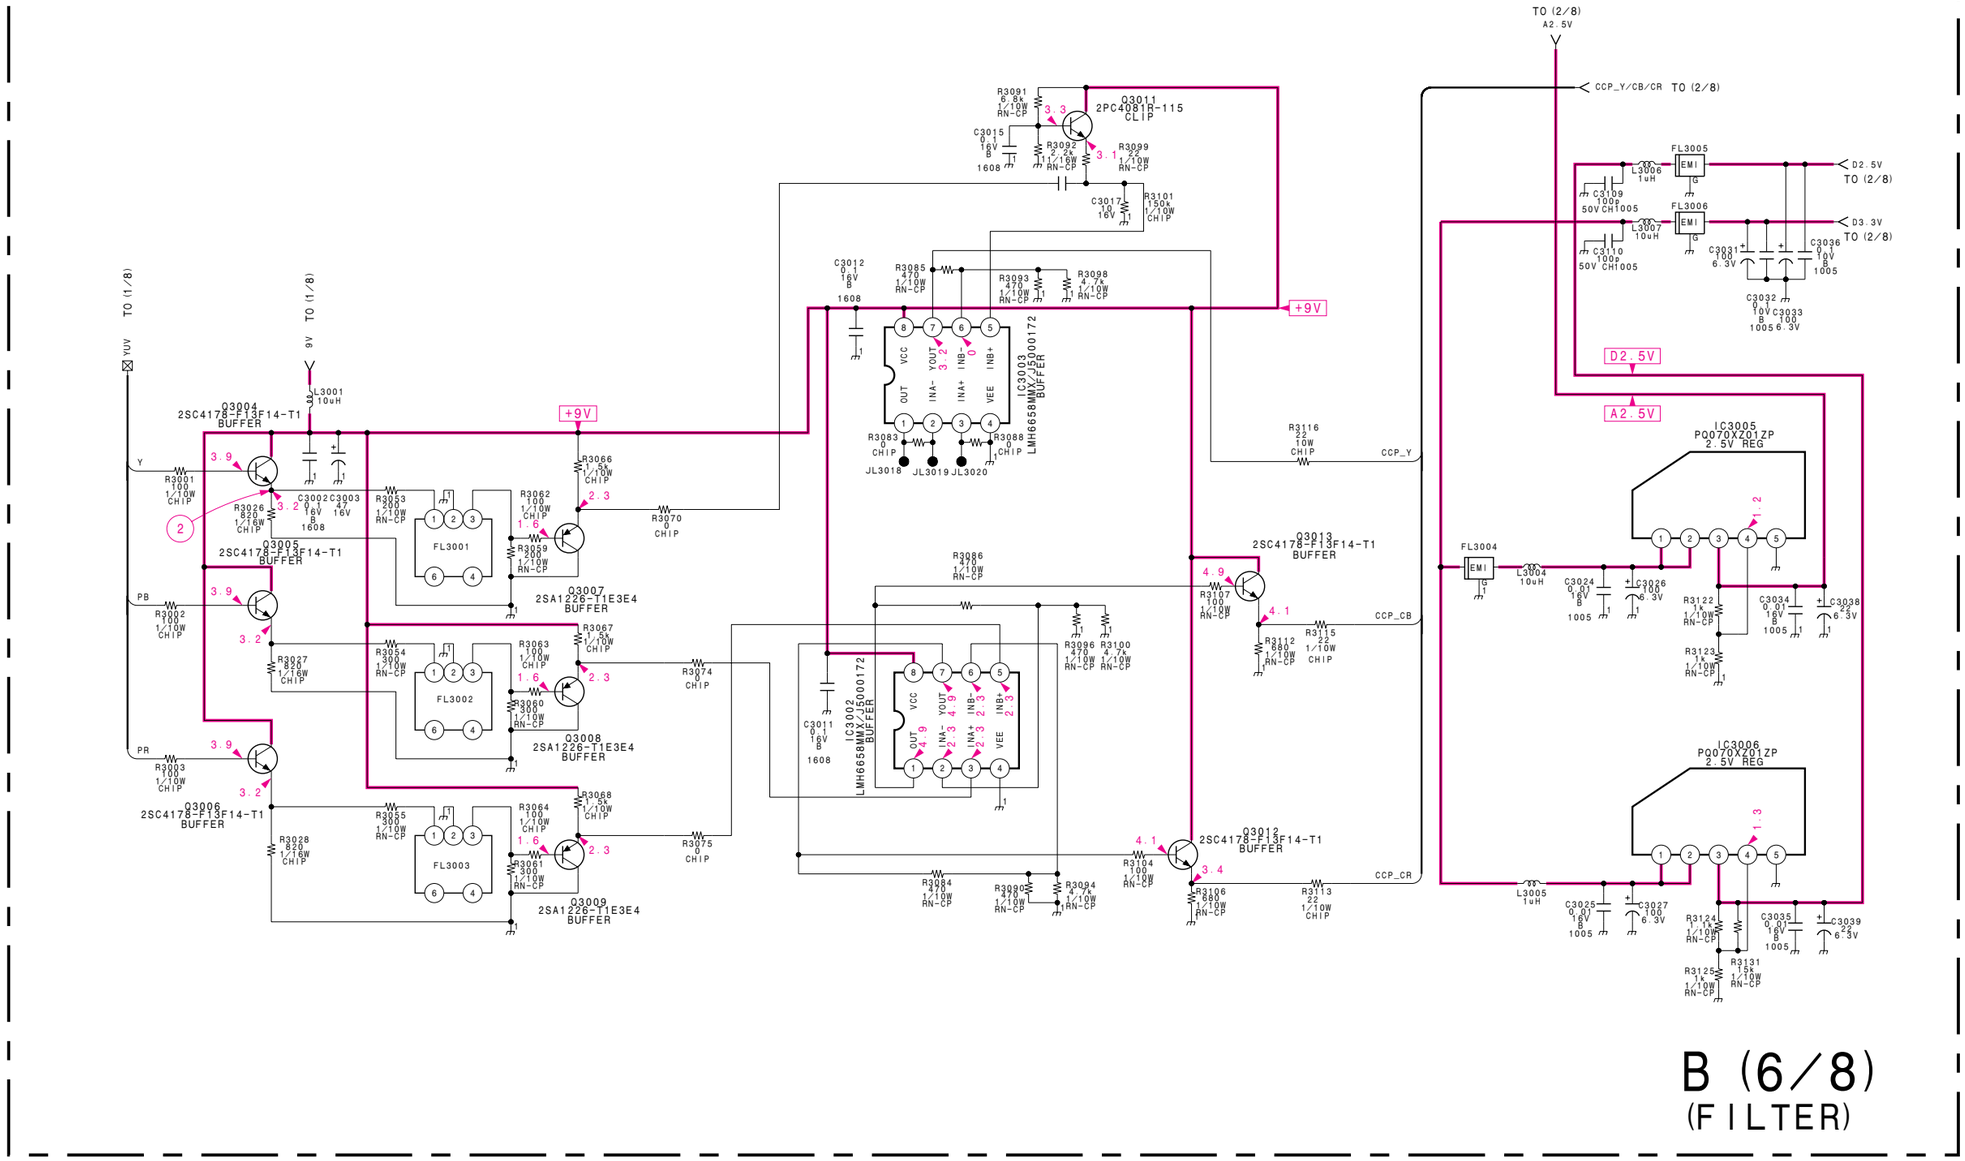

B-SS11932<UC..>-B..-P6

B (7/8)
(SCAN CONVERTER)

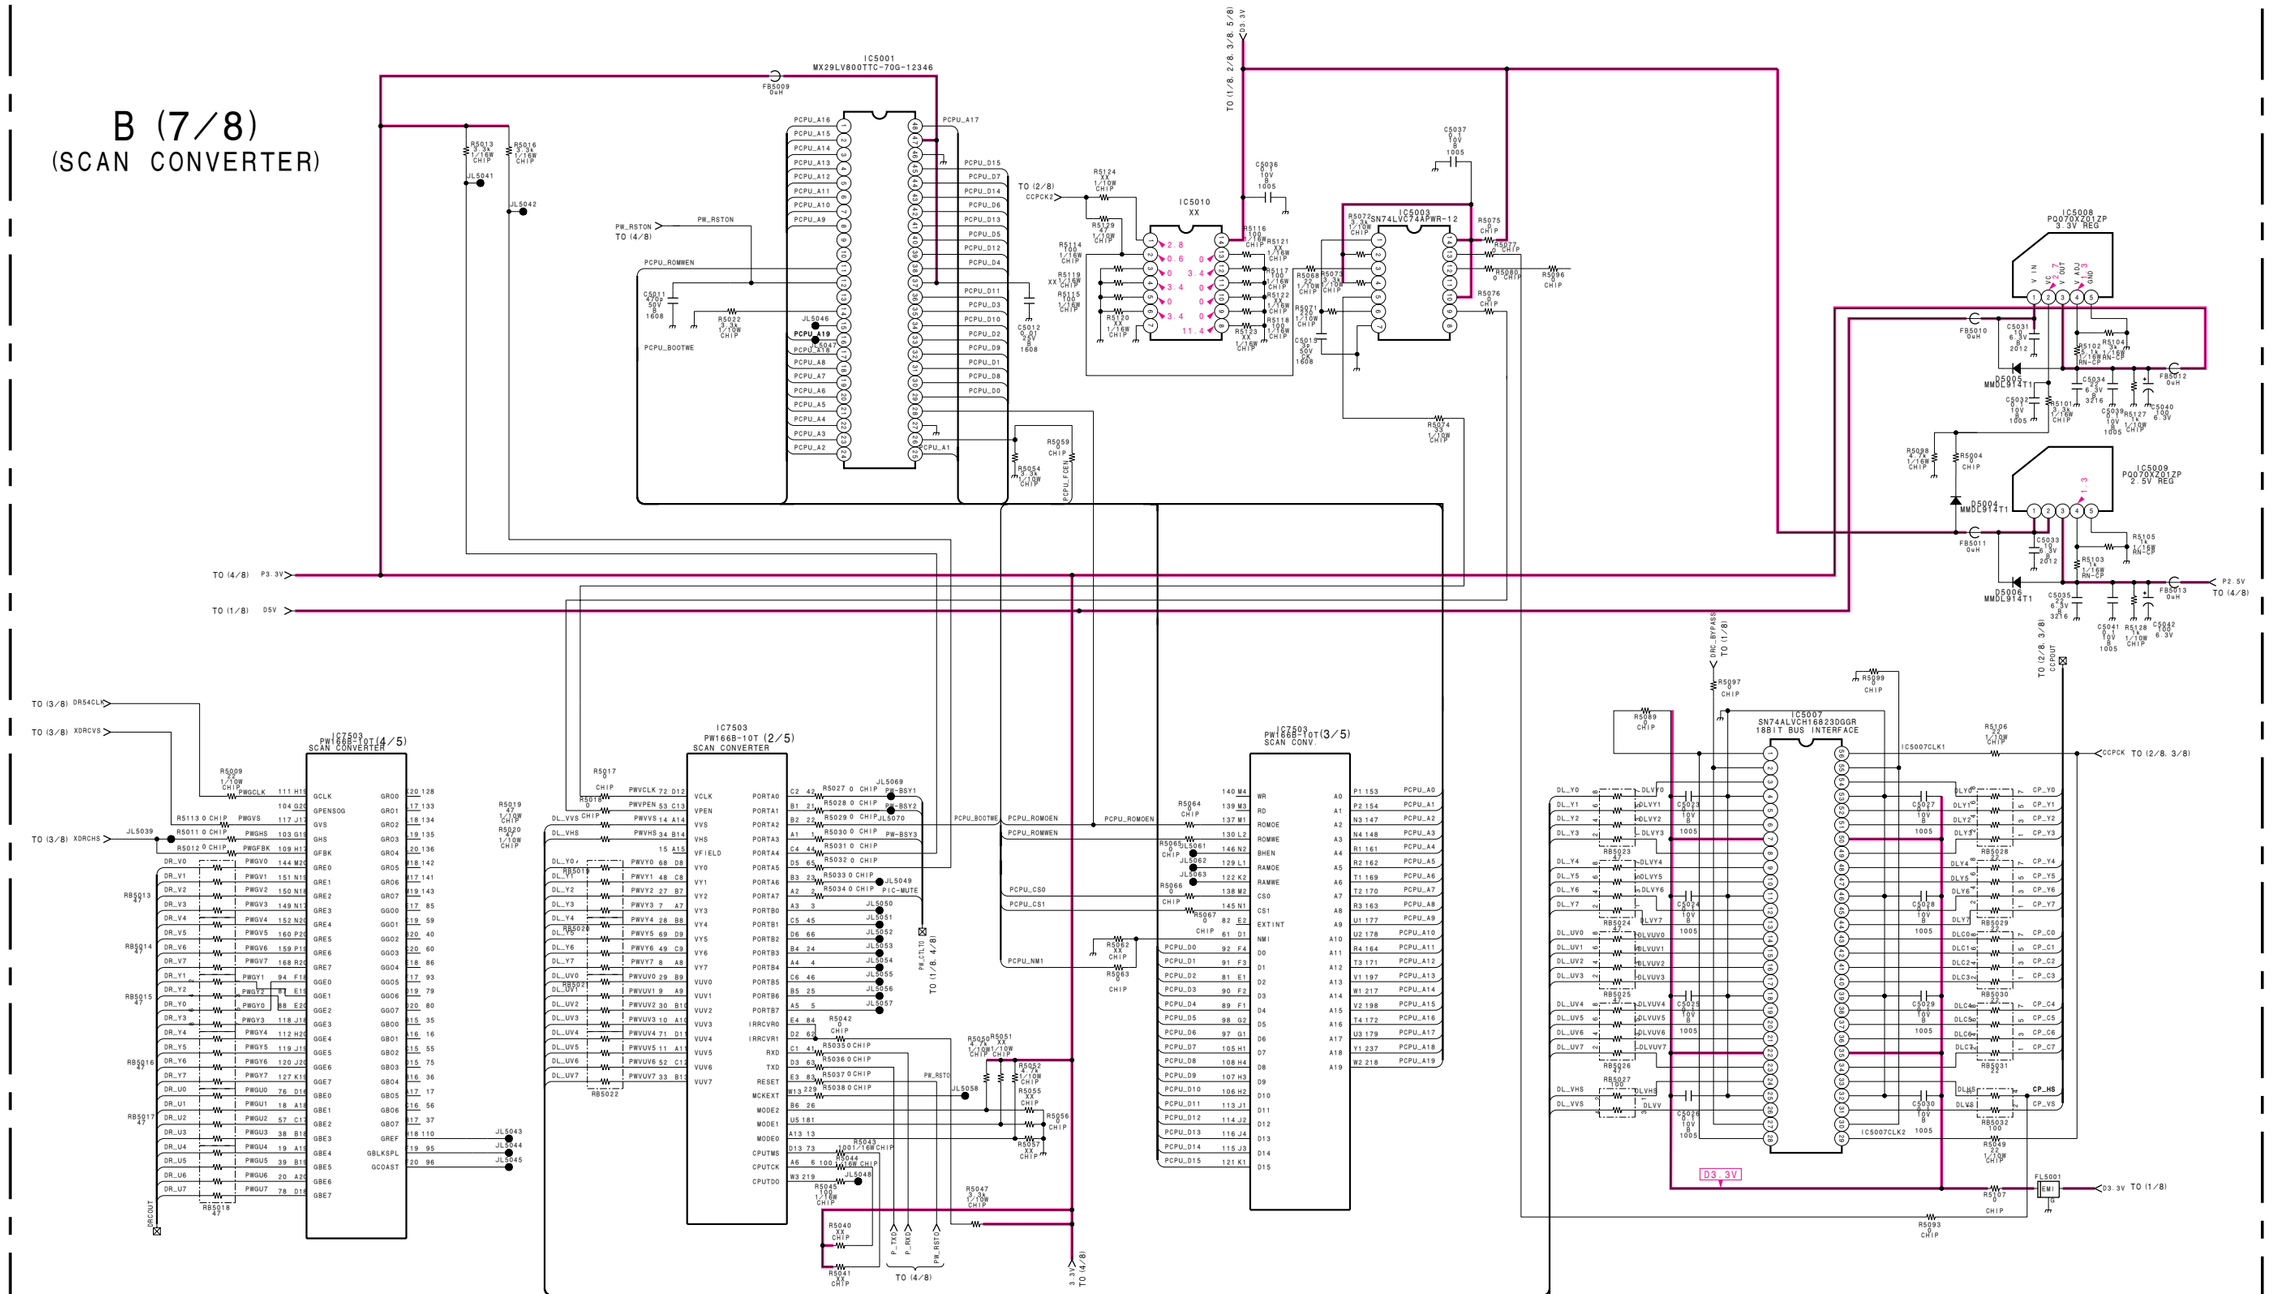

B-SS11932<UC..>-B..-P7

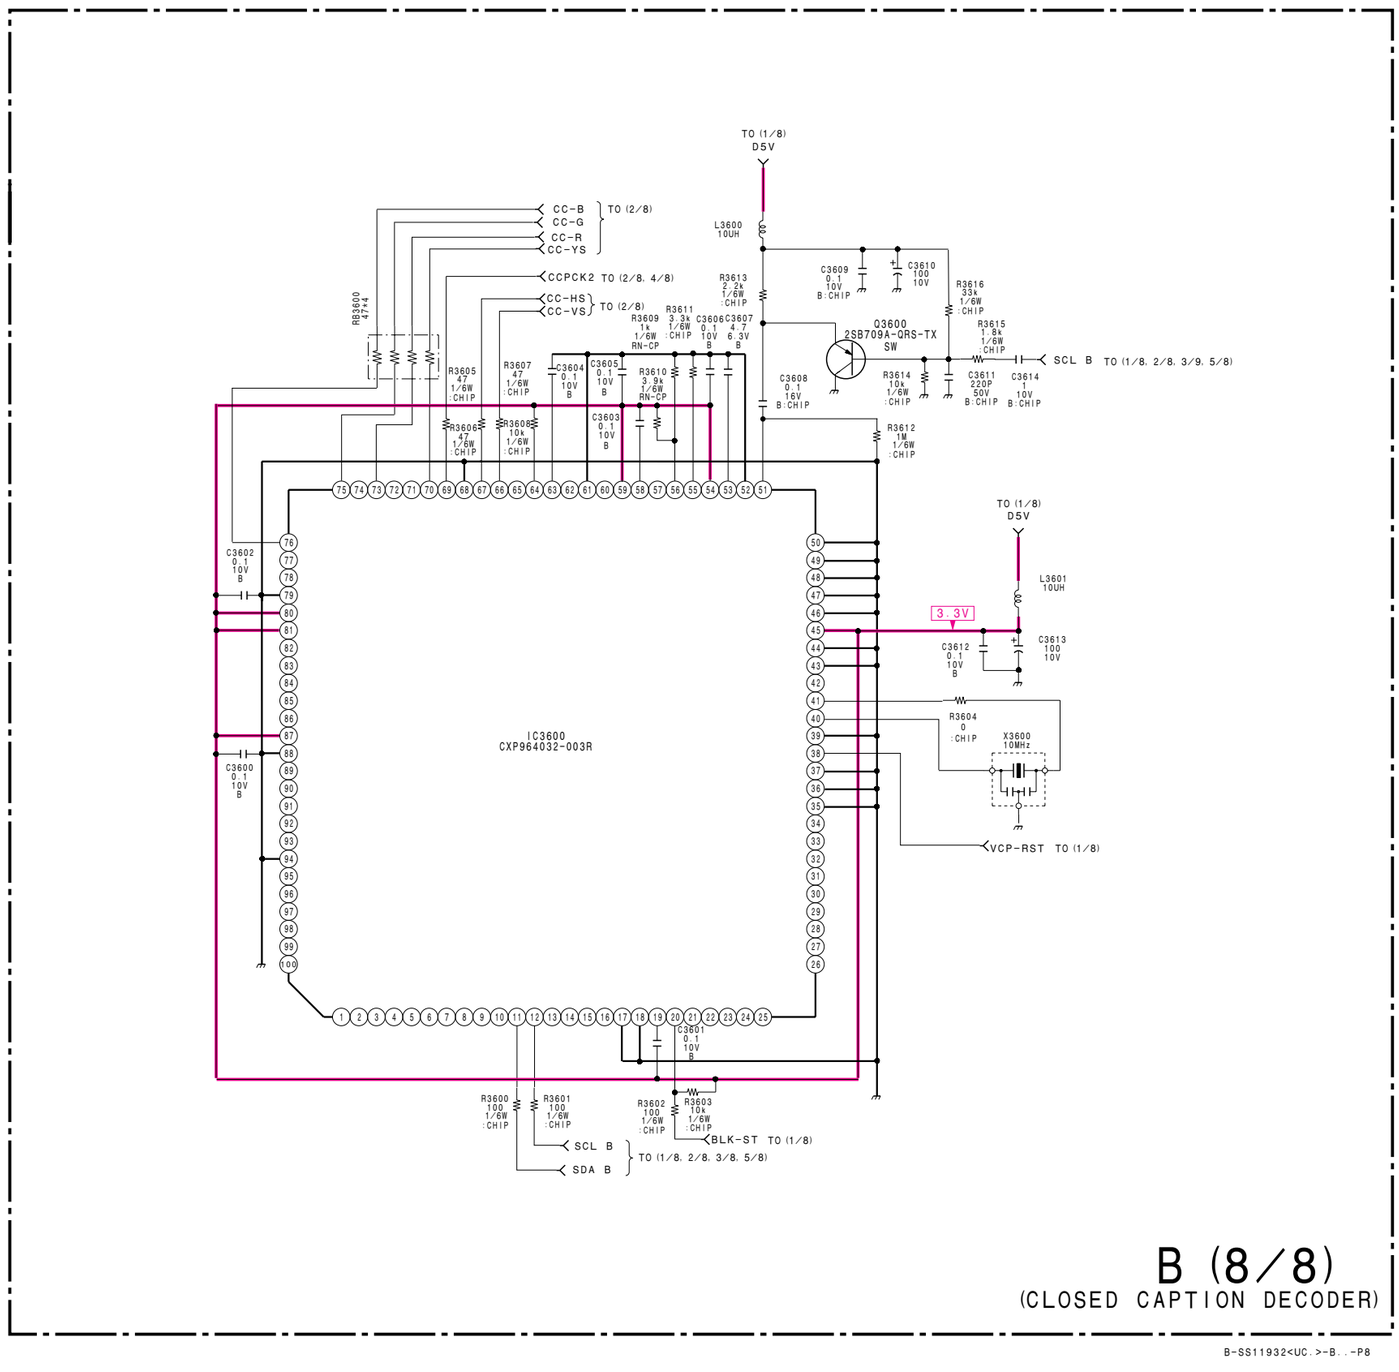

B (8/8)
(CLOSED CAPTION DECODER)

B-SS11932<UC.>-B..-P8

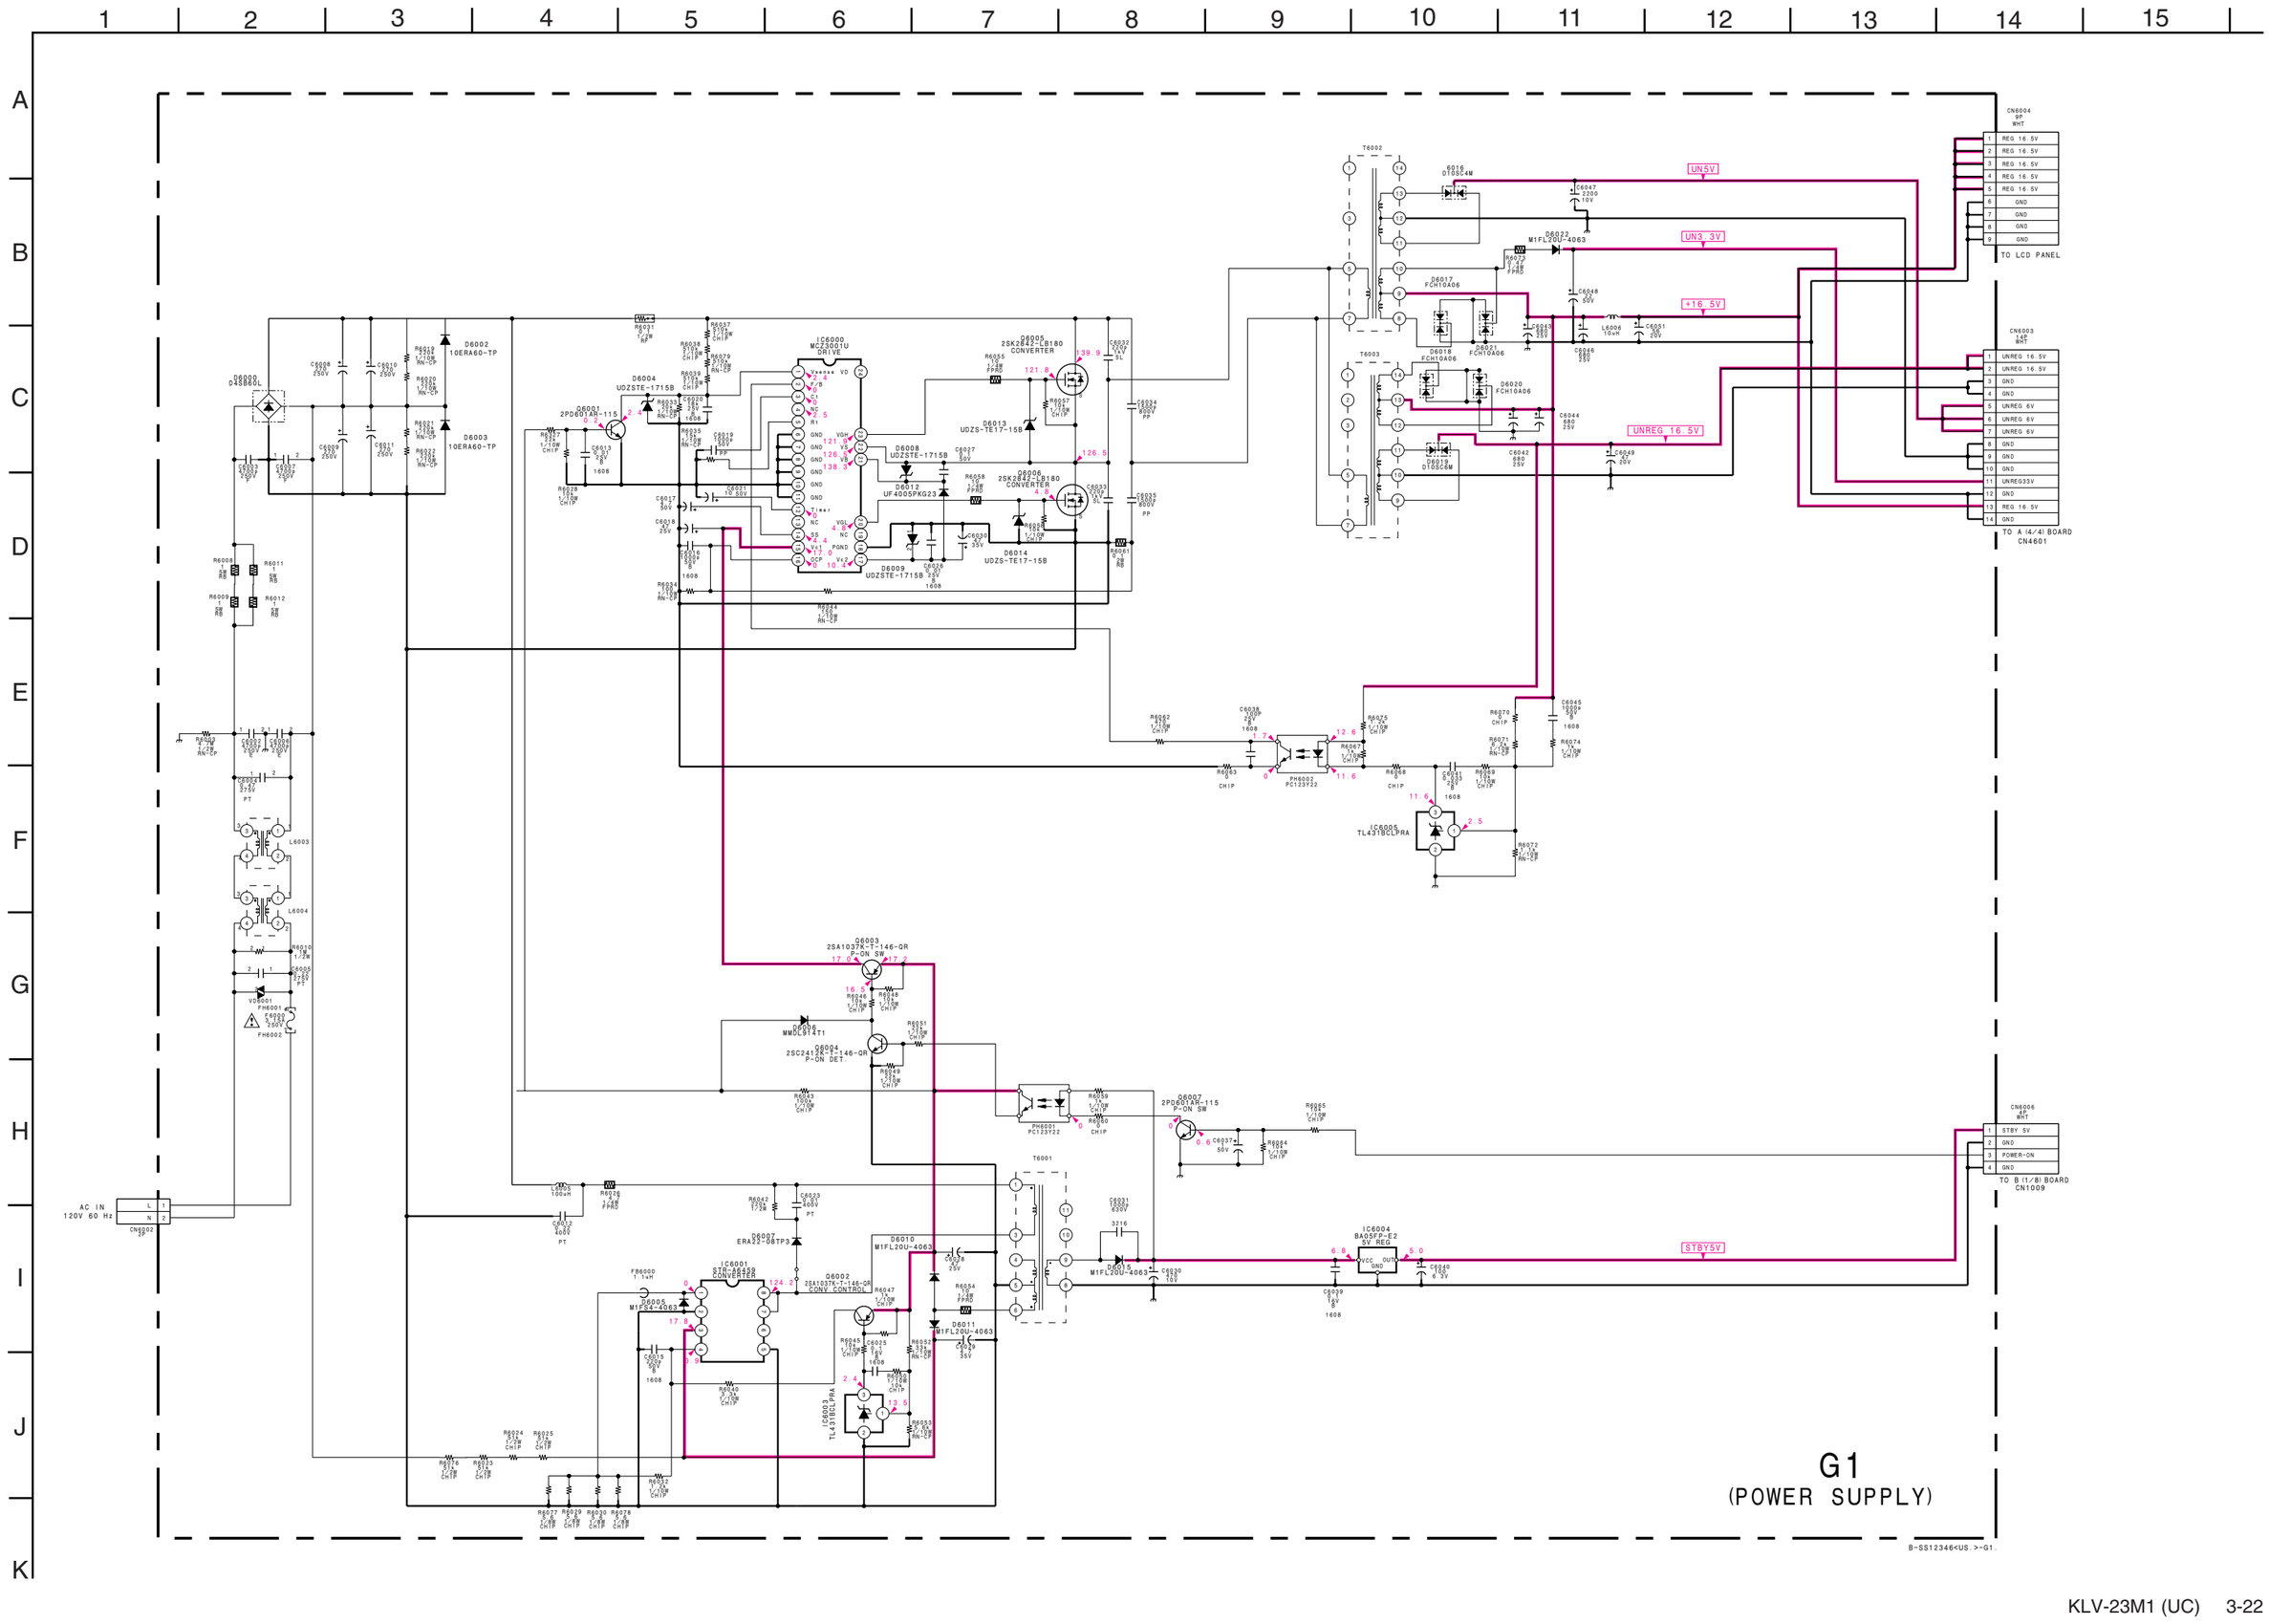
G1
(POWER SUPPLY)
B-SS12346<US.>-G1.
AC IN
120V 60 Hz
TO LCD PANEL
TO A (4/4) BOARD
CN4601
TO B (1/8) BOARD
CN1009
UN5V
UN3_3V
+16_5V
UNREG_16.5V
STBY5V
IC6000
MCZ3001U
DRIVE
IC6001
STR-A6459
CONVERTER
IC6004
BA05FP-E2
5V REG
IC6005
TL431BCLPRA
Q6001
2PD601AR-115
Q6002
2SA1037K-T-146-QR
CONV. CONTROL
Q6003
2SA1037K-T-146-QR
P-ON SW
Q6004
2SC2412K-T-146-QR
P-ON DET.
Q6005
2SK2842-LB180
CONVERTER
Q6006
2SK2842-LB180
CONVERTER
Q6007
2PD601AR-115
P-ON SW
D6000
D3SB60L
D6002
10ERA60-TP
D6003
10ERA60-TP
D6004
UDZSTE-1715B
D6008
UDZSTE-1715B
D6009
UDZSTE-1715B
D6012
UF4005PKG23
D6013
UDZS-TE17-15B
D6014
UDZS-TE17-15B
D6010
M1FL20U-4063
D6011
M1FL20U-4063
D6022
M1FL20U-4063
D6015
M1FL20U-4063
D6008
M1FS4-4063
D6016
DTS6C4M
D6017
FCH10A06
D6018
FCH10A06
D6021
FCH10A06
D6020
FCH10A06
D6019
DTS6C6M
D6007
ERA22-08TP3
D6006
MMDL914T1
T6001
T6002
T6003
PH6002
PC123Y22
PH6001
PC123Y22
CN6004
9P
WHT
REG 16.5V
REG 16.5V
REG 16.5V
REG 16.5V
REG 16.5V
GND
GND
GND
CN6003
14P
WHT
UNREG 16.5V
UNREG 16.5V
GND
GND
UNREG 6V
UNREG 6V
UNREG 6V
GND
GND
GND
UNREG33V
GND
REG 16.5V
GND
CN6006
4P
WHT
STBY 5V
GND
POWER-ON
GND
CN6002
3P
CN6001
3P
FB6000
1.1uH
L6000
100uH
L6001
L6002
L6003
L6004
F6000
3.15A
250V
F6001
F6002

(4) Schematic Diagram of H1, H2 and PB Boards

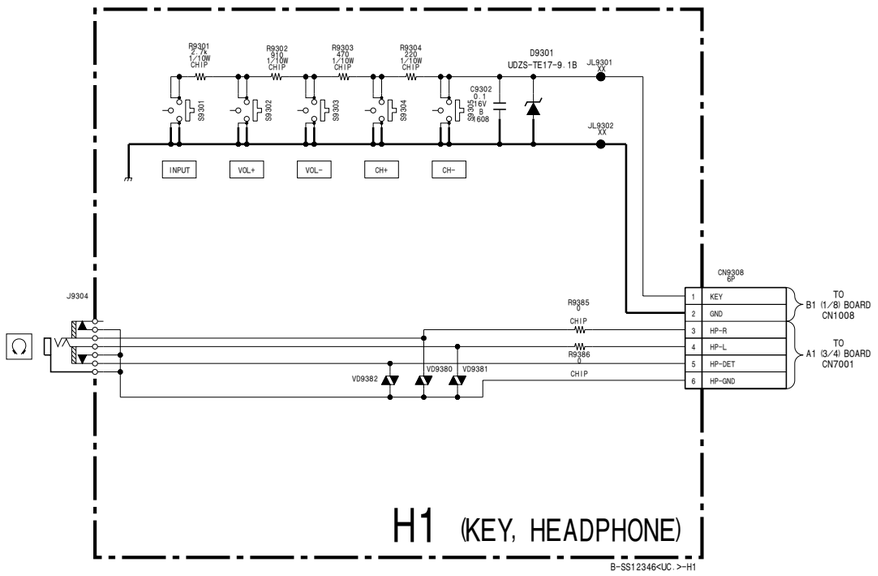

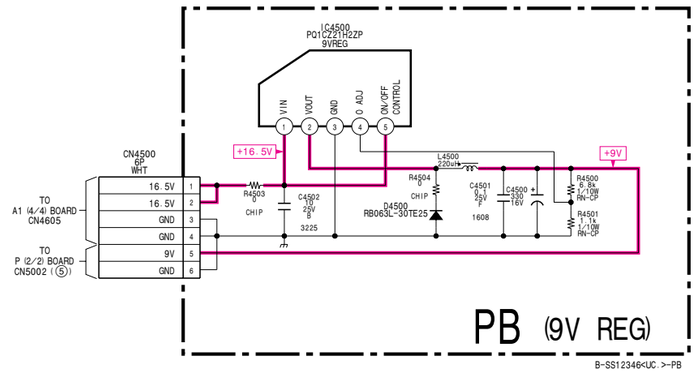

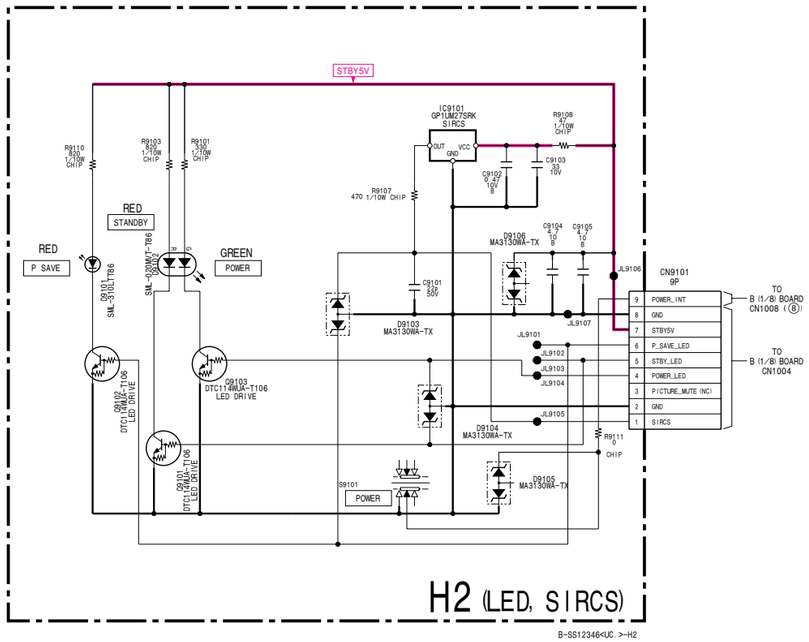

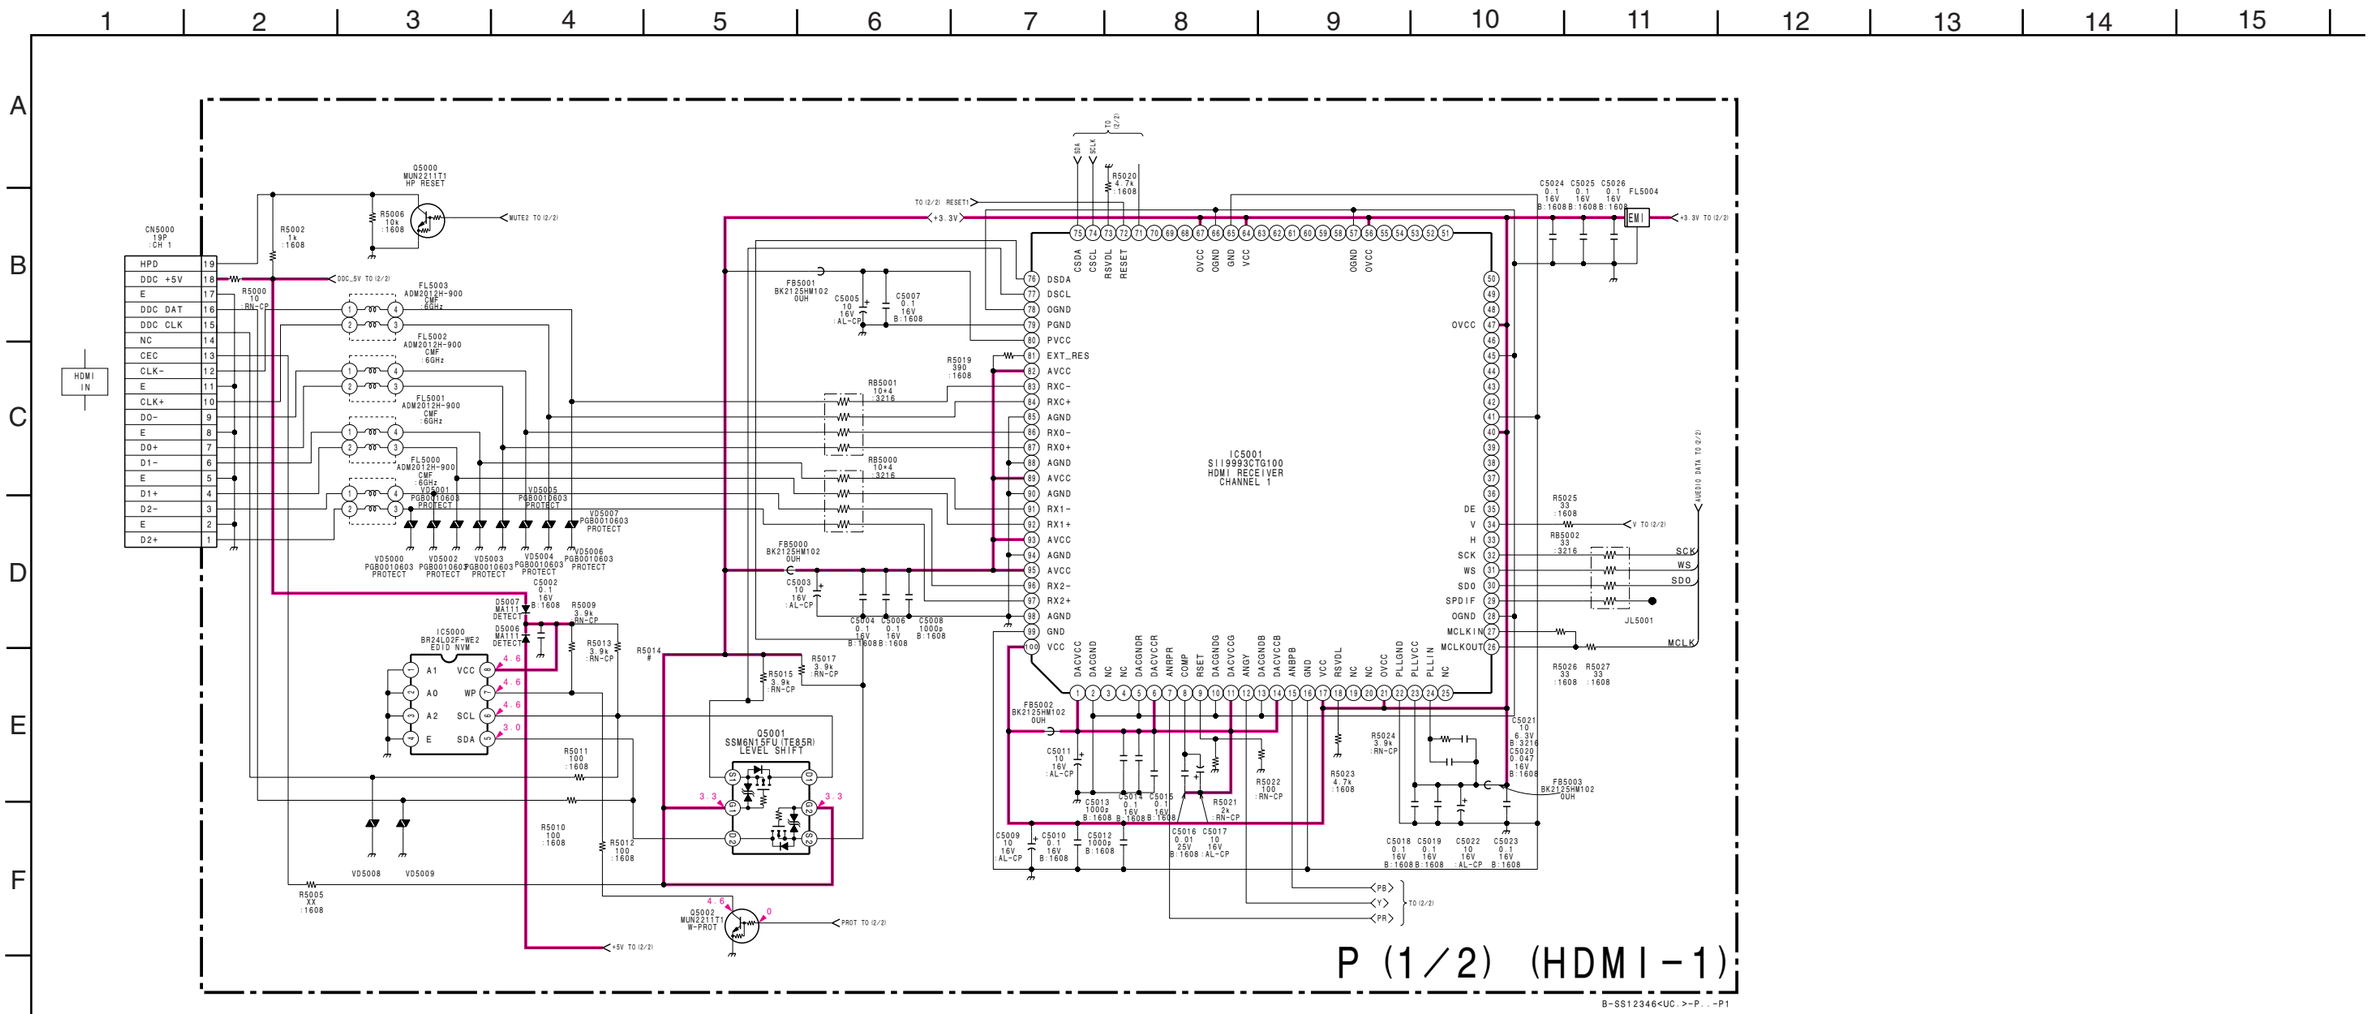

P (1/2) (HDMI-1)

B-SS12346<UC.>-P..-P1

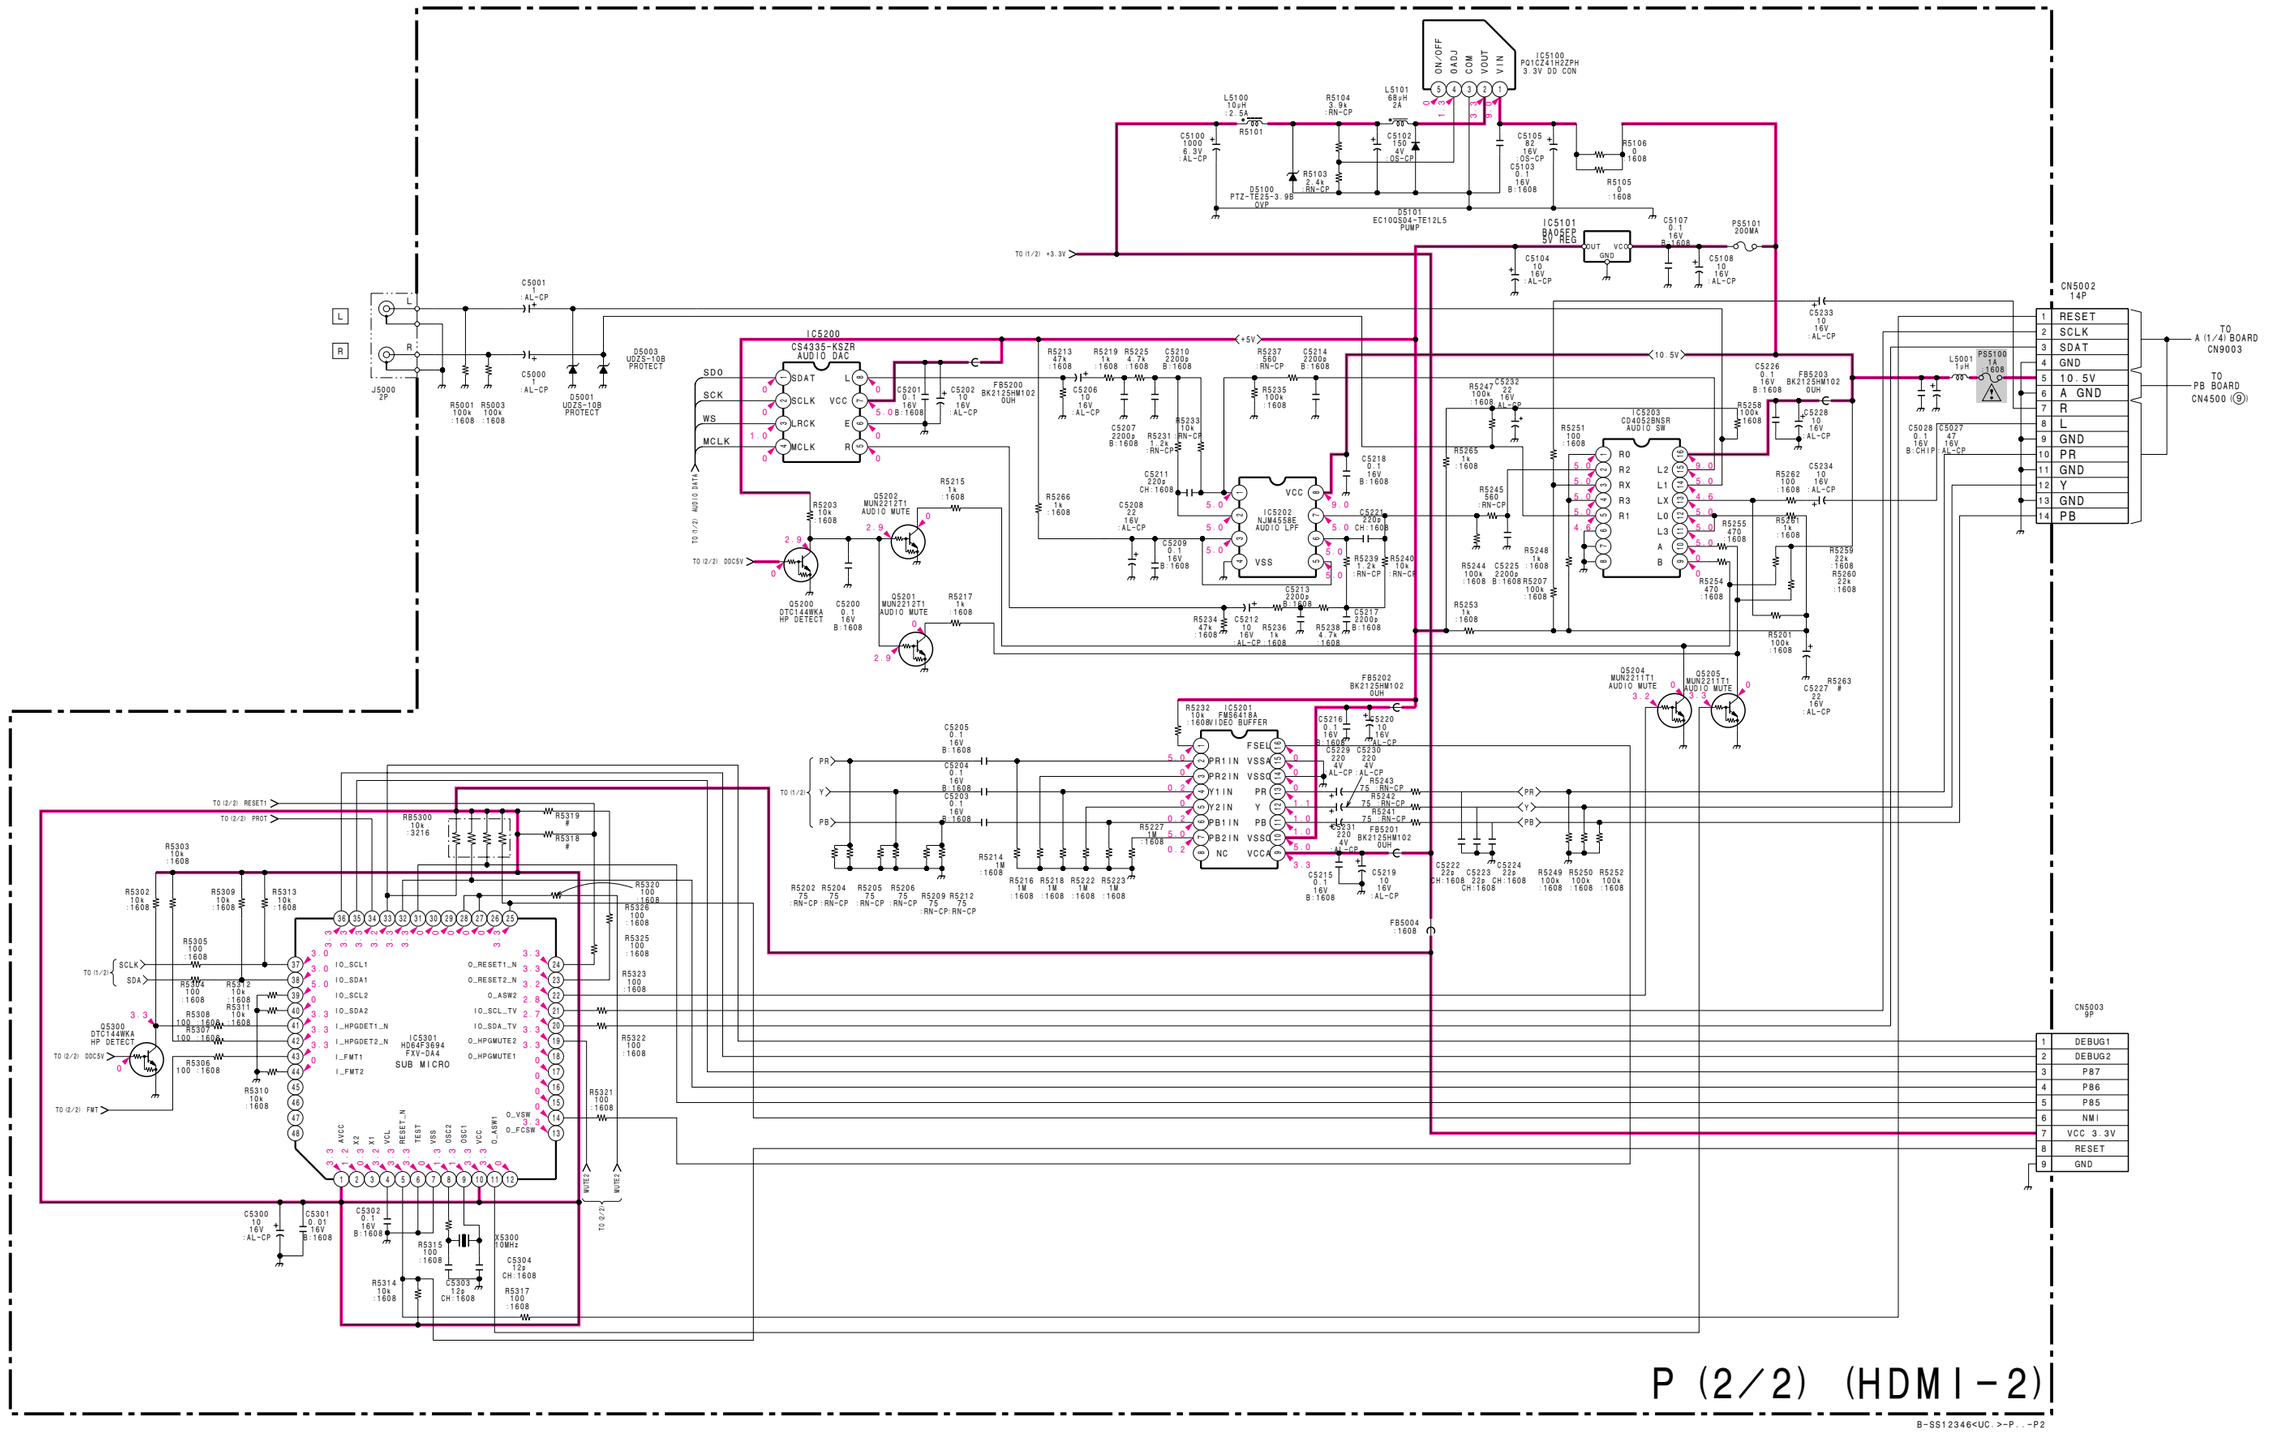
IC5100
PQ1CZ41H2ZPH
3.3V DD CON
ON/OFF
ADJ
COM
VOUT
VIN
IC5101
BA05FP
5V REG
IC5200
CS4335-KSZR
AUDIO DAC
IC5201
FM6418A
VIDEO BUFFER
IC5202
NJM4558E
AUDIO LPF
IC5203
CD4052BNSR
AUDIO SW
IC5301
HD64F3694
FXV-DA4
SUB MICRO
Q5200
DTC144WKA
HP DETECT
Q5300
DTC144WKA
HP DETECT
Q5201
MUN2212T1
AUDIO MUTE
Q5202
MUN2212T1
AUDIO MUTE
Q5204
MUN2211T1
AUDIO MUTE
Q5205
MUN2211T1
AUDIO MUTE
D5100
PTZ-TE25-3.9B
OVP
D5101
EC10QS04-TE12L5
PUMP
D5001
UDZS-10B
PROTECT
D5003
UDZS-10B
PROTECT
PS5101
200MA
PS5100
1A
L5100
10μH
2.5A
L5101
68μH
2A
L5001
1μH
FB5200
BK2125HM102
FB5201
BK2125HM102
FB5202
BK2125HM102
FB5203
BK2125HM102
FB5004
CN5002
14P
1 RESET
2 SCLK
3 SDAT
4 GND
5 10.5V
6 A GND
7 R
8 L
9 GND
10 PR
11 GND
12 Y
13 GND
14 PB
TO A (1/4) BOARD CN9003
TO PB BOARD CN4500 (9)
CN5003
9P
1 DEBUG1
2 DEBUG2
3 P87
4 P86
5 P85
6 NMI
7 VCC 3.3V
8 RESET
9 GND
J5000
2P
SDO
SCK
WS
MCLK
SDAT
SCLK
LRCK
MCLK
VCC
VSS
+5V
10.5V
TO I1/2) +3.3V
TO I2/2) DDC5V
TO I2/2) AUDIO DATA
TO I2/2) RESET1
TO I2/2) PROT
TO I2/2) FMT
TO I1/2)
SCLK
SDA
PR
Y
PB
MUTE1
MUTE2
TO I2/2)
P (2/2) (HDMI-2)
B-SS12346<UC.>-P...-P2

(6) Schematic Diagrams of TU Board

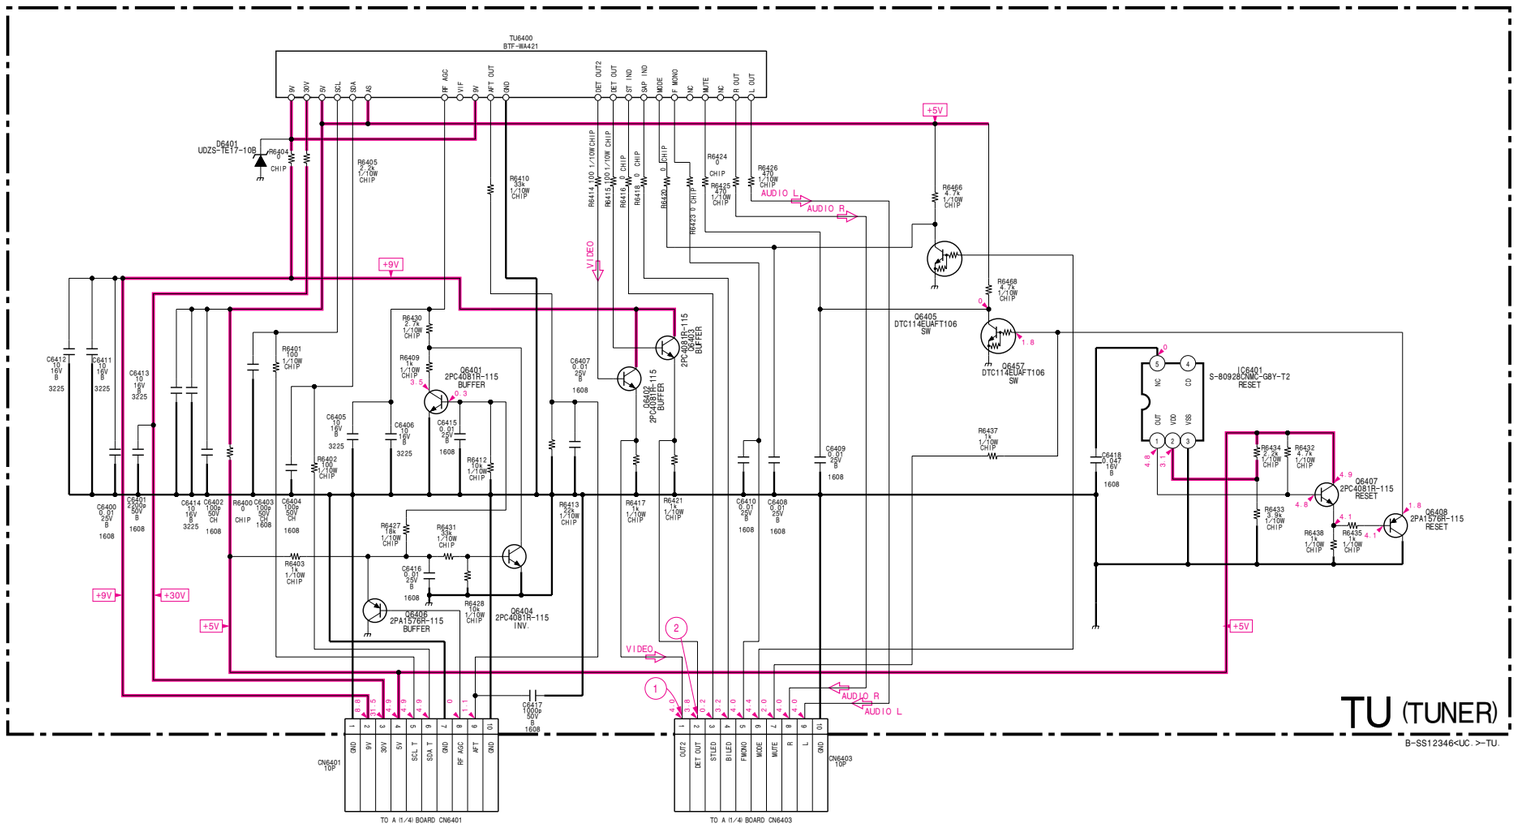

•TU BOARD WAVEFORM

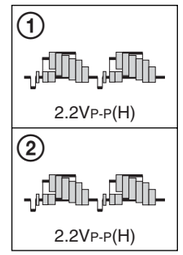

(7) Schematic Diagrams of U1 Board

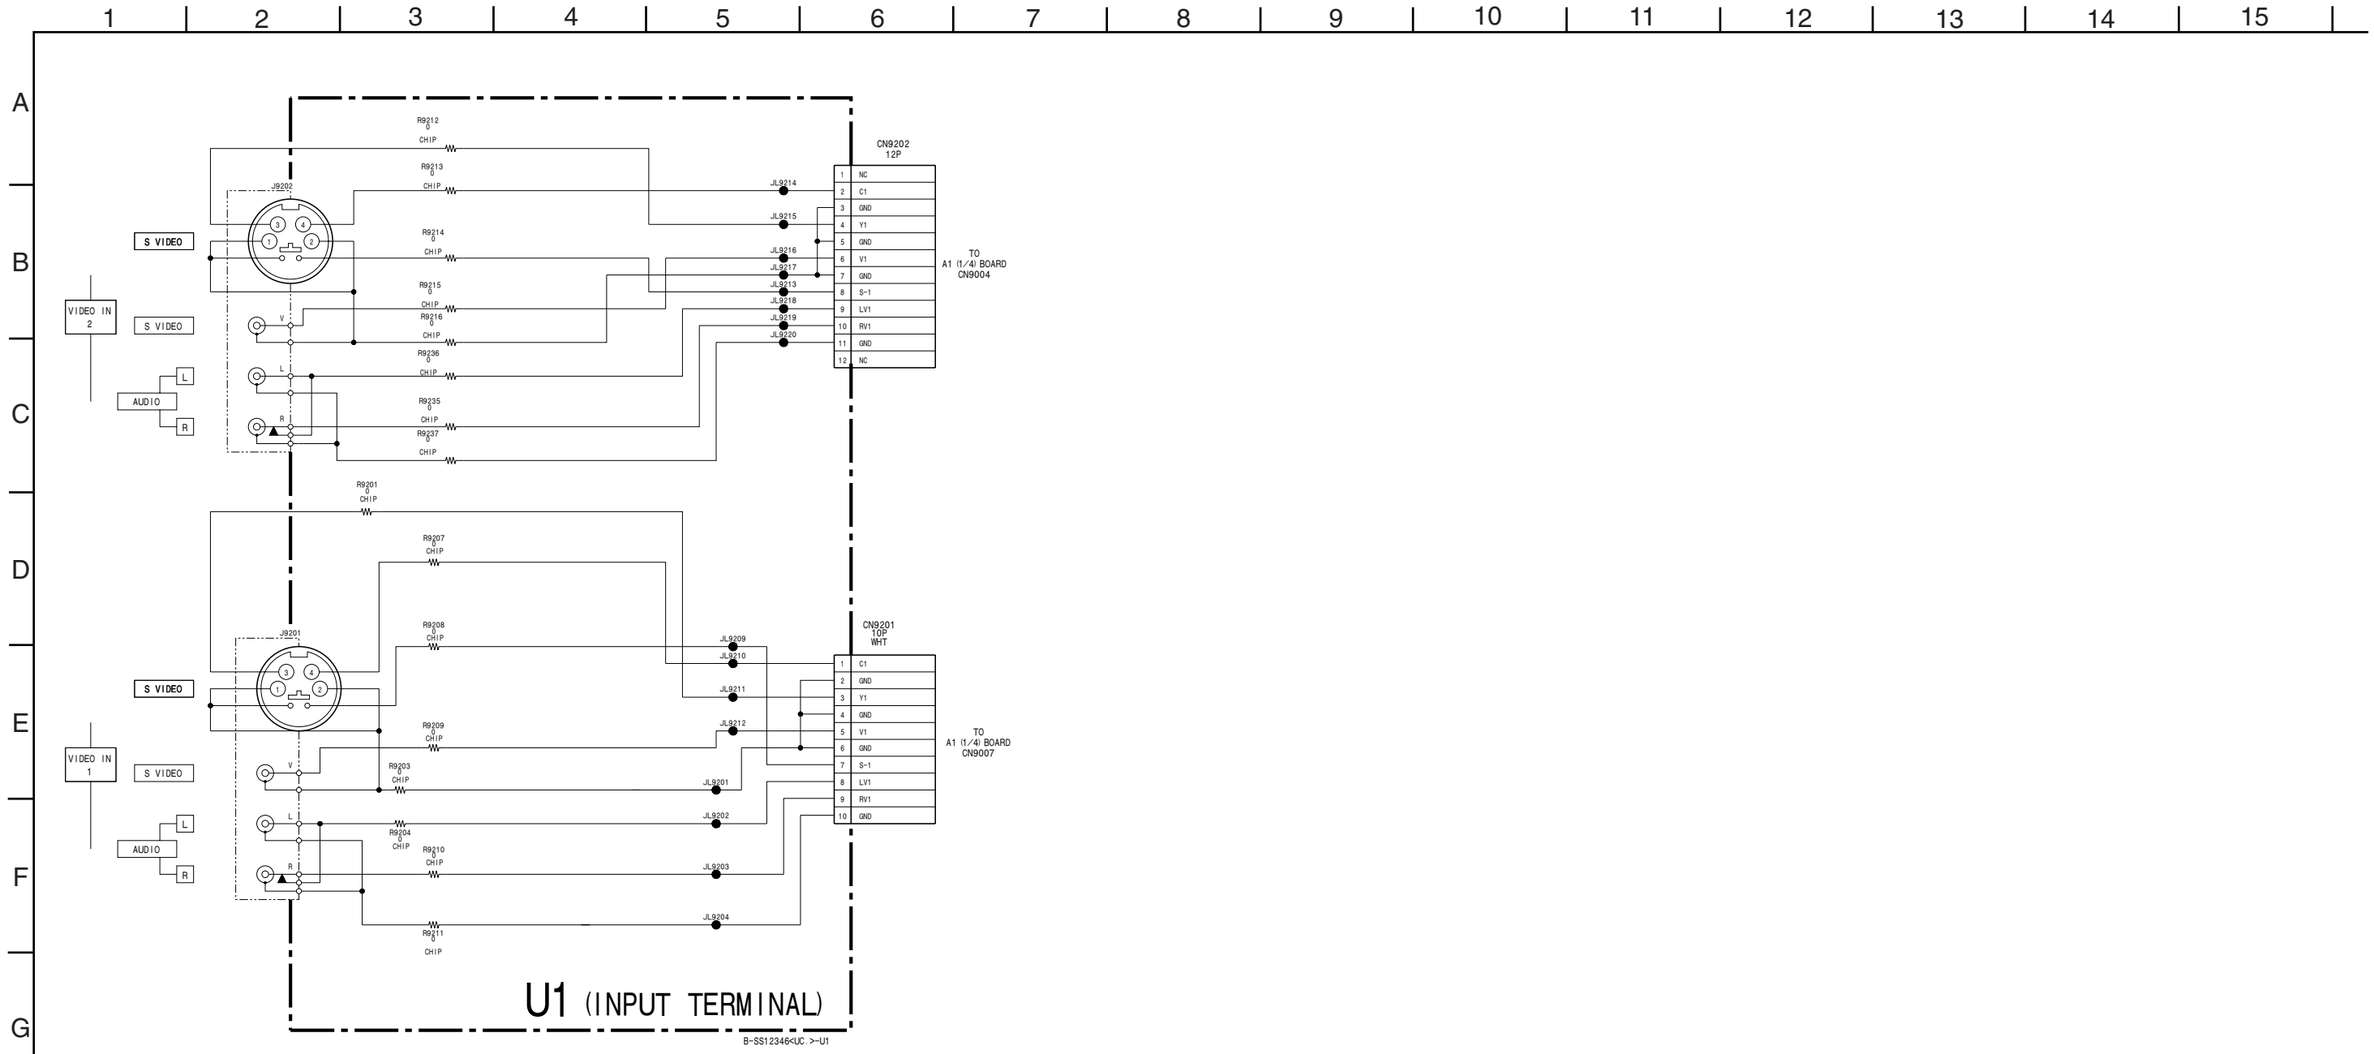

3-5. SEMICONDUCTORS

IC

BA033FP-E2
BA05FP-E2
BA09FP-E2
S-80928CNMC-G8YT2G
TC7SZ125FU(TE85R)



5Pin CHIP

BA25BC0FP-E2



BD3869AF-E2



18Pin SOP

BR24L02F-WE2
CS4335-KSZR
LM75CIMX-3
LMH6658MMX/J5000172
M24C64-WMN6T(B)
NJM3414AV(TE2)
NJM4558E(TE2)
NJM4558V-TE2



8Pin SOP

CD4052BNSR
FMS6418AM16X
M52055FP



16Pin SOP

CXA2089Q-T6
CXA2171AQ
HD64F3694FXV-DA4
NJM2700FJ1



48Pin QFP

CXD2097BQ
CXD9756R



208Pin QFP

CXD3802BQ



240Pin QFP

CXP964032-003R

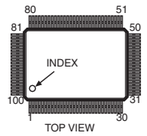

HD64F2376VFQ33V-12346
HD64F2377VFQ33V-12346



144Pin QFP

HY57V161610ETP-7
HY57V161610ETP-7DR
MSM56V16160F-10TS-K
MSM56V16160F-8T3FM1



50Pin SOP

IS42S32200B-6TL
IS42S32200B-6TL-TR
MT48LC2M32B2P-6-Y14W
MT48LC2M32B2TG-6-Y94W



86Pin SOP

L88M05T-FA-TL



MCZ3001UB



24Pin SOP

MM1561JFBE



MX29LV800TTC-70G-12346



48Pin SOP

PQ070XZ01ZP

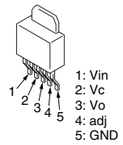

PQ1CZ21H2ZP
PQ1CZ41H2ZPH

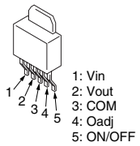

PW166B-10TL



256Pin PGA

S-80822CNNB-B8HT2G
S-80829CNNB-B8OT2G



SII9993CTG100



100Pin QFP

SN74ALVCH16823DGGR
THC63LVDM83R-T



56Pin SOP

SN74HCT02APWR
SN74LV132APWR
SN74LVC74APWR-12
TLC2933IPWR-12



14Pin SOP

STR-A6459

8Pin DIP

TL431BCLPRA



TPS5120DBTR



30Pin SOP

TRANSISTOR

DTA143EUA-T106
DTC114EUA-T106
DTC114WUA-T106
DTC144WKA-T146
DTC314TK-T-146
MSD601-RT1
MUN2211T1
MUN2212T1
MUN5213T1
UN2211
2PA1576R-115
2PC4081R-115
2PD601AR-115
2SA1037AK-T146-QR
2SA1037AK-T146-R
2SA1226-E4
2SA1226-T1E3E4
2SB709A-QRS-TX
2SC1623-L5L6
2SC2412K-T-146-QR
2SC4178-F13F14-T1
2SC4178-F14
2SD601A-Q-TX



DTC114EU
DTC114EUAFT106



HAT2071R-EL



HN1B01FU-TE85R

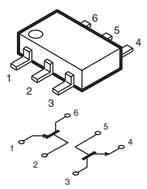

IRF7901D1-TR



SI2301DS-T1
SI2304DS-T1
2SK1828
2SK1828TE85L



SSM6N15FU(TE85R)



UPA1716G-E2



2SD2012



2SD2061-E



2SK2842-LB180



DIODE

DTZ10B
HZU16B2TRF
MA111-TX
MMDL914T1
PDZ10B-115
RD10SB2-T1
RD5.6SB-T1
UDZSTE-1710B
UDZSTE-1713B
UDZSTE-1715B
UDZSTE-179.1B



D10SC4M



D4SB60L



EC10QS-04
EC10QS04-TE12L5

EC31QS03L-TE12L
M1FL20U-4063
RB160M-30TR

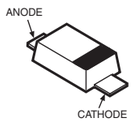

EP05Q03L-TE8L3
MM3Z10VT1
MM3Z13VT1
MM3Z2V4T1
MM3Z5V6ST1

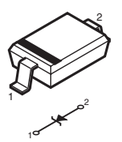

ERA22-08
ERA22-08TP3



FCH10A06



HN1D03FU-TE85L
HN1D03FU-TE85R

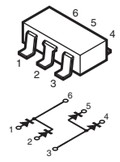

M1FS4-4063



MA3130WA-TX



PTZ-TE25-13A
PTZ-TE25-3.9B
RB063L-30TE25

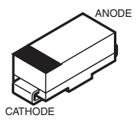

UF4005PKG23
10ERA60-TP



1PS184-115



1PS302



SML-020MVT-T86

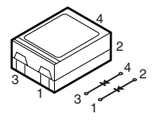

SML-310LTT86

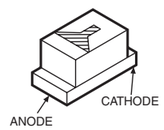

SECTION 4
EXPLODED VIEWS

NOTE:

The components identified ⚠ marked are critical for safety.
Replace only with the part number specified.

Les composants identifiés par la marque ⚠ sont critiques pour la sécurité.
Ne les remplacer que par une pièce portant le numéro spécifié.

- Items with no part number and no description are not stocked because they are seldom required for routire service.
- The construction parts of an assembled part are indicated with a collation number in the remark column.
- Items marked " * " are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

4-1. CABINET ASSY AND STAND

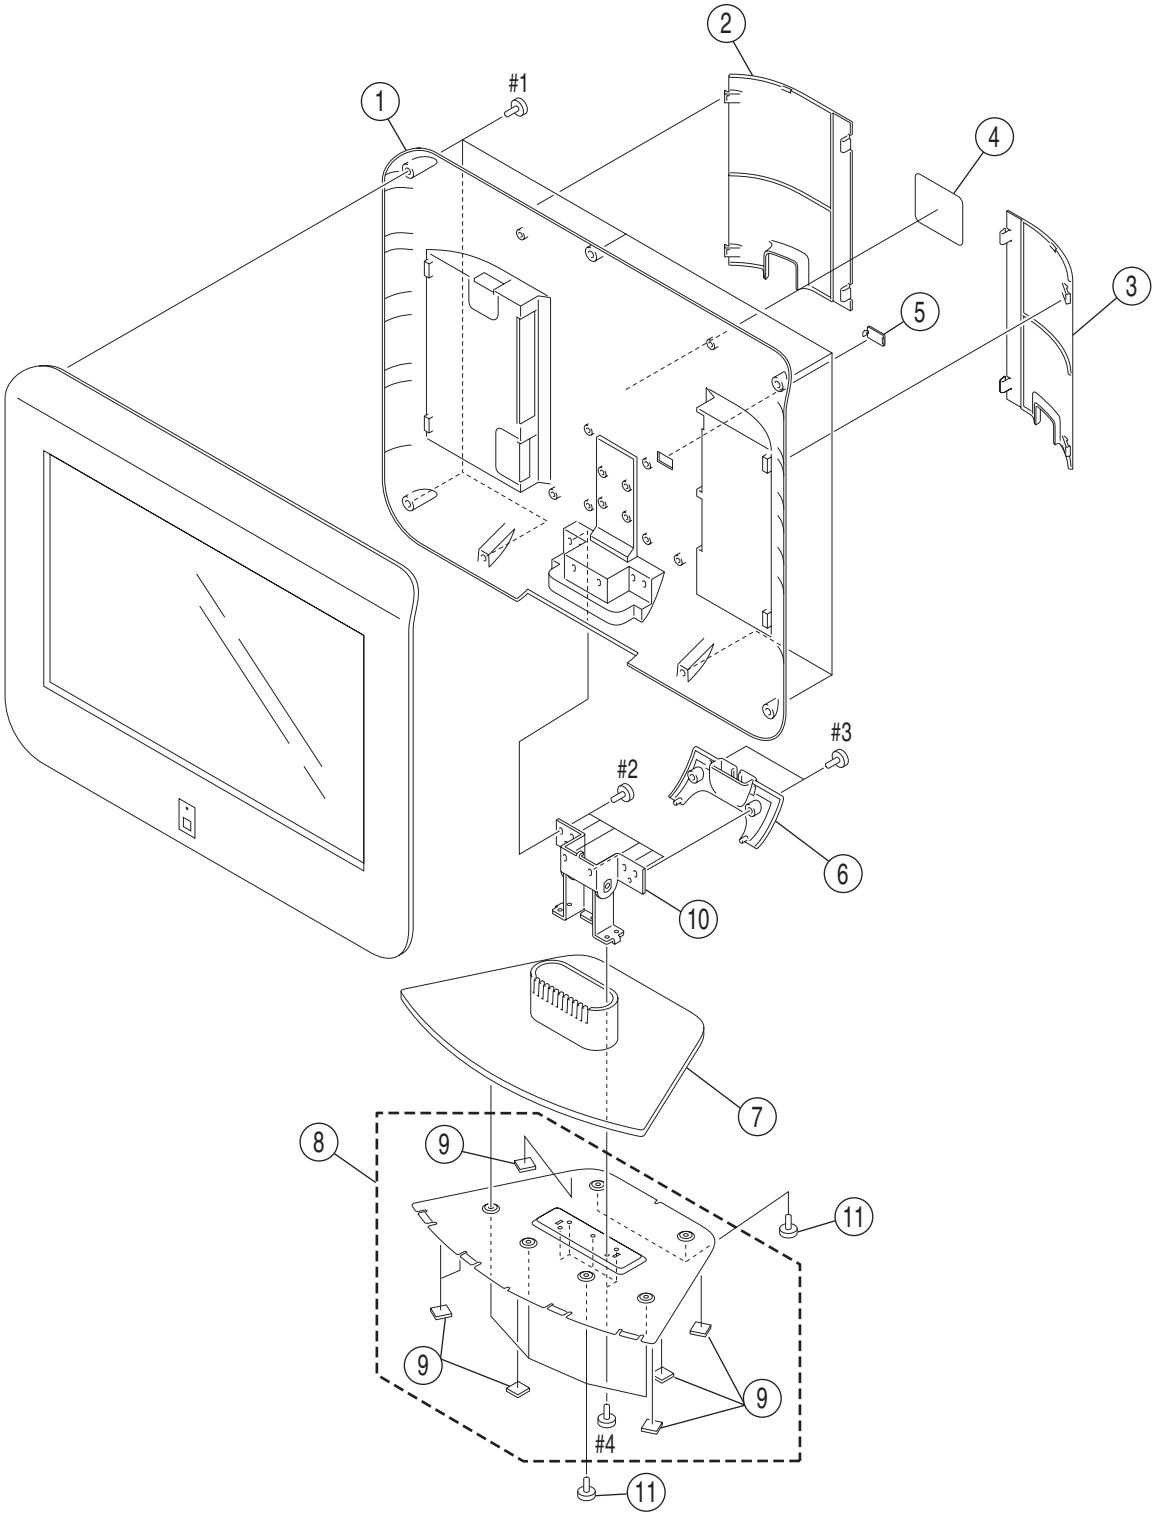

REF. No.	PART No.	DESCRIPTIONRE	MARK
1	X-2023-178-1	CABINET ASSY	
2	X-2023-179-1	CABLE COVER (L) ASSY	
3	X-2023-180-1	CABLE COVER (R) ASSY	
4	* 2-159-406-01	LABEL,INFORMATION	
5	4-094-922-41	COVER, ECS (15V)	
6	2-109-570-01	COVER,HINGE	
7	2-109-117-01	BASE,STAND	
8	X-2023-182-1	BASE PLATE ASSY	9
9	4-101-439-01	FOOT, STAND	

REF. No.	PART No.	DESCRIPTIONRE	MARK
10	2-109-222-12	HINGE	
11	4-101-526-11	SCREW, BAIND HEAD+TP M4 TYPE2	
#1	7-685-662-79	SCREW +BVTP 4X14, TYPE 2, IT-3	
#2	7-682-965-09	SCREW +PSW 4X16	
#3	7-682-949-09	SCREW +PSW 3X10	
#4	7-682-962-01	SCREW +PSW 4X10	

4-2. CHASSIS-1

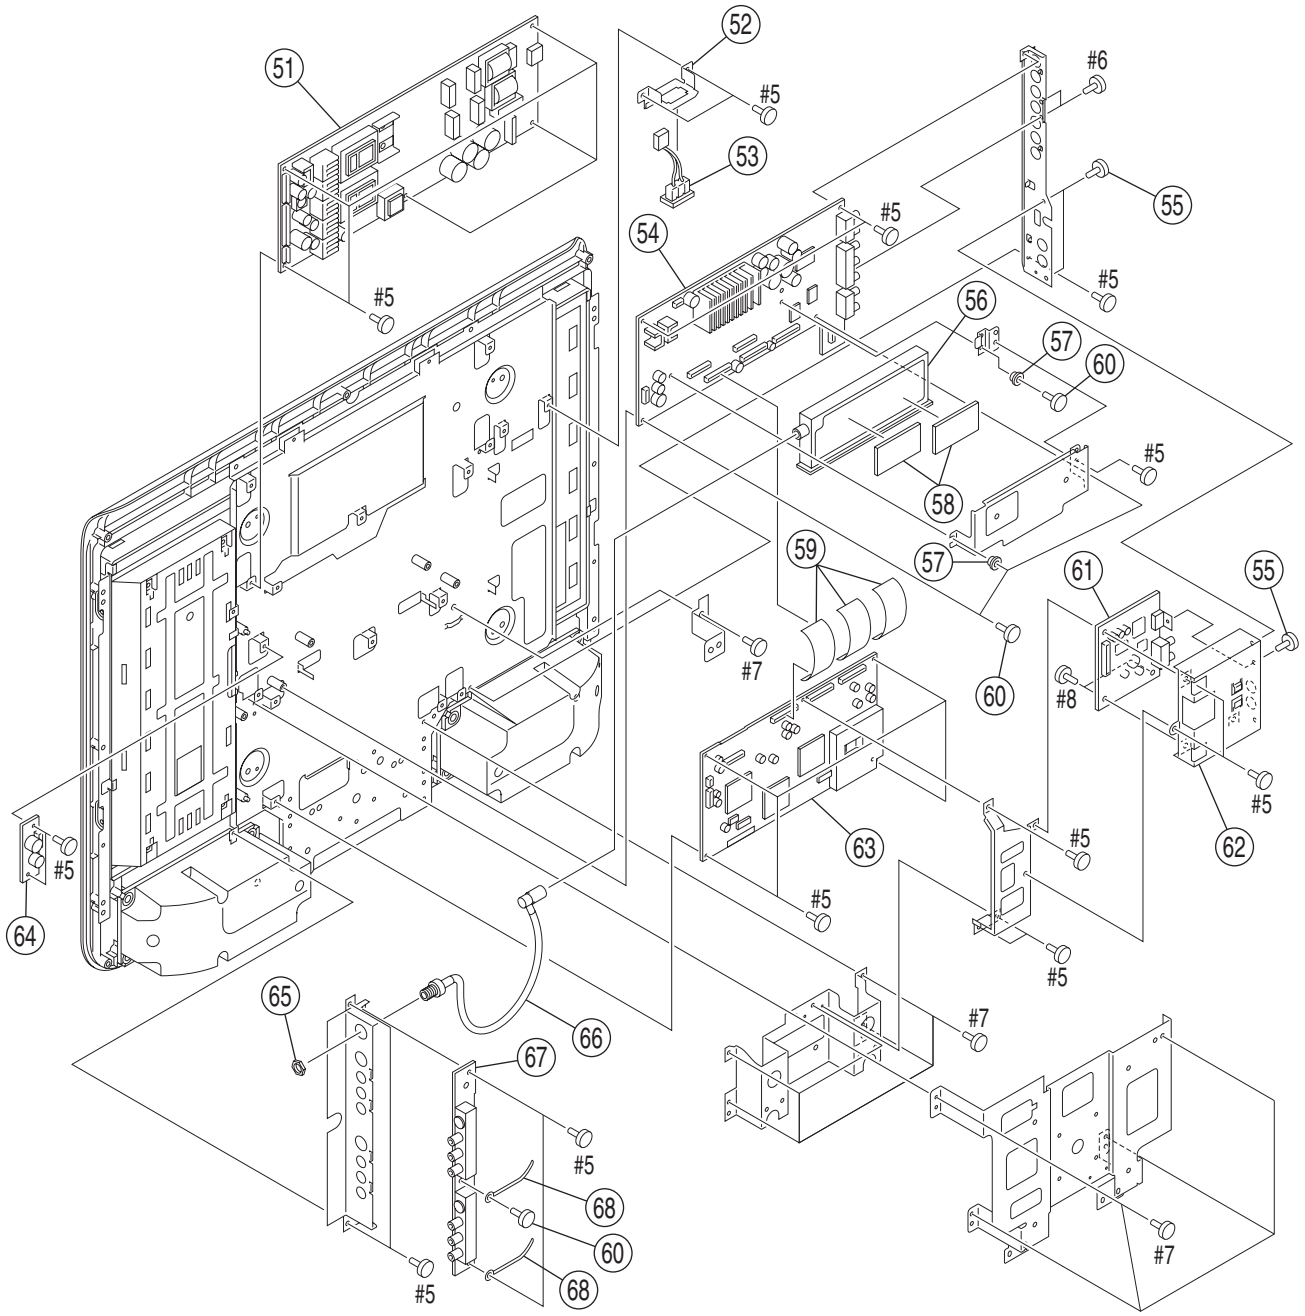

REF. No.		PART No.	DESCRIPTIONRE	MARK
51	*	A-1410-789-A	G1 MOUNT	
52	*	X-4041-844-1	BRACKET, TERMINAL (C) ASSY	
53		1-818-024-11	AC INLET	
54	*	A-1063-809-A	A1 MOUNT	
55		2-148-126-01	SCREW (+B), FIXED	
56	*	A-1072-513-A	TU MOUNT	
57		2-371-561-01	BUSHING (P), INSULATING	
58	*	4-095-199-01	SHEET (A), RADIATION	
59		1-900-274-33	CONNECTOR ASSY 25PIN	
60		4-382-854-71	SCREW (M3X10), P, SW (+)	
61		A-1078-798-A	P MOUNT	
62		2-021-777-02	SHIELD (LOWER), P	
63	*	A-1072-514-A	B MOUNT	
64	*	A-1063-812-A	PB MOUNT	
65		3-682-691-21	NUT, WASHER HEXAGON	

REF. No.		PART No.	DESCRIPTIONRE	MARK
66		1-827-467-41	CORD, CONNECTION	
67	*	A-1063-811-A	U1 MOUNT	
68	*	4-662-796-01	CLIP, COACHING	
#5		7-685-871-01	SCREW +BVTT 3X6 (S)	
#6		7-685-647-19	SCREW +BVTP 3X10 TYPE2 N-S	
#7		7-685-881-01	SCREW +BVTT 4X8 (S)	
#8		7-682-948-01	SCREW +PSW 3X8	

4-3. CHASSIS-2

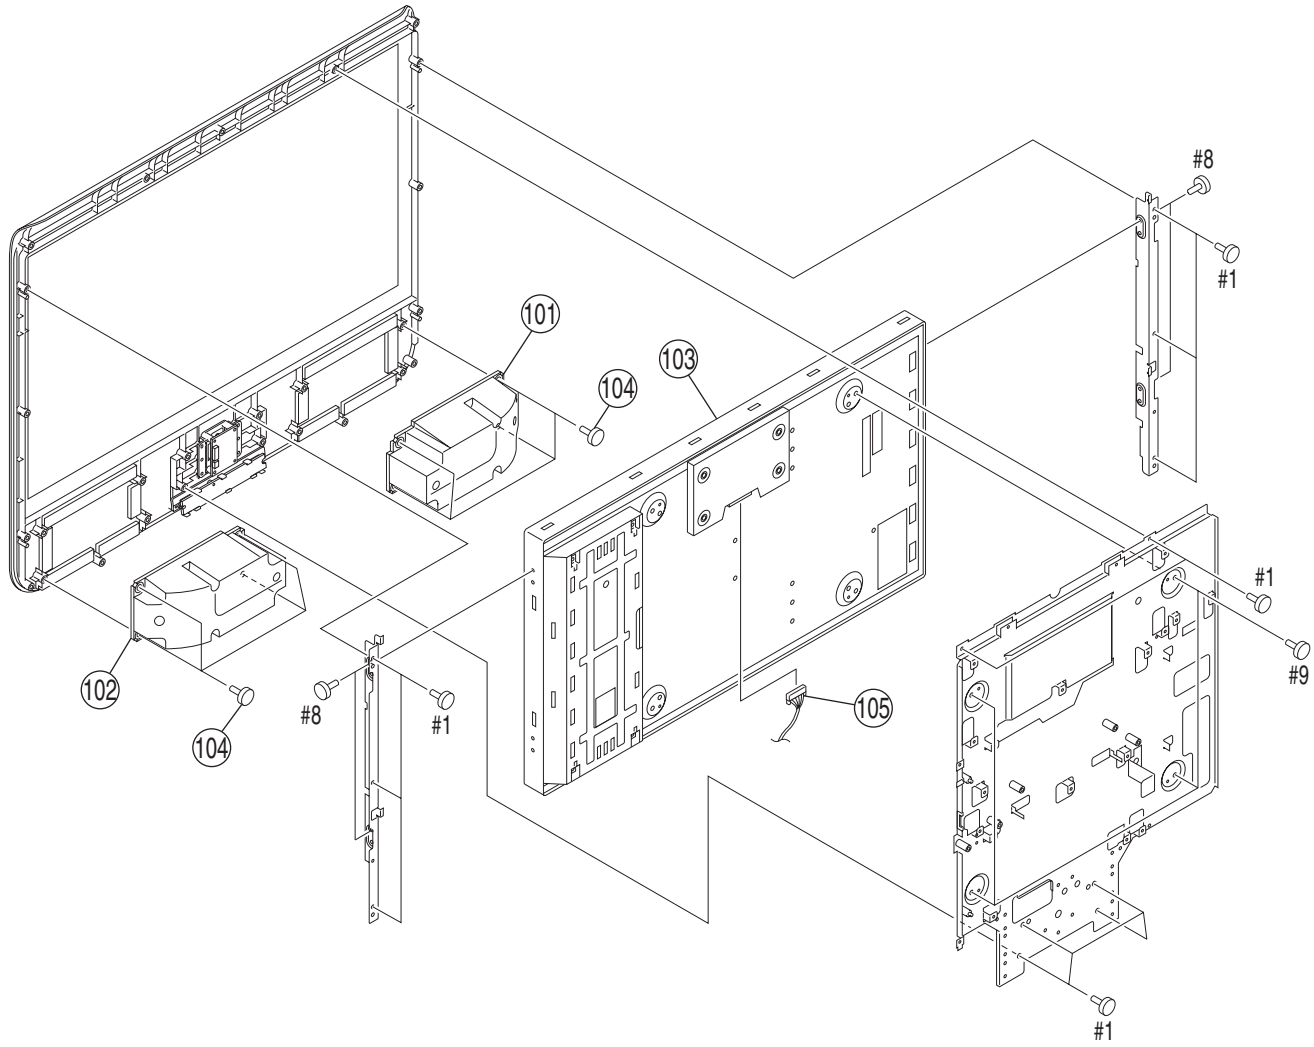

REF. No.	PART No.	DESCRIPTIONRE	MARK
101	1-825-954-11	LOUDSPEAKER (L)	
102	1-825-954-21	LOUDSPEAKER (R)	
103	1-805-663-31	LCD PANEL (23INCH WXGA+TFT)	
104	4-302-404-11	SCREW,WASHER HEAD (+P 4X16)	
105	1-900-283-43	LVDS CONNECTOR	

REF. No.	PART No.	DESCRIPTIONRE	MARK
#1	7-685-662-79	SCREW +BVTP 4X14, TYPE2, IT-3	
#8	7-682-948-01	SCREW +PSW 3X8	
#9	7-682-961-01	SCREW +PSW 4X8	

4-4. BEZEL ASSY

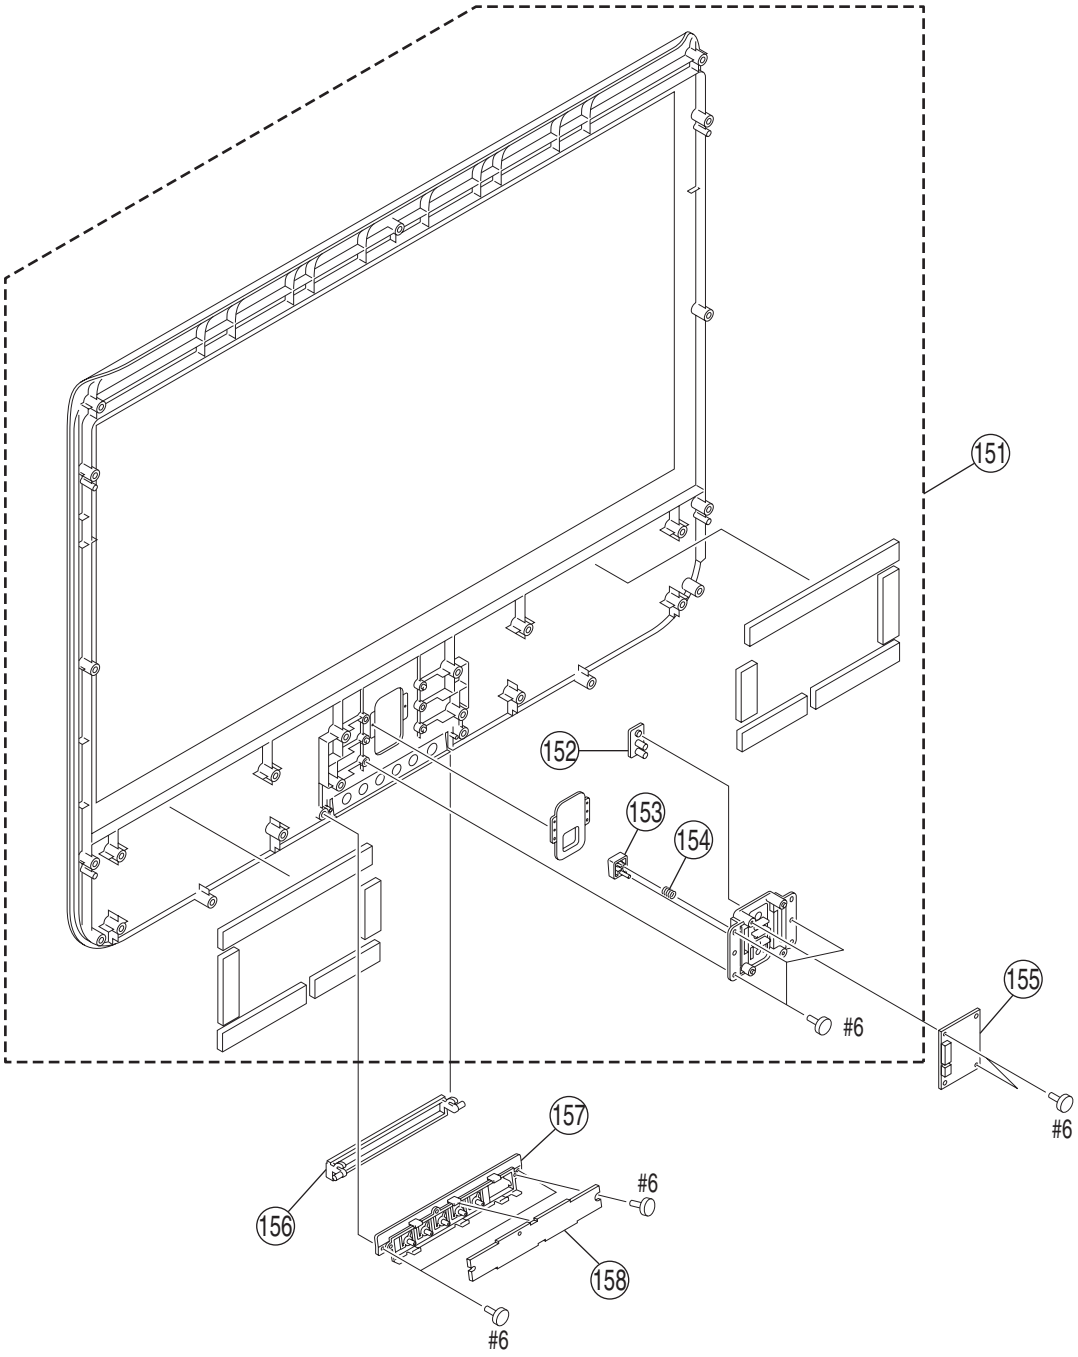

REF. No.		PART No.	DESCRIPTIONRE	MARK
151		X-2022-552-1	BEZEL ASSY	152-154
152		2-050-241-01	GUIDE, LED	
153		2-021-791-02	BUTTON, POWER	
154		2-109-058-01	SPRING, COMPRESSION	
155	*	A-1072-502-A	H2 MOUNT	
156		2-109-106-01	DOOR,CONTROL	
157		2-109-107-01	BRACKET,MULTI BUTTON	

REF. No.		PART No.	DESCRIPTIONRE	MARK
158	*	A-1063-810-A	H1 MOUNT	
#6		7-685-647-19	SCREW +BVTP 3X10 TYPE2 N-S	

4-5. PACKING MATERIALS

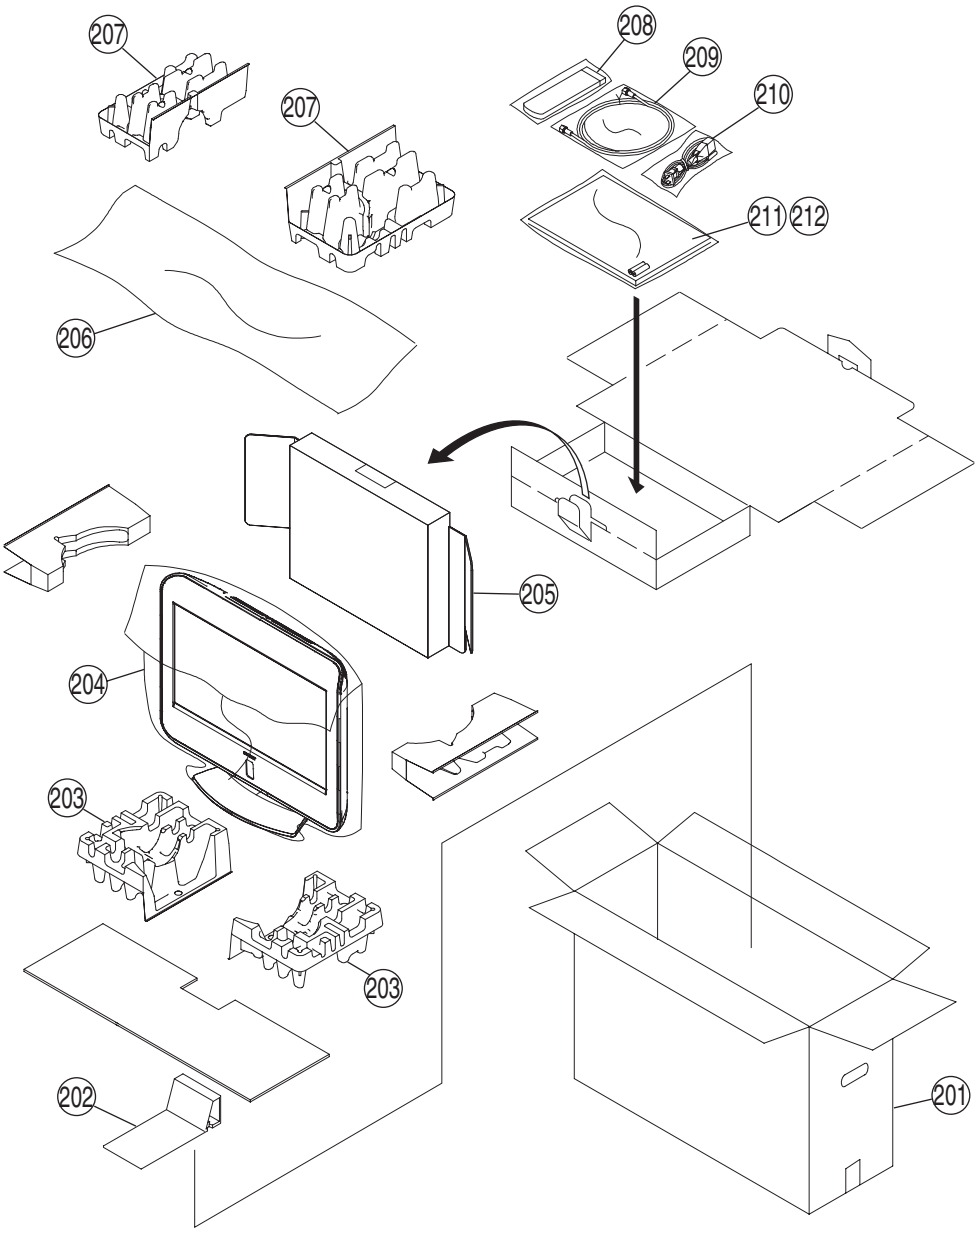

REF. No.		PART No.	DESCRIPTIONRE	MARK
201	*	2-109-221-01	INDIVIDUAL CARTON	
202	*	2-176-407-01	PAD,STAND	
203	*	2-176-405-01	CUSHION(LOWER)	
204	*	4-101-087-02	BAG PROTECTION CROSS	
205	*	2-176-406-01	BOX,ACCESORRY	
206	*	4-091-883-01	SHEET PROTECTION	
207	*	2-176-404-01	CUSHION(UPPER)	
208		1-478-943-11	REMOTE COMMNDER(RM-Y1109)	
209		1-757-319-52	CABLE,COAXIAL(WITH F PLUG)	
210	⚠	1-827-804-11	CORD,POWER	

REF. No.	PART No.	DESCRIPTIONRE	MARK
211	2-177-915-01	GUIDE,QUICK SETUP(UC)	
	2-177-915-11	GUIDE,QUICK SETUP(FR)	
	2-177-915-21	GUIDE,QUICK SETUP(ES)	
212	2-176-244-11	MANUAL,INSTRUCTION(UC)	
	2-176-244-21	MANUAL,INSTRUCTION(FR)	
	2-176-244-31	MANUAL,INSTRUCTION(ES)	

SECTION 5
ELECTRICAL PARTS LIST

NOTE:

The components identified ⚠ marked are critical for safety.
Replace only with the part number specified.

Les composants identifiés par la marque ⚠ sont critiques pour la sécurité.
Ne les remplacer que par une pièce portant le numéro spécifié.

When indicating parts by reference number, please include the board name.

- All variable and adjustable resistors have characteristic curve B, unless otherwise noted.
- Items marked " * " are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

RESISTORS
- All resistors are in ohms
- F : nonflammable

No.	#	Board	Type	⚠/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
1		A1	CAPACITOR		C2514	1-109-982-11	CERAMIC CHIP 1UF 10.00% 10V		
2		A1	CAPACITOR		C2515	1-100-159-91	CERAMIC CHIP 22UF 10% 6.3V		
3		A1	CAPACITOR		C2516	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4		A1	CAPACITOR		C2517	1-100-159-91	CERAMIC CHIP 22UF 10% 6.3V		
5		A1	CAPACITOR		C2518	1-126-394-11	ELECT CHIP 10UF 20.00% 16V		
6		A1	CAPACITOR		C2519	1-125-891-11	CERAMIC CHIP 0.47UF 10.00% 10V		
7		A1	CAPACITOR		C2520	1-125-891-11	CERAMIC CHIP 0.47UF 10.00% 10V		
8		A1	CAPACITOR		C2521	1-131-661-21	ELECT CHIP 100UF 20% 10V		
9		A1	CAPACITOR		C2522	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
10		A1	CAPACITOR		C2523	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
11		A1	CAPACITOR		C2524	1-131-661-21	ELECT CHIP 100UF 20% 10V		
12		A1	CAPACITOR		C2532	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
13		A1	CAPACITOR		C2533	1-162-966-11	CERAMIC CHIP 0.0022UF 10.00% 50V		
14		A1	CAPACITOR		C2540	1-125-837-91	CERAMIC CHIP 1UF 10% 6.3V		
15		A1	CAPACITOR		C2542	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
16		A1	CAPACITOR		C2545	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
17		A1	CAPACITOR		C2555	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
18		A1	CAPACITOR		C2560	1-126-394-11	ELECT CHIP 10UF 20.00% 16V		
19		A1	CAPACITOR		C2563	1-164-360-11	CERAMIC CHIP 0.1UF 16V		
20		A1	CAPACITOR		C2580	1-125-891-11	CERAMIC CHIP 0.47UF 10.00% 10V		
21		A1	CAPACITOR		C2581	1-125-891-11	CERAMIC CHIP 0.47UF 10.00% 10V		
22		A1	CAPACITOR		C2582	1-126-394-11	ELECT CHIP 10UF 20.00% 16V		
23		A1	CAPACITOR		C2584	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
24		A1	CAPACITOR		C2585	1-128-416-11	ELECT CHIP 100UF 20.00% 16V		
25		A1	CAPACITOR		C2587	1-125-891-11	CERAMIC CHIP 0.47UF 10.00% 10V		
26		A1	CAPACITOR		C2588	1-125-891-11	CERAMIC CHIP 0.47UF 10.00% 10V		
27		A1	CAPACITOR		C2589	1-125-891-11	CERAMIC CHIP 0.47UF 10.00% 10V		
28		A1	CAPACITOR		C2590	1-125-891-11	CERAMIC CHIP 0.47UF 10.00% 10V		
29		A1	CAPACITOR		C2632	1-127-692-11	CERAMIC CHIP 10UF 10% 16V		
30		A1	CAPACITOR		C2633	1-127-692-11	CERAMIC CHIP 10UF 10% 16V		
31		A1	CAPACITOR		C2634	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
32		A1	CAPACITOR		C2635	1-127-692-11	CERAMIC CHIP 10UF 10% 16V		
33		A1	CAPACITOR		C2636	1-127-692-11	CERAMIC CHIP 10UF 10% 16V		
34		A1	CAPACITOR		C2637	1-127-692-11	CERAMIC CHIP 10UF 10% 16V		
35		A1	CAPACITOR		C2638	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
36		A1	CAPACITOR		C2655	1-164-315-11	CERAMIC CHIP 470PF 5.00% 50V		
37		A1	CAPACITOR		C2803	1-165-112-11	CERAMIC CHIP 0.33UF 16V		
38		A1	CAPACITOR		C2804	1-165-112-11	CERAMIC CHIP 0.33UF 16V		
39		A1	CAPACITOR		C2807	1-164-346-11	CERAMIC CHIP 1UF 16V		
40		A1	CAPACITOR		C2808	1-164-346-11	CERAMIC CHIP 1UF 16V		
41		A1	CAPACITOR		C2809	1-135-346-21	ELECT CHIP 39UF 20% 16V		
42		A1	CAPACITOR		C2810	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
43		A1	CAPACITOR		C2814	1-115-566-11	CERAMIC CHIP 4.7UF 10.00% 10V		
44		A1	CAPACITOR		C2816	1-115-566-11	CERAMIC CHIP 4.7UF 10.00% 10V		
45		A1	CAPACITOR		C2817	1-165-875-11	CERAMIC CHIP 10UF 10% 10V		
46		A1	CAPACITOR		C2818	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
47		A1	CAPACITOR		C2819	1-165-875-11	CERAMIC CHIP 10UF 10% 10V		
48		A1	CAPACITOR		C2820	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
49		A1	CAPACITOR		C4601	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
50		A1	CAPACITOR		C4602	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
51		A1	CAPACITOR		C4603	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
52		A1	CAPACITOR		C4604	1-162-923-11	CERAMIC CHIP 47PF 5.00% 50V		
53		A1	CAPACITOR		C4605	1-164-227-11	CERAMIC CHIP 0.022UF 10.00% 25V		
54		A1	CAPACITOR		C4606	1-164-004-11	CERAMIC CHIP 0.1UF 10.00% 25V		
55		A1	CAPACITOR		C4607	1-127-573-11	CERAMIC CHIP 1UF 10% 16V		
56		A1	CAPACITOR		C4608	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
57		A1	CAPACITOR		C4609	1-164-245-11	CERAMIC CHIP 0.015UF 10.00% 25V		
58		A1	CAPACITOR		C4610	1-162-969-11	CERAMIC CHIP 0.0068UF 10.00% 25V		
59		A1	CAPACITOR		C4612	1-162-968-11	CERAMIC CHIP 0.0047UF 10.00% 50V		
60		A1	CAPACITOR		C4613	1-127-760-11	CERAMIC CHIP 4.7UF 10% 6.3V		
61		A1	CAPACITOR		C4614	1-164-004-11	CERAMIC CHIP 0.1UF 10.00% 25V		
62		A1	CAPACITOR		C4615	1-164-004-11	CERAMIC CHIP 0.1UF 10.00% 25V		
63		A1	CAPACITOR		C4616	1-127-760-11	CERAMIC CHIP 4.7UF 10% 6.3V		
64		A1	CAPACITOR		C4617	1-127-760-11	CERAMIC CHIP 4.7UF 10% 6.3V		
65		A1	CAPACITOR		C4618	1-127-738-91	CERAMIC CHIP 4.7UF 10% 25V		
66		A1	CAPACITOR		C4619	1-137-894-21	ELECT CHIP 470UF 20% 25V		
67		A1	CAPACITOR		C4620	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
68		A1	CAPACITOR		C4621	1-126-396-11	ELECT CHIP 47UF 20.00% 16V		
69		A1	CAPACITOR		C4622	1-128-536-11	ELECT CHIP 100UF 20.00% 25V		
70		A1	CAPACITOR		C4623	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
71		A1	CAPACITOR		C4624	1-164-004-11	CERAMIC CHIP 0.1UF 10.00% 25V		
72		A1	CAPACITOR		C4625	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
73		A1	CAPACITOR		C4626	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
74		A1	CAPACITOR		C4627	1-126-396-11	ELECT CHIP 47UF 20.00% 16V		

No.	#	Board	Type	⚠/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
75		A1	CAPACITOR		C4628	1-128-360-11	ELECT CHIP 220UF 20.00% 10V		
76		A1	CAPACITOR		C4629	1-135-960-91	CERAMIC CHIP 10UF 10% 25V		
77		A1	CAPACITOR		C4630	1-135-960-91	CERAMIC CHIP 10UF 10% 25V		
78		A1	CAPACITOR		C4631	1-135-346-21	ELECT CHIP 39UF 20% 16V		
79		A1	CAPACITOR		C4632	1-135-346-21	ELECT CHIP 39UF 20% 16V		
80		A1	CAPACITOR		C4633	1-137-894-21	ELECT CHIP 470UF 20% 25V		
81		A1	CAPACITOR		C4634	1-137-894-21	ELECT CHIP 470UF 20% 25V		
82		A1	CAPACITOR		C4635	1-127-760-11	CERAMIC CHIP 4.7UF 10% 6.3V		
83		A1	CAPACITOR		C4636	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
84		A1	CAPACITOR		C4637	1-127-573-11	CERAMIC CHIP 1UF 10% 16V		
85		A1	CAPACITOR		C4639	1-128-398-11	ELECT CHIP 220UF 20% 16V		
86		A1	CAPACITOR		C4640	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
87		A1	CAPACITOR		C4641	1-127-573-11	CERAMIC CHIP 1UF 10% 16V		
88		A1	CAPACITOR		C4646	1-162-964-11	CERAMIC CHIP 0.001UF 10.00% 50V		
89		A1	CAPACITOR		C4647	1-128-401-11	ELECT CHIP 100UF 20% 25V		
90		A1	CAPACITOR		C4648	1-126-391-11	ELECT CHIP 47UF 20.00% 6.3V		
91		A1	CAPACITOR		C4651	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
92		A1	CAPACITOR		C4652	1-162-926-11	CERAMIC CHIP 82PF 5.00% 50V		
93		A1	CAPACITOR		C4670	1-131-661-21	ELECT CHIP 100UF 20% 10V		
94		A1	CAPACITOR		C6449	1-115-339-11	CERAMIC CHIP 0.1UF 10.00% 50V		
95		A1	CAPACITOR		C6450	1-126-404-11	ELECT CHIP 4.7UF 20.00% 50V		
96		A1	CAPACITOR		C6451	1-126-404-11	ELECT CHIP 4.7UF 20.00% 50V		
97		A1	CAPACITOR		C6452	1-127-715-91	CERAMIC CHIP 0.22UF 10% 16V		
98		A1	CAPACITOR		C6453	1-162-964-11	CERAMIC CHIP 0.001UF 10.00% 50V		
99		A1	CAPACITOR		C6454	1-162-968-11	CERAMIC CHIP 0.0047UF 10.00% 50V		
100		A1	CAPACITOR		C6455	1-126-396-11	ELECT CHIP 47UF 20.00% 16V		
101		A1	CAPACITOR		C6456	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
102		A1	CAPACITOR		C6458	1-131-661-21	ELECT CHIP 100UF 20% 10V		
103		A1	CAPACITOR		C6459	1-162-995-11	CERAMIC CHIP 0.022UF 50V		
104		A1	CAPACITOR		C6460	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
105		A1	CAPACITOR		C6461	1-126-396-11	ELECT CHIP 47UF 20.00% 16V		
106		A1	CAPACITOR		C6462	1-126-396-11	ELECT CHIP 47UF 20.00% 16V		
107		A1	CAPACITOR		C6464	1-126-394-11	ELECT CHIP 10UF 20.00% 16V		
108		A1	CAPACITOR		C7001	1-125-889-91	CERAMIC CHIP 2.2UF 10% 10V		
109		A1	CAPACITOR		C7002	1-126-396-11	ELECT CHIP 47UF 20.00% 16V		
110		A1	CAPACITOR		C7003	1-107-890-11	ELECT 2200UF 20.00% 25V		
111		A1	CAPACITOR		C7004	1-115-339-11	CERAMIC CHIP 0.1UF 10.00% 50V		
112		A1	CAPACITOR		C7006	1-126-394-11	ELECT CHIP 10UF 20.00% 16V		
113		A1	CAPACITOR		C7007	1-107-823-11	CERAMIC CHIP 0.47UF 10.00% 16V		
114		A1	CAPACITOR		C7008	1-137-894-21	ELECT CHIP 470UF 20% 25V		
115		A1	CAPACITOR		C7009	1-125-889-91	CERAMIC CHIP 2.2UF 10% 10V		
116		A1	CAPACITOR		C7010	1-125-889-91	CERAMIC CHIP 2.2UF 10% 10V		
117		A1	CAPACITOR		C7011	1-126-396-11	ELECT CHIP 47UF 20.00% 16V		
118		A1	CAPACITOR		C7012	1-126-394-11	ELECT CHIP 10UF 20.00% 16V		
119		A1	CAPACITOR		C7013	1-125-889-91	CERAMIC CHIP 2.2UF 10% 10V		
120		A1	CAPACITOR		C7014	1-126-394-11	ELECT CHIP 10UF 20.00% 16V		
121		A1	CAPACITOR		C7015	1-126-396-11	ELECT CHIP 47UF 20.00% 16V		
122		A1	CAPACITOR		C7016	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
123		A1	CAPACITOR		C7017	1-127-715-91	CERAMIC CHIP 0.22UF 10% 16V		
124		A1	CAPACITOR		C7018	1-162-966-11	CERAMIC CHIP 0.0022UF 10.00% 50V		
125		A1	CAPACITOR		C7019	1-162-966-11	CERAMIC CHIP 0.0022UF 10.00% 50V		
126		A1	CAPACITOR		C7020	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
127		A1	CAPACITOR		C7021	1-162-966-11	CERAMIC CHIP 0.0022UF 10.00% 50V		
128		A1	CAPACITOR		C7022	1-127-715-91	CERAMIC CHIP 0.22UF 10% 16V		
129		A1	CAPACITOR		C7023	1-125-889-91	CERAMIC CHIP 2.2UF 10% 10V		
130		A1	CAPACITOR		C7024	1-127-573-11	CERAMIC CHIP 1UF 10% 16V		
131		A1	CAPACITOR		C7025	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
132		A1	CAPACITOR		C7026	1-162-966-11	CERAMIC CHIP 0.0022UF 10.00% 50V		
133		A1	CAPACITOR		C7027	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
134		A1	CAPACITOR		C7028	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
135		A1	CAPACITOR		C7029	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
136		A1	CAPACITOR		C7030	1-164-315-11	CERAMIC CHIP 470PF 5.00% 50V		
137		A1	CAPACITOR		C7031	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
138		A1	CAPACITOR		C7032	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
139		A1	CAPACITOR		C7033	1-125-889-91	CERAMIC CHIP 2.2UF 10% 10V		
140		A1	CAPACITOR		C7034	1-107-823-11	CERAMIC CHIP 0.47UF 10.00% 16V		
141		A1	CAPACITOR		C7035	1-165-585-21	ELECT CHIP 47UF 20% 25V		
142		A1	CAPACITOR		C7036	1-126-394-11	ELECT CHIP 10UF 20.00% 16V		
143		A1	CAPACITOR		C7037	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
144		A1	CAPACITOR		C7038	1-164-315-11	CERAMIC CHIP 470PF 5.00% 50V		
145		A1	CAPACITOR		C7039	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
146		A1	CAPACITOR		C7040	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
147		A1	CAPACITOR		C7041	1-115-339-11	CERAMIC CHIP 0.1UF 10.00% 50V		
148		A1	CAPACITOR		C7042	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		

No.	#	Board	Type	⚠/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
149		A1	CAPACITOR		C7043	1-107-890-11	ELECT 2200UF 20.00% 25V		
150		A1	CAPACITOR		C7044	1-126-396-11	ELECT CHIP 47UF 20.00% 16V		
151		A1	CAPACITOR		C7045	1-127-573-11	CERAMIC CHIP 1UF 10% 16V		
152		A1	CAPACITOR		C7046	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
153		A1	CAPACITOR		C7047	1-162-966-11	CERAMIC CHIP 0.0022UF 10.00% 50V		
154		A1	CAPACITOR		C7048	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
155		A1	CAPACITOR		C7049	1-162-966-11	CERAMIC CHIP 0.0022UF 10.00% 50V		
156		A1	CAPACITOR		C7050	1-127-715-91	CERAMIC CHIP 0.22UF 10% 16V		
157		A1	CAPACITOR		C7051	1-115-339-11	CERAMIC CHIP 0.1UF 10.00% 50V		
158		A1	CAPACITOR		C7052	1-127-715-91	CERAMIC CHIP 0.22UF 10% 16V		
159		A1	CAPACITOR		C7056	1-107-914-11	ELECT 1000UF 20.00% 50V		
160		A1	CAPACITOR		C7057	1-107-914-11	ELECT 1000UF 20.00% 50V		
161		A1	CAPACITOR		C7058	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
162		A1	CAPACITOR		C7059	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
163		A1	CAPACITOR		C7060	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
164		A1	CAPACITOR		C7061	1-164-173-11	CERAMIC CHIP 0.0039UF 10.00% 50V		
165		A1	CAPACITOR		C7062	1-125-889-91	CERAMIC CHIP 2.2UF 10% 10V		
166		A1	CAPACITOR		C7063	1-125-889-91	CERAMIC CHIP 2.2UF 10% 10V		
167		A1	CAPACITOR		C7064	1-125-889-91	CERAMIC CHIP 2.2UF 10% 10V		
168		A1	CAPACITOR		C7070	1-127-692-11	CERAMIC CHIP 10UF 10% 16V		
169		A1	CAPACITOR		C7072	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
170		A1	CAPACITOR		C7073	1-127-692-11	CERAMIC CHIP 10UF 10% 16V		
171		A1	CAPACITOR		C7074	1-127-573-11	CERAMIC CHIP 1UF 10% 16V		
172		A1	CAPACITOR		C7075	1-126-396-11	ELECT CHIP 47UF 20.00% 16V		
173		A1	CAPACITOR		C7076	1-165-585-21	ELECT CHIP 47UF 20% 25V		
174		A1	CAPACITOR		C7078	1-127-573-11	CERAMIC CHIP 1UF 10% 16V		
175		A1	CAPACITOR		C7079	1-110-501-11	CERAMIC CHIP 0.33UF 10.00% 16V		
176		A1	CAPACITOR		C7080	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
177		A1	CAPACITOR		C7081	1-126-394-11	ELECT CHIP 10UF 20.00% 16V		
178		A1	CAPACITOR		C7082	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
179		A1	CAPACITOR		C7083	1-162-960-11	CERAMIC CHIP 220PF 10.00% 50V		
180		A1	CAPACITOR		C7084	1-162-962-11	CERAMIC CHIP 470PF 10.00% 50V		
181		A1	CAPACITOR		C7085	1-115-339-11	CERAMIC CHIP 0.1UF 10.00% 50V		
182		A1	CAPACITOR		C7086	1-165-585-21	ELECT CHIP 47UF 20% 25V		
183		A1	CAPACITOR		C7087	1-107-823-11	CERAMIC CHIP 0.47UF 10.00% 16V		
184		A1	CAPACITOR		C7088	1-110-501-11	CERAMIC CHIP 0.33UF 10.00% 16V		
185		A1	CAPACITOR		C7089	1-162-962-11	CERAMIC CHIP 470PF 10.00% 50V		
186		A1	CAPACITOR		C7090	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
187		A1	CAPACITOR		C7091	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
188		A1	CAPACITOR		C7092	1-125-889-91	CERAMIC CHIP 2.2UF 10% 10V		
189		A1	CAPACITOR		C7095	1-115-339-11	CERAMIC CHIP 0.1UF 10.00% 50V		
190		A1	CAPACITOR		C7098	1-126-396-11	ELECT CHIP 47UF 20.00% 16V		
191		A1	CAPACITOR		C7100	1-164-173-11	CERAMIC CHIP 0.0039UF 10.00% 50V		
192		A1	CAPACITOR		C7102	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
193		A1	CAPACITOR		C7103	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
194		A1	CAPACITOR		C7104	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
195		A1	CAPACITOR		C7105	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
196		A1	CAPACITOR		C7106	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
197		A1	CAPACITOR		C7107	1-165-629-91	CERAMIC CHIP 1UF 10% 50V		
198		A1	CAPACITOR		C7108	1-127-692-11	CERAMIC CHIP 10UF 10% 16V		
199		A1	CAPACITOR		C7109	1-164-677-11	CERAMIC CHIP 0.033UF 10.00% 16V		
200		A1	CAPACITOR		C7111	1-127-573-11	CERAMIC CHIP 1UF 10% 16V		
201		A1	CAPACITOR		C7112	1-127-573-11	CERAMIC CHIP 1UF 10% 16V		
202		A1	CAPACITOR		C7113	1-128-528-11	ELECT 470UF 20.00% 25V		
203		A1	CAPACITOR		C7114	1-128-526-11	ELECT 100UF 20.00% 25V		
204		A1	CAPACITOR		C7115	1-115-339-11	CERAMIC CHIP 0.1UF 10.00% 50V		
205		A1	CAPACITOR		C7116	1-165-585-21	ELECT CHIP 47UF 20% 25V		
206		A1	CAPACITOR		C7400	1-126-405-11	ELECT CHIP 10UF 20.00% 50V		
207		A1	CAPACITOR		C7401	1-126-405-11	ELECT CHIP 10UF 20.00% 50V		
208		A1	CAPACITOR		C7402	1-126-404-11	ELECT CHIP 4.7UF 20.00% 50V		
209		A1	CAPACITOR		C7403	1-126-405-11	ELECT CHIP 10UF 20.00% 50V		
210		A1	CAPACITOR		C7404	1-126-404-11	ELECT CHIP 4.7UF 20.00% 50V		
211		A1	CAPACITOR		C7405	1-126-405-11	ELECT CHIP 10UF 20.00% 50V		
212		A1	CAPACITOR		C9002	1-115-566-11	CERAMIC CHIP 4.7UF 10.00% 10V		
213		A1	CAPACITOR		C9003	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
214		A1	CAPACITOR		C9004	1-127-573-11	CERAMIC CHIP 1UF 10% 16V		
215		A1	CAPACITOR		C9005	1-127-573-11	CERAMIC CHIP 1UF 10% 16V		
216		A1	CAPACITOR		C9008	1-127-573-11	CERAMIC CHIP 1UF 10% 16V		
217		A1	CAPACITOR		C9009	1-127-573-11	CERAMIC CHIP 1UF 10% 16V		
218		A1	CAPACITOR		C9010	1-127-573-11	CERAMIC CHIP 1UF 10% 16V		
219		A1	CAPACITOR		C9011	1-127-573-11	CERAMIC CHIP 1UF 10% 16V		
220		A1	CAPACITOR		C9012	1-115-566-11	CERAMIC CHIP 4.7UF 10.00% 10V		
221		A1	CAPACITOR		C9018	1-127-573-11	CERAMIC CHIP 1UF 10% 16V		
222		A1	CAPACITOR		C9019	1-127-573-11	CERAMIC CHIP 1UF 10% 16V		

No.	#	Board	Type	⚠/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
223		A1	CAPACITOR		C9020	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
224		A1	CAPACITOR		C9021	1-115-566-11	CERAMIC CHIP 4.7UF 10.00% 10V		
225		A1	CAPACITOR		C9022	1-125-891-11	CERAMIC CHIP 0.47UF 10.00% 10V		
226		A1	CAPACITOR		C9030	1-115-566-11	CERAMIC CHIP 4.7UF 10.00% 10V		
227		A1	CAPACITOR		C9031	1-125-891-11	CERAMIC CHIP 0.47UF 10.00% 10V		
228		A1	CONNECTOR		CN2801	1-774-769-11	CONNECTOR, FFC/FPC 25P		
229		A1	CONNECTOR		CN2802	1-774-769-11	CONNECTOR, FFC/FPC 25P		
230		A1	CONNECTOR		CN4601	1-794-519-21	PIN, CONNECTOR (PC BOARD) 14P		
231		A1	CONNECTOR		CN4603	1-774-769-11	CONNECTOR, FFC/FPC 25P		
232		A1	CONNECTOR	*	CN4604	1-573-768-21	PIN, CONNECTOR (1.5MM) (SMD)5P		
233		A1	CONNECTOR		CN4605	1-779-884-11	CONNECTOR 4P		
234		A1	CONNECTOR		CN6450	1-766-715-21	CONNECTOR, BOARD TO BOARD 10P		
235		A1	CONNECTOR		CN6451	1-766-715-21	CONNECTOR, BOARD TO BOARD 10P		
236		A1	CONNECTOR		CN7001	1-573-290-21	PIN, CONNECTOR (1.5MM) (SMD)4P		
237		A1	CONNECTOR	*	CN7002	1-764-250-11	PIN, CONNECTOR (PC BOARD) 4P		
238		A1	CONNECTOR	*	CN9003	1-785-532-11	PIN, CONNECTOR (PC BOARD) 14P		
239		A1	CONNECTOR		CN9007	1-766-382-21	PIN, CONNECTOR (1.5MM)(SMD)10P		
240		A1	DIODE		D4602	8-719-081-34	DIODE RB160M-30TR		
241		A1	DIODE		D4603	8-719-081-34	DIODE RB160M-30TR		
242		A1	DIODE		D4604	8-719-080-41	DIODE RB063L-30TE25		
243		A1	DIODE		D4605	6-500-294-01	DIODE PTZ-TE25-3.9B		
244		A1	DIODE		D4606	8-719-068-71	DIODE PTZ-TE25-13A		
245		A1	DIODE		D4607	8-719-083-63	DIODE UDZSTE-1713B		
246		A1	DIODE		D4609	8-719-081-99	DIODE MM3Z13VT1		
247		A1	DIODE		D4611	8-719-081-97	DIODE MMDL914T1		
248		A1	DIODE		D4612	8-719-081-97	DIODE MMDL914T1		
249		A1	DIODE		D4649	8-719-078-04	DIODE EC31QS03L-TE12L		
250		A1	DIODE		D4650	8-719-078-04	DIODE EC31QS03L-TE12L		
251		A1	DIODE		D4651	8-719-078-04	DIODE EC31QS03L-TE12L		
252		A1	DIODE		D4652	8-719-078-04	DIODE EC31QS03L-TE12L		
253		A1	DIODE		D4653	8-719-078-04	DIODE EC31QS03L-TE12L		
254		A1	DIODE		D4654	8-719-078-04	DIODE EC31QS03L-TE12L		
255		A1	DIODE		D4655	8-719-078-04	DIODE EC31QS03L-TE12L		
256		A1	DIODE		D4656	8-719-078-04	DIODE EC31QS03L-TE12L		
257		A1	DIODE		D4657	8-719-078-04	DIODE EC31QS03L-TE12L		
258		A1	DIODE		D4658	8-719-078-04	DIODE EC31QS03L-TE12L		
259		A1	DIODE		D4659	8-719-078-04	DIODE EC31QS03L-TE12L		
260		A1	DIODE		D4660	8-719-078-04	DIODE EC31QS03L-TE12L		
261		A1	DIODE		D4661	8-719-078-04	DIODE EC31QS03L-TE12L		
262		A1	DIODE		D4662	8-719-078-04	DIODE EC31QS03L-TE12L		
263		A1	DIODE		D6448	8-719-064-03	DIODE HZU16B2TRF		
264		A1	DIODE		D6449	8-719-064-03	DIODE HZU16B2TRF		
265		A1	DIODE		D6450	8-719-081-97	DIODE MMDL914T1		
266		A1	DIODE		D7006	8-719-081-97	DIODE MMDL914T1		
267		A1	DIODE		D7007	8-719-070-23	DIODE EP05Q03L-TE8L3		
268		A1	DIODE		D7008	8-719-085-31	DIODE MM3Z2V4T1		
269		A1	DIODE		D7009	8-719-085-31	DIODE MM3Z2V4T1		
270		A1	DIODE		D7010	8-719-085-31	DIODE MM3Z2V4T1		
271		A1	DIODE		D7402	8-719-081-97	DIODE MMDL914T1		
272		A1	DIODE		D9005	8-719-977-28	DIODE DTZ10B		
273		A1	DIODE		D9006	8-719-977-28	DIODE DTZ10B		
274		A1	DIODE		D9007	8-719-977-28	DIODE DTZ10B		
275		A1	DIODE		D9010	8-719-977-28	DIODE DTZ10B		
276		A1	DIODE		D9011	8-719-977-28	DIODE DTZ10B		
277		A1	DIODE		D9016	8-719-977-28	DIODE DTZ10B		
278		A1	DIODE		D9020	8-719-977-28	DIODE DTZ10B		
279		A1	DIODE		D9021	8-719-977-28	DIODE DTZ10B		
280		A1	DIODE		D9022	8-719-977-28	DIODE DTZ10B		
281		A1	DIODE		D9023	8-719-977-28	DIODE DTZ10B		
282		A1	DIODE		D9024	8-719-977-28	DIODE DTZ10B		
283		A1	DIODE		D9027	8-719-977-28	DIODE DTZ10B		
284		A1	DIODE		D9028	8-719-977-28	DIODE DTZ10B		
285		A1	DIODE		D9029	8-719-977-28	DIODE DTZ10B		
286		A1	DIODE		D9030	8-719-977-28	DIODE DTZ10B		
287		A1	DIODE		D9031	8-719-977-28	DIODE DTZ10B		
288		A1	FERRITE BEAD		FB2510	1-414-445-11	FERRITE 0UH		
289		A1	FERRITE BEAD		FB2511	1-414-445-11	FERRITE 0UH		
290		A1	FERRITE BEAD		FB4601	1-469-775-21	FERRITE 0UH		
291		A1	FERRITE BEAD		FB4602	1-469-775-21	FERRITE 0UH		
292		A1	FERRITE BEAD		FB4603	1-469-775-21	FERRITE 0UH		
293		A1	FERRITE BEAD		FB4604	1-414-445-11	FERRITE 0UH		
294		A1	FERRITE BEAD		FB4605	1-469-775-21	FERRITE 0UH		
295		A1	FERRITE BEAD		FB4606	1-414-445-11	FERRITE 0UH		
296		A1	FERRITE BEAD		FB4609	1-469-775-21	FERRITE 0UH		

No.	#	Board	Type	⚠/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
297		A1	FERRITE BEAD		FB4625	1-469-869-21	FERRITE 0UH		
298		A1	FERRITE BEAD		FB4636	1-400-180-21	INDUCTOR 0UH		
299		A1	IC		IC2505	8-752-108-35	IC CXA2171AQ		
300		A1	IC		IC2506	8-759-660-21	IC SN74HCT02APWR		
301		A1	IC		IC2507	8-759-533-85	IC L88M05T-FA-TL		
302		A1	IC		IC2511	8-759-548-56	IC M52055FP		
303		A1	IC		IC2803	8-752-087-76	IC CXA2089Q-T6		
304		A1	IC		IC4601	6-702-510-01	IC TPS5120DBTR		
305		A1	IC		IC4602	8-759-394-36	IC BA09T		
306		A1	IC		IC4603	8-759-450-47	IC BA05T		
307		A1	IC		IC7001	8-759-460-79	IC BA09FP-E2		
308		A1	IC		IC7002	8-759-359-49	IC NJM3414AV(TE2)		
309		A1	IC		IC7003	6-702-817-12	IC BD3869AF-E2		
310		A1	IC		IC7004	8-759-278-58	IC NJM4558V-TE2		
311		A1	IC		IC7005	8-759-278-58	IC NJM4558V-TE2		
312		A1	IC		IC7006	8-759-278-58	IC NJM4558V-TE2		
313		A1	IC		IC7007	6-705-560-01	IC TDA7263		
314		A1	IC		IC7009	8-759-278-58	IC NJM4558V-TE2		
315		A1	IC		IC7011	6-701-096-01	IC NJM2700FJ1		
316		A1	IC		IC7400	8-759-278-58	IC NJM4558V-TE2		
317		A1	JACK		J7400	1-794-623-21	JACK, PIN 2P		
318		A1	JACK		J9002	1-794-623-21	JACK, PIN 2P		
319		A1	JACK		J9003	1-779-037-11	JACK, PIN 3P		
320		A1	COIL		L2505	1-469-525-91	INDUCTOR 10UH		
321		A1	COIL		L2509	1-469-527-91	INDUCTOR 47UH		
322		A1	COIL		L2520	1-469-525-91	INDUCTOR 10UH		
323		A1	COIL		L2802	1-469-526-91	INDUCTOR 22UH		
324		A1	COIL		L4601	1-456-065-21	INDUCTOR 22UH		
325		A1	COIL		L4602	1-424-922-21	INDUCTOR 10UH		
326		A1	COIL		L4603	1-406-661-21	INDUCTOR 22UH		
327		A1	COIL		L4604	1-412-533-21	INDUCTOR 47UH		
328		A1	COIL		L6451	1-412-030-11	INDUCTOR 22UH		
329		A1	COIL		L6452	1-412-030-11	INDUCTOR 22UH		
330		A1	COIL		L6453	1-412-030-11	INDUCTOR 22UH		
331		A1	COIL		L6454	1-412-030-11	INDUCTOR 22UH		
332		A1	IC LINK	⚠	PS4601	1-533-651-11	IC LINK 1.6A 24V		
333		A1	IC LINK	⚠	PS4602	1-576-731-21	IC LINK 2.5A 24V		
334		A1	IC LINK	⚠	PS6450	1-533-674-11	IC LINK 0.5A 50V		
335		A1	IC LINK	⚠	PS7001	1-576-390-91	IC LINK 2.5A 50V		
336		A1	TRANSISTOR		Q2504	6-550-586-01	TRANSISTOR 2PA1576R-115		
337		A1	TRANSISTOR		Q2533	6-550-585-01	TRANSISTOR 2PC4081R-115		
338		A1	TRANSISTOR		Q2535	6-550-585-01	TRANSISTOR 2PC4081R-115		
339		A1	TRANSISTOR		Q2537	8-729-122-63	TRANSISTOR 2SA1226-E4		
340		A1	TRANSISTOR		Q2538	8-729-122-63	TRANSISTOR 2SA1226-E4		
341		A1	TRANSISTOR		Q2539	8-729-122-63	TRANSISTOR 2SA1226-E4		
342		A1	TRANSISTOR		Q2540	8-729-117-73	TRANSISTOR 2SC4178-F14		
343		A1	TRANSISTOR		Q2541	8-729-117-73	TRANSISTOR 2SC4178-F14		
344		A1	TRANSISTOR		Q2542	8-729-117-73	TRANSISTOR 2SC4178-F14		
345		A1	TRANSISTOR		Q2556	8-729-122-63	TRANSISTOR 2SA1226-E4		
346		A1	TRANSISTOR		Q2557	8-729-122-63	TRANSISTOR 2SA1226-E4		
347		A1	TRANSISTOR		Q2558	8-729-025-28	TRANSISTOR 2SK1828		
348		A1	TRANSISTOR		Q2559	8-729-025-28	TRANSISTOR 2SK1828		
349		A1	TRANSISTOR		Q2560	8-729-122-63	TRANSISTOR 2SA1226-E4		
350		A1	TRANSISTOR		Q2801	6-550-586-01	TRANSISTOR 2PA1576R-115		
351		A1	TRANSISTOR		Q2802	6-550-586-01	TRANSISTOR 2PA1576R-115		
352		A1	TRANSISTOR		Q4601	8-729-054-66	TRANSISTOR HAT2071R-EL		
353		A1	TRANSISTOR		Q4602	8-729-054-66	TRANSISTOR HAT2071R-EL		
354		A1	TRANSISTOR		Q4603	8-729-053-79	TRANSISTOR IRF7901D1-TR		
355		A1	TRANSISTOR		Q4604	6-550-586-01	TRANSISTOR 2PA1576R-115		
356		A1	TRANSISTOR		Q4605	8-729-054-36	TRANSISTOR UPA1716G-E2		
357		A1	TRANSISTOR		Q4606	8-729-907-00	TRANSISTOR DTC114EU		
358		A1	TRANSISTOR		Q4608	6-550-076-01	TRANSISTOR MUN5213T1		
359		A1	TRANSISTOR		Q4609	6-550-585-01	TRANSISTOR 2PC4081R-115		
360		A1	TRANSISTOR		Q6450	6-550-549-01	TRANSISTOR DTC114EUAFT106		
361		A1	TRANSISTOR		Q6451	6-550-549-01	TRANSISTOR DTC114EUAFT106		
362		A1	TRANSISTOR		Q6452	6-550-585-01	TRANSISTOR 2PC4081R-115		
363		A1	TRANSISTOR		Q6453	6-550-586-01	TRANSISTOR 2PA1576R-115		
364		A1	TRANSISTOR		Q6454	6-550-585-01	TRANSISTOR 2PC4081R-115		
365		A1	TRANSISTOR		Q6455	6-550-585-01	TRANSISTOR 2PC4081R-115		
366		A1	TRANSISTOR		Q6456	6-550-586-01	TRANSISTOR 2PA1576R-115		
367		A1	TRANSISTOR		Q6702	6-550-076-01	TRANSISTOR MUN5213T1		
368		A1	TRANSISTOR		Q7001	8-729-920-21	TRANSISTOR DTC314TK-T-146		
369		A1	TRANSISTOR		Q7002	8-729-920-21	TRANSISTOR DTC314TK-T-146		
370		A1	TRANSISTOR		Q7003	8-729-422-33	TRANSISTOR 2SD601A-Q-TX		

No.	#	Board	Type	⚠/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
371		A1	TRANSISTOR		Q7004	8-729-209-15	TRANSISTOR 2SD2012		
372		A1	TRANSISTOR		Q7005	8-729-920-21	TRANSISTOR DTC314TK-T-146		
373		A1	TRANSISTOR		Q7006	8-729-920-21	TRANSISTOR DTC314TK-T-146		
374		A1	TRANSISTOR		Q7007	6-550-076-01	TRANSISTOR MUN5213T1		
375		A1	TRANSISTOR		Q7008	6-550-585-01	TRANSISTOR 2PC4081R-115		
376		A1	TRANSISTOR		Q7009	8-729-907-00	TRANSISTOR DTC114EU		
377		A1	TRANSISTOR		Q7011	6-550-076-01	TRANSISTOR MUN5213T1		
378		A1	TRANSISTOR		Q7012	8-729-920-21	TRANSISTOR DTC314TK-T-146		
379		A1	TRANSISTOR		Q7013	8-729-920-21	TRANSISTOR DTC314TK-T-146		
380		A1	TRANSISTOR		Q7106	6-550-076-01	TRANSISTOR MUN5213T1		
381		A1	TRANSISTOR		Q7107	6-550-076-01	TRANSISTOR MUN5213T1		
382		A1	TRANSISTOR		Q7400	8-729-044-58	TRANSISTOR SI2304DS-T1		
383		A1	TRANSISTOR		Q7401	8-729-044-58	TRANSISTOR SI2304DS-T1		
384		A1	TRANSISTOR		Q7402	6-550-076-01	TRANSISTOR MUN5213T1		
385		A1	TRANSISTOR		Q7403	6-550-076-01	TRANSISTOR MUN5213T1		
386		A1	TRANSISTOR		Q7404	6-550-585-01	TRANSISTOR 2PC4081R-115		
387		A1	TRANSISTOR		Q7405	6-550-585-01	TRANSISTOR 2PC4081R-115		
388		A1	TRANSISTOR		Q9002	8-729-025-28	TRANSISTOR 2SK1828		
389		A1	TRANSISTOR		Q9003	8-729-025-28	TRANSISTOR 2SK1828		
390		A1	RESISTOR		R2511	1-216-809-11	METAL CHIP 100 5% 1/10W		
391		A1	RESISTOR		R2512	1-216-809-11	METAL CHIP 100 5% 1/10W		
392		A1	RESISTOR		R2513	1-216-809-11	METAL CHIP 100 5% 1/10W		
393		A1	RESISTOR		R2515	1-216-864-11	SHORT CHIP 0		
394		A1	RESISTOR		R2519	1-216-805-11	METAL CHIP 47 5% 1/10W		
395		A1	RESISTOR		R2520	1-216-805-11	METAL CHIP 47 5% 1/10W		
396		A1	RESISTOR		R2521	1-216-851-11	METAL CHIP 330K 5% 1/10W		
397		A1	RESISTOR		R2534	1-218-716-11	METAL CHIP 10K 0.5% 1/10W		
398		A1	RESISTOR		R2539	1-216-797-11	METAL CHIP 10 5% 1/10W		
399		A1	RESISTOR		R2540	1-216-833-11	METAL CHIP 10K 5% 1/10W		
400		A1	RESISTOR		R2541	1-216-833-11	METAL CHIP 10K 5% 1/10W		
401		A1	RESISTOR		R2546	1-216-821-11	METAL CHIP 1K 5% 1/10W		
402		A1	RESISTOR		R2553	1-216-809-11	METAL CHIP 100 5% 1/10W		
403		A1	RESISTOR		R2562	1-216-827-11	METAL CHIP 3.3K 5% 1/10W		
404		A1	RESISTOR		R2563	1-216-827-11	METAL CHIP 3.3K 5% 1/10W		
405		A1	RESISTOR		R2564	1-216-809-11	METAL CHIP 100 5% 1/10W		
406		A1	RESISTOR		R2565	1-216-809-11	METAL CHIP 100 5% 1/10W		
407		A1	RESISTOR		R2566	1-216-864-11	SHORT CHIP 0		
408		A1	RESISTOR		R2572	1-216-805-11	METAL CHIP 47 5% 1/10W		
409		A1	RESISTOR		R2573	1-216-821-11	METAL CHIP 1K 5% 1/10W		
410		A1	RESISTOR		R2574	1-216-805-11	METAL CHIP 47 5% 1/10W		
411		A1	RESISTOR		R2575	1-216-821-11	METAL CHIP 1K 5% 1/10W		
412		A1	RESISTOR		R2576	1-216-805-11	METAL CHIP 47 5% 1/10W		
413		A1	RESISTOR		R2577	1-216-821-11	METAL CHIP 1K 5% 1/10W		
414		A1	RESISTOR		R2584	1-216-809-11	METAL CHIP 100 5% 1/10W		
415		A1	RESISTOR		R2585	1-216-809-11	METAL CHIP 100 5% 1/10W		
416		A1	RESISTOR		R2586	1-216-809-11	METAL CHIP 100 5% 1/10W		
417		A1	RESISTOR		R2587	1-216-809-11	METAL CHIP 100 5% 1/10W		
418		A1	RESISTOR		R2588	1-216-809-11	METAL CHIP 100 5% 1/10W		
419		A1	RESISTOR		R2589	1-216-809-11	METAL CHIP 100 5% 1/10W		
420		A1	RESISTOR		R2591	1-216-809-11	METAL CHIP 100 5% 1/10W		
421		A1	RESISTOR		R2664	1-216-809-11	METAL CHIP 100 5% 1/10W		
422		A1	RESISTOR		R2670	1-216-813-11	METAL CHIP 220 5% 1/10W		
423		A1	RESISTOR		R2671	1-216-813-11	METAL CHIP 220 5% 1/10W		
424		A1	RESISTOR		R2672	1-216-813-11	METAL CHIP 220 5% 1/10W		
425		A1	RESISTOR		R2679	1-216-805-11	METAL CHIP 47 5% 1/10W		
426		A1	RESISTOR		R2682	1-216-821-11	METAL CHIP 1K 5% 1/10W		
427		A1	RESISTOR		R2683	1-216-805-11	METAL CHIP 47 5% 1/10W		
428		A1	RESISTOR		R2686	1-216-821-11	METAL CHIP 1K 5% 1/10W		
429		A1	RESISTOR		R2687	1-216-817-11	METAL CHIP 470 5% 1/10W		
430		A1	RESISTOR		R2688	1-216-821-11	METAL CHIP 1K 5% 1/10W		
431		A1	RESISTOR		R2689	1-216-821-11	METAL CHIP 1K 5% 1/10W		
432		A1	RESISTOR		R2690	1-216-817-11	METAL CHIP 470 5% 1/10W		
433		A1	RESISTOR		R2691	1-216-821-11	METAL CHIP 1K 5% 1/10W		
434		A1	RESISTOR		R2692	1-216-821-11	METAL CHIP 1K 5% 1/10W		
435		A1	RESISTOR		R2693	1-216-821-11	METAL CHIP 1K 5% 1/10W		
436		A1	RESISTOR		R2694	1-216-817-11	METAL CHIP 470 5% 1/10W		
437		A1	RESISTOR		R2695	1-216-821-11	METAL CHIP 1K 5% 1/10W		
438		A1	RESISTOR		R2699	1-216-809-11	METAL CHIP 100 5% 1/10W		
439		A1	RESISTOR		R2707	1-216-809-11	METAL CHIP 100 5% 1/10W		
440		A1	RESISTOR		R2708	1-216-809-11	METAL CHIP 100 5% 1/10W		
441		A1	RESISTOR		R2709	1-216-809-11	METAL CHIP 100 5% 1/10W		
442		A1	RESISTOR		R2740	1-218-674-11	METAL CHIP 180 0.5% 1/10W		
443		A1	RESISTOR		R2742	1-218-690-11	METAL CHIP 820 0.5% 1/10W		
444		A1	RESISTOR		R2755	1-216-823-11	METAL CHIP 1.5K 5% 1/10W		

No.	#	Board	Type	⚠/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
445		A1	RESISTOR		R2757	1-216-806-11	METAL CHIP 56 5% 1/10W		
446		A1	RESISTOR		R2760	1-218-668-11	METAL CHIP 100 0.5% 1/10W		
447		A1	RESISTOR		R2763	1-216-823-11	METAL CHIP 1.5K 5% 1/10W		
448		A1	RESISTOR		R2764	1-216-806-11	METAL CHIP 56 5% 1/10W		
449		A1	RESISTOR		R2766	1-218-668-11	METAL CHIP 100 0.5% 1/10W		
450		A1	RESISTOR		R2772	1-216-823-11	METAL CHIP 1.5K 5% 1/10W		
451		A1	RESISTOR		R2773	1-216-806-11	METAL CHIP 56 5% 1/10W		
452		A1	RESISTOR		R2775	1-218-668-11	METAL CHIP 100 0.5% 1/10W		
453		A1	RESISTOR		R2801	1-216-841-11	METAL CHIP 47K 5% 1/10W		
454		A1	RESISTOR		R2802	1-216-864-11	SHORT CHIP 0		
455		A1	RESISTOR		R2803	1-218-827-11	METAL CHIP 150 0.5% 1/10W		
456		A1	RESISTOR		R2804	1-216-841-11	METAL CHIP 47K 5% 1/10W		
457		A1	RESISTOR		R2805	1-216-809-11	METAL CHIP 100 5% 1/10W		
458		A1	RESISTOR		R2807	1-216-809-11	METAL CHIP 100 5% 1/10W		
459		A1	RESISTOR		R2811	1-216-864-11	SHORT CHIP 0		
460		A1	RESISTOR		R2812	1-216-864-11	SHORT CHIP 0		
461		A1	RESISTOR		R2813	1-216-821-11	METAL CHIP 1K 5% 1/10W		
462		A1	RESISTOR		R2814	1-218-845-11	METAL CHIP 820 0.5% 1/10W		
463		A1	RESISTOR		R2815	1-216-825-11	METAL CHIP 2.2K 5% 1/10W		
464		A1	RESISTOR		R2816	1-216-825-11	METAL CHIP 2.2K 5% 1/10W		
465		A1	RESISTOR		R2819	1-216-295-91	SHORT CHIP 0		
466		A1	RESISTOR		R2820	1-216-295-91	SHORT CHIP 0		
467		A1	RESISTOR		R2821	1-216-295-91	SHORT CHIP 0		
468		A1	RESISTOR		R2822	1-216-295-91	SHORT CHIP 0		
469		A1	RESISTOR		R2825	1-216-821-11	METAL CHIP 1K 5% 1/10W		
470		A1	RESISTOR		R2826	1-216-821-11	METAL CHIP 1K 5% 1/10W		
471		A1	RESISTOR		R2827	1-216-809-11	METAL CHIP 100 5% 1/10W		
472		A1	RESISTOR		R2828	1-216-809-11	METAL CHIP 100 5% 1/10W		
473		A1	RESISTOR		R2829	1-216-809-11	METAL CHIP 100 5% 1/10W		
474		A1	RESISTOR		R2830	1-216-864-11	SHORT CHIP 0		
475		A1	RESISTOR		R2831	1-216-864-11	SHORT CHIP 0		
476		A1	RESISTOR		R2832	1-216-864-11	SHORT CHIP 0		
477		A1	RESISTOR		R2833	1-216-864-11	SHORT CHIP 0		
478		A1	RESISTOR		R4603	1-218-873-11	METAL CHIP 12K 0.5% 1/10W		
479		A1	RESISTOR		R4604	1-218-862-11	METAL CHIP 4.3K 0.5% 1/10W		
480		A1	RESISTOR		R4606	1-216-841-11	METAL CHIP 47K 5% 1/10W		
481		A1	RESISTOR		R4607	1-216-841-11	METAL CHIP 47K 5% 1/10W		
482		A1	RESISTOR		R4608	1-218-868-11	METAL CHIP 7.5K 0.5% 1/10W		
483		A1	RESISTOR		R4609	1-216-864-11	SHORT CHIP 0		
484		A1	RESISTOR		R4610	1-216-864-11	SHORT CHIP 0		
485		A1	RESISTOR		R4611	1-216-821-11	METAL CHIP 1K 5% 1/10W		
486		A1	RESISTOR		R4612	1-216-829-11	METAL CHIP 4.7K 5% 1/10W		
487		A1	RESISTOR		R4613	1-216-839-11	METAL CHIP 33K 5% 1/10W		
488		A1	RESISTOR		R4614	1-218-871-11	METAL CHIP 10K 0.5% 1/10W		
489		A1	RESISTOR		R4615	1-218-867-11	METAL CHIP 6.8K 0.5% 1/10W		
490		A1	RESISTOR		R4616	1-218-851-11	METAL CHIP 1.5K 0.5% 1/10W		
491		A1	RESISTOR		R4617	1-218-837-11	METAL CHIP 390 0.5% 1/10W		
492		A1	RESISTOR		R4618	1-218-878-11	METAL CHIP 20K 0.5% 1/10W		
493		A1	RESISTOR		R4619	1-216-847-11	METAL CHIP 150K 5% 1/10W		
494		A1	RESISTOR		R4620	1-218-883-11	METAL CHIP 33K 0.5% 1/10W		
495		A1	RESISTOR		R4621	1-218-889-11	METAL CHIP 56K 0.5% 1/10W		
496		A1	RESISTOR		R4622	1-216-845-11	METAL CHIP 100K 5% 1/10W		
497		A1	RESISTOR		R4623	1-216-841-11	METAL CHIP 47K 5% 1/10W		
498		A1	RESISTOR		R4624	1-216-295-91	SHORT CHIP 0		
499		A1	RESISTOR		R4626	1-216-295-91	SHORT CHIP 0		
500		A1	RESISTOR		R4627	1-216-811-11	METAL CHIP 150 5% 1/10W		
501		A1	RESISTOR		R4628	1-216-809-11	METAL CHIP 100 5% 1/10W		
502		A1	RESISTOR		R4630	1-216-821-11	METAL CHIP 1K 5% 1/10W		
503		A1	RESISTOR		R4631	1-216-864-11	SHORT CHIP 0		
504		A1	RESISTOR		R4632	1-216-864-11	SHORT CHIP 0		
505		A1	RESISTOR		R4633	1-216-833-11	METAL CHIP 10K 5% 1/10W		
506		A1	RESISTOR		R4635	1-216-845-11	METAL CHIP 100K 5% 1/10W		
507		A1	RESISTOR		R4638	1-216-839-11	METAL CHIP 33K 5% 1/10W		
508		A1	RESISTOR		R4639	1-216-847-11	METAL CHIP 150K 5% 1/10W		
509		A1	RESISTOR		R4642	1-216-864-11	SHORT CHIP 0		
510		A1	RESISTOR		R4643	1-216-864-11	SHORT CHIP 0		
511		A1	RESISTOR		R4644	1-216-845-11	METAL CHIP 100K 5% 1/10W		
512		A1	RESISTOR		R4645	1-216-847-11	METAL CHIP 150K 5% 1/10W		
513		A1	RESISTOR		R4647	1-216-864-11	SHORT CHIP 0		
514		A1	RESISTOR		R4648	1-216-825-11	METAL CHIP 2.2K 5% 1/10W		
515		A1	RESISTOR		R4649	1-216-825-11	METAL CHIP 2.2K 5% 1/10W		
516		A1	RESISTOR		R4650	1-216-823-11	METAL CHIP 1.5K 5% 1/10W		
517		A1	RESISTOR		R4651	1-216-843-11	METAL CHIP 68K 5% 1/10W		
518		A1	RESISTOR		R4652	1-216-843-11	METAL CHIP 68K 5% 1/10W		

No.	#	Board	Type	⚠/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
519		A1	RESISTOR		R4653	1-216-797-11	METAL CHIP 10 5% 1/10W		
520		A1	RESISTOR		R6446	1-216-295-91	SHORT CHIP 0		
521		A1	RESISTOR		R6447	1-216-295-91	SHORT CHIP 0		
522		A1	RESISTOR		R6448	1-216-295-91	SHORT CHIP 0		
523		A1	RESISTOR		R6450	1-216-833-11	METAL CHIP 10K 5% 1/10W		
524		A1	RESISTOR		R6451	1-216-828-11	METAL CHIP 3.9K 5% 1/10W		
525		A1	RESISTOR		R6452	1-216-821-11	METAL CHIP 1K 5% 1/10W		
526		A1	RESISTOR		R6453	1-216-821-11	METAL CHIP 1K 5% 1/10W		
527		A1	RESISTOR		R6454	1-216-857-11	METAL CHIP 1M 5% 1/10W		
528		A1	RESISTOR		R6455	1-216-828-11	METAL CHIP 3.9K 5% 1/10W		
529		A1	RESISTOR		R6456	1-216-826-11	METAL CHIP 2.7K 5% 1/10W		
530		A1	RESISTOR		R6457	1-216-833-11	METAL CHIP 10K 5% 1/10W		
531		A1	RESISTOR		R6458	1-216-829-11	METAL CHIP 4.7K 5% 1/10W		
532		A1	RESISTOR		R6459	1-216-857-11	METAL CHIP 1M 5% 1/10W		
533		A1	RESISTOR		R6460	1-216-829-11	METAL CHIP 4.7K 5% 1/10W		
534		A1	RESISTOR		R6461	1-216-821-11	METAL CHIP 1K 5% 1/10W		
535		A1	RESISTOR		R6462	1-218-687-11	METAL CHIP 620 0.5% 1/10W		
536		A1	RESISTOR		R6463	1-218-867-11	METAL CHIP 6.8K 0.5% 1/10W		
537		A1	RESISTOR		R6464	1-216-825-11	METAL CHIP 2.2K 5% 1/10W		
538		A1	RESISTOR		R6465	1-216-809-11	METAL CHIP 100 5% 1/10W		
539		A1	RESISTOR		R6467	1-216-813-11	METAL CHIP 220 5% 1/10W		
540		A1	RESISTOR		R6469	1-218-689-11	METAL CHIP 750 0.5% 1/10W		
541		A1	RESISTOR		R6470	1-216-864-11	SHORT CHIP 0		
542		A1	RESISTOR		R6472	1-216-864-11	SHORT CHIP 0		
543		A1	RESISTOR		R7002	1-216-833-11	METAL CHIP 10K 5% 1/10W		
544		A1	RESISTOR		R7003	1-216-846-11	METAL CHIP 120K 5% 1/10W		
545		A1	RESISTOR		R7004	1-216-822-11	METAL CHIP 1.2K 5% 1/10W		
546		A1	RESISTOR		R7005	1-216-805-11	METAL CHIP 47 5% 1/10W		
547		A1	RESISTOR		R7006	1-216-822-11	METAL CHIP 1.2K 5% 1/10W		
548		A1	RESISTOR		R7007	1-216-829-11	METAL CHIP 4.7K 5% 1/10W		
549		A1	RESISTOR		R7008	1-216-823-11	METAL CHIP 1.5K 5% 1/10W		
550		A1	RESISTOR		R7009	1-216-807-11	METAL CHIP 68 5% 1/10W		
551		A1	RESISTOR		R7010	1-216-798-11	METAL CHIP 12 5% 1/10W		
552		A1	RESISTOR		R7011	1-216-864-11	SHORT CHIP 0		
553		A1	RESISTOR		R7012	1-216-864-11	SHORT CHIP 0		
554		A1	RESISTOR		R7013	1-216-864-11	SHORT CHIP 0		
555		A1	RESISTOR		R7015	1-216-864-11	SHORT CHIP 0		
556		A1	RESISTOR		R7016	1-216-864-11	SHORT CHIP 0		
557		A1	RESISTOR		R7017	1-216-846-11	METAL CHIP 120K 5% 1/10W		
558		A1	RESISTOR		R7018	1-216-822-11	METAL CHIP 1.2K 5% 1/10W		
559		A1	RESISTOR		R7019	1-216-829-11	METAL CHIP 4.7K 5% 1/10W		
560		A1	RESISTOR		R7020	1-216-845-11	METAL CHIP 100K 5% 1/10W		
561		A1	RESISTOR		R7021	1-216-833-11	METAL CHIP 10K 5% 1/10W		
562		A1	RESISTOR		R7022	1-216-822-11	METAL CHIP 1.2K 5% 1/10W		
563		A1	RESISTOR		R7023	1-216-833-11	METAL CHIP 10K 5% 1/10W		
564		A1	RESISTOR		R7024	1-216-833-11	METAL CHIP 10K 5% 1/10W		
565		A1	RESISTOR		R7026	1-216-837-11	METAL CHIP 22K 5% 1/10W		
566		A1	RESISTOR		R7027	1-216-841-11	METAL CHIP 47K 5% 1/10W		
567		A1	RESISTOR		R7028	1-216-821-11	METAL CHIP 1K 5% 1/10W		
568		A1	RESISTOR		R7029	1-216-845-11	METAL CHIP 100K 5% 1/10W		
569		A1	RESISTOR		R7030	1-216-845-11	METAL CHIP 100K 5% 1/10W		
570		A1	RESISTOR		R7031	1-216-833-11	METAL CHIP 10K 5% 1/10W		
571		A1	RESISTOR		R7032	1-216-844-11	METAL CHIP 82K 5% 1/10W		
572		A1	RESISTOR		R7033	1-216-833-11	METAL CHIP 10K 5% 1/10W		
573		A1	RESISTOR		R7036	1-216-809-11	METAL CHIP 100 5% 1/10W		
574		A1	RESISTOR		R7037	1-216-821-11	METAL CHIP 1K 5% 1/10W		
575		A1	RESISTOR		R7038	1-218-890-11	METAL CHIP 62K 0.5% 1/10W		
576		A1	RESISTOR		R7040	1-216-841-11	METAL CHIP 47K 5% 1/10W		
577		A1	RESISTOR		R7041	1-216-845-11	METAL CHIP 100K 5% 1/10W		
578		A1	RESISTOR		R7042	1-216-837-11	METAL CHIP 22K 5% 1/10W		
579		A1	RESISTOR		R7043	1-216-841-11	METAL CHIP 47K 5% 1/10W		
580		A1	RESISTOR		R7045	1-216-841-11	METAL CHIP 47K 5% 1/10W		
581		A1	RESISTOR		R7046	1-216-844-11	METAL CHIP 82K 5% 1/10W		
582		A1	RESISTOR		R7047	1-216-839-11	METAL CHIP 33K 5% 1/10W		
583		A1	RESISTOR		R7048	1-216-847-11	METAL CHIP 150K 5% 1/10W		
584		A1	RESISTOR		R7049	1-216-829-11	METAL CHIP 4.7K 5% 1/10W		
585		A1	RESISTOR		R7050	1-216-852-11	METAL CHIP 390K 5% 1/10W		
586		A1	RESISTOR		R7051	1-216-823-11	METAL CHIP 1.5K 5% 1/10W		
587		A1	RESISTOR		R7052	1-216-829-11	METAL CHIP 4.7K 5% 1/10W		
588		A1	RESISTOR		R7053	1-216-830-11	METAL CHIP 5.6K 5% 1/10W		
589		A1	RESISTOR		R7054	1-216-847-11	METAL CHIP 150K 5% 1/10W		
590		A1	RESISTOR		R7055	1-216-829-11	METAL CHIP 4.7K 5% 1/10W		
591		A1	RESISTOR		R7056	1-216-827-11	METAL CHIP 3.3K 5% 1/10W		
592		A1	RESISTOR		R7057	1-216-821-11	METAL CHIP 1K 5% 1/10W		

No.	#	Board	Type	⚠/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
593		A1	RESISTOR		R7058	1-216-809-11	METAL CHIP 100 5% 1/10W		
594		A1	RESISTOR		R7059	1-216-799-11	METAL CHIP 15 5% 1/10W		
595		A1	RESISTOR		R7060	1-216-799-11	METAL CHIP 15 5% 1/10W		
596		A1	RESISTOR		R7061	1-218-890-11	METAL CHIP 62K 0.5% 1/10W		
597		A1	RESISTOR		R7062	1-216-798-11	METAL CHIP 12 5% 1/10W		
598		A1	RESISTOR		R7063	1-216-830-11	METAL CHIP 5.6K 5% 1/10W		
599		A1	RESISTOR		R7064	1-216-864-11	SHORT CHIP 0		
600		A1	RESISTOR		R7065	1-216-833-11	METAL CHIP 10K 5% 1/10W		
601		A1	RESISTOR		R7066	1-216-833-11	METAL CHIP 10K 5% 1/10W		
602		A1	RESISTOR		R7067	1-216-839-11	METAL CHIP 33K 5% 1/10W		
603		A1	RESISTOR		R7068	1-216-852-11	METAL CHIP 390K 5% 1/10W		
604		A1	RESISTOR		R7069	1-216-809-11	METAL CHIP 100 5% 1/10W		
605		A1	RESISTOR		R7070	1-216-809-11	METAL CHIP 100 5% 1/10W		
606		A1	RESISTOR		R7071	1-216-844-11	METAL CHIP 82K 5% 1/10W		
607		A1	RESISTOR		R7072	1-216-841-11	METAL CHIP 47K 5% 1/10W		
608		A1	RESISTOR		R7074	1-216-841-11	METAL CHIP 47K 5% 1/10W		
609		A1	RESISTOR		R7075	1-216-845-11	METAL CHIP 100K 5% 1/10W		
610		A1	RESISTOR		R7076	1-216-837-11	METAL CHIP 22K 5% 1/10W		
611		A1	RESISTOR		R7077	1-216-841-11	METAL CHIP 47K 5% 1/10W		
612		A1	RESISTOR		R7081	1-216-829-11	METAL CHIP 4.7K 5% 1/10W		
613		A1	RESISTOR		R7082	1-216-821-11	METAL CHIP 1K 5% 1/10W		
614		A1	RESISTOR		R7083	1-216-833-11	METAL CHIP 10K 5% 1/10W		
615		A1	RESISTOR		R7084	1-216-845-11	METAL CHIP 100K 5% 1/10W		
616		A1	RESISTOR		R7085	1-216-833-11	METAL CHIP 10K 5% 1/10W		
617		A1	RESISTOR		R7086	1-216-864-11	SHORT CHIP 0		
618		A1	RESISTOR		R7087	1-216-844-11	METAL CHIP 82K 5% 1/10W		
619		A1	RESISTOR		R7088	1-216-845-11	METAL CHIP 100K 5% 1/10W		
620		A1	RESISTOR		R7089	1-216-845-11	METAL CHIP 100K 5% 1/10W		
621		A1	RESISTOR		R7090	1-216-833-11	METAL CHIP 10K 5% 1/10W		
622		A1	RESISTOR		R7091	1-216-833-11	METAL CHIP 10K 5% 1/10W		
623		A1	RESISTOR		R7092	1-216-833-11	METAL CHIP 10K 5% 1/10W		
624		A1	RESISTOR		R7093	1-216-807-11	METAL CHIP 68 5% 1/10W		
625		A1	RESISTOR		R7094	1-216-833-11	METAL CHIP 10K 5% 1/10W		
626		A1	RESISTOR		R7095	1-216-823-11	METAL CHIP 1.5K 5% 1/10W		
627		A1	RESISTOR		R7096	1-216-864-11	SHORT CHIP 0		
628		A1	RESISTOR		R7097	1-216-820-11	METAL CHIP 820 5% 1/10W		
629		A1	RESISTOR		R7100	1-216-799-11	METAL CHIP 15 5% 1/10W		
630		A1	RESISTOR		R7101	1-216-799-11	METAL CHIP 15 5% 1/10W		
631		A1	RESISTOR		R7102	1-216-833-11	METAL CHIP 10K 5% 1/10W		
632		A1	RESISTOR		R7103	1-216-833-11	METAL CHIP 10K 5% 1/10W		
633		A1	RESISTOR		R7105	1-216-833-11	METAL CHIP 10K 5% 1/10W		
634		A1	RESISTOR		R7106	1-216-833-11	METAL CHIP 10K 5% 1/10W		
635		A1	RESISTOR		R7108	1-216-821-11	METAL CHIP 1K 5% 1/10W		
636		A1	RESISTOR		R7109	1-216-839-11	METAL CHIP 33K 5% 1/10W		
637		A1	RESISTOR		R7111	1-216-809-11	METAL CHIP 100 5% 1/10W		
638		A1	RESISTOR		R7112	1-216-820-11	METAL CHIP 820 5% 1/10W		
639		A1	RESISTOR		R7113	1-216-829-11	METAL CHIP 4.7K 5% 1/10W		
640		A1	RESISTOR		R7114	1-216-833-11	METAL CHIP 10K 5% 1/10W		
641		A1	RESISTOR		R7118	1-216-833-11	METAL CHIP 10K 5% 1/10W		
642		A1	RESISTOR		R7119	1-216-833-11	METAL CHIP 10K 5% 1/10W		
643		A1	RESISTOR		R7121	1-216-833-11	METAL CHIP 10K 5% 1/10W		
644		A1	RESISTOR		R7123	1-216-839-11	METAL CHIP 33K 5% 1/10W		
645		A1	RESISTOR		R7124	1-216-864-11	SHORT CHIP 0		
646		A1	RESISTOR		R7125	1-216-833-11	METAL CHIP 10K 5% 1/10W		
647		A1	RESISTOR		R7127	1-216-833-11	METAL CHIP 10K 5% 1/10W		
648		A1	RESISTOR		R7128	1-216-833-11	METAL CHIP 10K 5% 1/10W		
649		A1	RESISTOR		R7129	1-216-864-11	SHORT CHIP 0		
650		A1	RESISTOR		R7131	1-216-829-11	METAL CHIP 4.7K 5% 1/10W		
651		A1	RESISTOR		R7132	1-216-834-11	METAL CHIP 12K 5% 1/10W		
652		A1	RESISTOR		R7134	1-216-840-11	METAL CHIP 39K 5% 1/10W		
653		A1	RESISTOR		R7135	1-218-741-11	METAL CHIP 110K 0.5% 1/10W		
654		A1	RESISTOR		R7138	1-216-837-11	METAL CHIP 22K 5% 1/10W		
655		A1	RESISTOR		R7139	1-216-865-11	METAL CHIP 3K 5% 1/10W		
656		A1	RESISTOR		R7140	1-202-926-11	METAL CHIP 36K 5% 1/10W		
657		A1	RESISTOR		R7141	1-216-832-11	METAL CHIP 8.2K 5% 1/10W		
658		A1	RESISTOR		R7142	1-216-829-11	METAL CHIP 4.7K 5% 1/10W		
659		A1	RESISTOR		R7143	1-216-864-11	SHORT CHIP 0		
660		A1	RESISTOR		R7145	1-216-829-11	METAL CHIP 4.7K 5% 1/10W		
661		A1	RESISTOR		R7146	1-216-829-11	METAL CHIP 4.7K 5% 1/10W		
662		A1	RESISTOR		R7147	1-216-813-11	METAL CHIP 220 5% 1/10W		
663		A1	RESISTOR		R7148	1-216-813-11	METAL CHIP 220 5% 1/10W		
664		A1	RESISTOR		R7149	1-216-809-11	METAL CHIP 100 5% 1/10W		
665		A1	RESISTOR		R7150	1-216-805-11	METAL CHIP 47 5% 1/10W		
666		A1	RESISTOR		R7162	1-216-864-11	SHORT CHIP 0		

No.	#	Board	Type	⚠/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
667		A1	RESISTOR		R7401	1-216-864-11	SHORT CHIP 0		
668		A1	RESISTOR		R7402	1-216-809-11	METAL CHIP 100 5% 1/10W		
669		A1	RESISTOR		R7403	1-216-829-11	METAL CHIP 4.7K 5% 1/10W		
670		A1	RESISTOR		R7404	1-216-845-11	METAL CHIP 100K 5% 1/10W		
671		A1	RESISTOR		R7405	1-216-821-11	METAL CHIP 1K 5% 1/10W		
672		A1	RESISTOR		R7406	1-216-829-11	METAL CHIP 4.7K 5% 1/10W		
673		A1	RESISTOR		R7407	1-216-821-11	METAL CHIP 1K 5% 1/10W		
674		A1	RESISTOR		R7408	1-216-845-11	METAL CHIP 100K 5% 1/10W		
675		A1	RESISTOR		R7409	1-216-813-11	METAL CHIP 220 5% 1/10W		
676		A1	RESISTOR		R7410	1-216-813-11	METAL CHIP 220 5% 1/10W		
677		A1	RESISTOR		R7411	1-216-833-11	METAL CHIP 10K 5% 1/10W		
678		A1	RESISTOR		R7412	1-216-864-11	SHORT CHIP 0		
679		A1	RESISTOR		R7413	1-216-864-11	SHORT CHIP 0		
680		A1	RESISTOR		R7414	1-216-833-11	METAL CHIP 10K 5% 1/10W		
681		A1	RESISTOR		R7415	1-216-833-11	METAL CHIP 10K 5% 1/10W		
682		A1	RESISTOR		R7416	1-216-833-11	METAL CHIP 10K 5% 1/10W		
683		A1	RESISTOR		R7417	1-216-833-11	METAL CHIP 10K 5% 1/10W		
684		A1	RESISTOR		R7418	1-216-833-11	METAL CHIP 10K 5% 1/10W		
685		A1	RESISTOR		R7419	1-216-864-11	SHORT CHIP 0		
686		A1	RESISTOR		R7420	1-216-864-11	SHORT CHIP 0		
687		A1	RESISTOR		R7421	1-216-864-11	SHORT CHIP 0		
688		A1	RESISTOR		R7422	1-216-864-11	SHORT CHIP 0		
689		A1	RESISTOR		R7423	1-216-864-11	SHORT CHIP 0		
690		A1	RESISTOR		R7440	1-216-853-11	METAL CHIP 470K 5% 1/10W		
691		A1	RESISTOR		R7441	1-216-853-11	METAL CHIP 470K 5% 1/10W		
692		A1	RESISTOR		R7443	1-216-864-11	SHORT CHIP 0		
693		A1	RESISTOR		R7444	1-216-864-11	SHORT CHIP 0		
694		A1	RESISTOR		R7445	1-216-864-11	SHORT CHIP 0		
695		A1	RESISTOR		R7448	1-216-823-11	METAL CHIP 1.5K 5% 1/10W		
696		A1	RESISTOR		R7449	1-216-823-11	METAL CHIP 1.5K 5% 1/10W		
697		A1	RESISTOR		R7450	1-216-823-11	METAL CHIP 1.5K 5% 1/10W		
698		A1	RESISTOR		R7451	1-216-823-11	METAL CHIP 1.5K 5% 1/10W		
699		A1	RESISTOR		R7452	1-216-823-11	METAL CHIP 1.5K 5% 1/10W		
700		A1	RESISTOR		R7453	1-216-823-11	METAL CHIP 1.5K 5% 1/10W		
701		A1	RESISTOR		R7454	1-216-823-11	METAL CHIP 1.5K 5% 1/10W		
702		A1	RESISTOR		R7455	1-216-823-11	METAL CHIP 1.5K 5% 1/10W		
703		A1	RESISTOR		R7456	1-216-864-11	SHORT CHIP 0		
704		A1	RESISTOR		R7457	1-216-864-11	SHORT CHIP 0		
705		A1	RESISTOR		R9000	1-216-813-11	METAL CHIP 220 5% 1/10W		
706		A1	RESISTOR		R9001	1-216-813-11	METAL CHIP 220 5% 1/10W		
707		A1	RESISTOR		R9002	1-216-813-11	METAL CHIP 220 5% 1/10W		
708		A1	RESISTOR		R9004	1-216-809-11	METAL CHIP 100 5% 1/10W		
709		A1	RESISTOR		R9005	1-216-813-11	METAL CHIP 220 5% 1/10W		
710		A1	RESISTOR		R9006	1-216-813-11	METAL CHIP 220 5% 1/10W		
711		A1	RESISTOR		R9007	1-216-813-11	METAL CHIP 220 5% 1/10W		
712		A1	RESISTOR		R9008	1-216-809-11	METAL CHIP 100 5% 1/10W		
713		A1	RESISTOR		R9010	1-216-813-11	METAL CHIP 220 5% 1/10W		
714		A1	RESISTOR		R9012	1-216-813-11	METAL CHIP 220 5% 1/10W		
715		A1	RESISTOR		R9013	1-216-813-11	METAL CHIP 220 5% 1/10W		
716		A1	RESISTOR		R9014	1-216-809-11	METAL CHIP 100 5% 1/10W		
717		A1	RESISTOR		R9020	1-216-813-11	METAL CHIP 220 5% 1/10W		
718		A1	RESISTOR		R9021	1-216-813-11	METAL CHIP 220 5% 1/10W		
719		A1	RESISTOR		R9023	1-216-813-11	METAL CHIP 220 5% 1/10W		
720		A1	RESISTOR		R9024	1-216-809-11	METAL CHIP 100 5% 1/10W		
721		A1	RESISTOR		R9025	1-216-813-11	METAL CHIP 220 5% 1/10W		
722		A1	RESISTOR		R9026	1-216-813-11	METAL CHIP 220 5% 1/10W		
723		A1	RESISTOR		R9027	1-216-813-11	METAL CHIP 220 5% 1/10W		
724		A1	RESISTOR		R9028	1-216-809-11	METAL CHIP 100 5% 1/10W		
725		A1	RESISTOR		R9030	1-216-813-11	METAL CHIP 220 5% 1/10W		
726		A1	RESISTOR		R9031	1-216-813-11	METAL CHIP 220 5% 1/10W		
727		A1	RESISTOR		R9032	1-216-813-11	METAL CHIP 220 5% 1/10W		
728		A1	RESISTOR		R9033	1-216-809-11	METAL CHIP 100 5% 1/10W		
729		A1	RESISTOR		R9035	1-216-853-11	METAL CHIP 470K 5% 1/10W		
730		A1	RESISTOR		R9036	1-216-853-11	METAL CHIP 470K 5% 1/10W		
731		A1	RESISTOR		R9040	1-216-864-11	SHORT CHIP 0		
732		A1	RESISTOR		R9041	1-218-665-11	METAL CHIP 75 0.5% 1/10W		
733		A1	RESISTOR		R9043	1-216-853-11	METAL CHIP 470K 5% 1/10W		
734		A1	RESISTOR		R9044	1-216-853-11	METAL CHIP 470K 5% 1/10W		
735		A1	RESISTOR		R9047	1-216-853-11	METAL CHIP 470K 5% 1/10W		
736		A1	RESISTOR		R9048	1-216-853-11	METAL CHIP 470K 5% 1/10W		
737		A1	RESISTOR		R9050	1-216-864-11	SHORT CHIP 0		
738		A1	RESISTOR		R9051	1-216-864-11	SHORT CHIP 0		
739		A1	RESISTOR		R9052	1-216-853-11	METAL CHIP 470K 5% 1/10W		
740		A1	RESISTOR		R9053	1-216-853-11	METAL CHIP 470K 5% 1/10W		

No.	#	Board	Type	⚠/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
741		A1	RESISTOR		R9058	1-218-665-11	METAL CHIP 75 0.5% 1/10W		
742		A1	RESISTOR		R9059	1-218-665-11	METAL CHIP 75 0.5% 1/10W		
743		A1	RESISTOR		R9060	1-216-864-11	SHORT CHIP 0		
744		A1	RESISTOR		R9061	1-216-825-11	METAL CHIP 2.2K 5% 1/10W		
745		A1	RESISTOR		R9062	1-216-825-11	METAL CHIP 2.2K 5% 1/10W		
746		A1	RESISTOR		R9063	1-216-813-11	METAL CHIP 220 5% 1/10W		
747		A1	RESISTOR		R9064	1-216-813-11	METAL CHIP 220 5% 1/10W		
748		A1	RESISTOR		R9065	1-216-813-11	METAL CHIP 220 5% 1/10W		
749		A1	RESISTOR		R9066	1-216-825-11	METAL CHIP 2.2K 5% 1/10W		
750		A1	RESISTOR		R9067	1-216-825-11	METAL CHIP 2.2K 5% 1/10W		
751		A1	RESISTOR		R9068	1-216-821-11	METAL CHIP 1K 5% 1/10W		
752		A1	RESISTOR		R9070	1-216-864-11	SHORT CHIP 0		
753		A1	RESISTOR		R9071	1-216-821-11	METAL CHIP 1K 5% 1/10W		
754		A1	RESISTOR		R9072	1-216-813-11	METAL CHIP 220 5% 1/10W		
755		A1	RESISTOR		R9073	1-216-825-11	METAL CHIP 2.2K 5% 1/10W		
756		A1	RESISTOR		R9074	1-216-825-11	METAL CHIP 2.2K 5% 1/10W		
757		A1	RESISTOR		R9075	1-216-821-11	METAL CHIP 1K 5% 1/10W		
758		A1	RESISTOR		R9076	1-216-813-11	METAL CHIP 220 5% 1/10W		
759		A1	RESISTOR		R9077	1-216-825-11	METAL CHIP 2.2K 5% 1/10W		
760		A1	RESISTOR		R9078	1-216-821-11	METAL CHIP 1K 5% 1/10W		
761		A1	RESISTOR		R9079	1-216-825-11	METAL CHIP 2.2K 5% 1/10W		
762		A1	RESISTOR		R9080	1-216-813-11	METAL CHIP 220 5% 1/10W		
763		A1	RESISTOR		R9081	1-216-864-11	SHORT CHIP 0		
764		A1	RESISTOR		R9082	1-216-813-11	METAL CHIP 220 5% 1/10W		
765		A1	RESISTOR		R9083	1-216-813-11	METAL CHIP 220 5% 1/10W		
766		A1	RESISTOR		R9084	1-216-813-11	METAL CHIP 220 5% 1/10W		
767		A1	RESISTOR		R9087	1-216-829-11	METAL CHIP 4.7K 5% 1/10W		
768		A1	RESISTOR		R9088	1-216-829-11	METAL CHIP 4.7K 5% 1/10W		
769		A1	RESISTOR		R9089	1-216-829-11	METAL CHIP 4.7K 5% 1/10W		
770		A1	RESISTOR		R9090	1-216-829-11	METAL CHIP 4.7K 5% 1/10W		
771		A1	VARISTOR		VD7129	1-801-925-21	VARISTOR, CHIP (1608)		
772		A1	VARISTOR		VD7130	1-801-925-21	VARISTOR, CHIP (1608)		
773		A1	VARISTOR		VD7133	1-801-925-21	VARISTOR, CHIP (1608)		
774		A1	VARISTOR		VD7401	1-801-925-21	VARISTOR, CHIP (1608)		
775		A1	VARISTOR		VD7402	1-801-925-21	VARISTOR, CHIP (1608)		
776		A1	VARISTOR		VD7403	1-801-925-21	VARISTOR, CHIP (1608)		
777		A1	VARISTOR		VD9000	1-801-925-21	VARISTOR, CHIP (1608)		
778		A1	VARISTOR		VD9001	1-801-925-21	VARISTOR, CHIP (1608)		
779		A1	VARISTOR		VD9010	1-801-925-21	VARISTOR, CHIP (1608)		
780		A1	VARISTOR		VD9020	1-801-925-21	VARISTOR, CHIP (1608)		
781		A1	VARISTOR		VD9021	1-801-925-21	VARISTOR, CHIP (1608)		
782		A1	VARISTOR		VD9030	1-801-925-21	VARISTOR, CHIP (1608)		
783		A1	VARISTOR		VD9040	1-801-925-21	VARISTOR, CHIP (1608)		
784		A1	VARISTOR		VD9050	1-801-925-21	VARISTOR, CHIP (1608)		
785		A1	VARISTOR		VD9051	1-801-925-21	VARISTOR, CHIP (1608)		
786		A1	VARISTOR		VD9060	1-801-925-21	VARISTOR, CHIP (1608)		
787		A1	VARISTOR		VD9070	1-801-925-21	VARISTOR, CHIP (1608)		
788		A1	VARISTOR		VD9071	1-801-925-21	VARISTOR, CHIP (1608)		
789		A1	CRYSTAL		X2502	1-795-214-21	VIBRATOR, CERAMIC (4MHZ)		
790		H1	CAPACITOR		C9302	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
791		H1	CONNECTOR	*	CN9308	1-580-789-22	PIN, CONNECTOR (SMD) 6P		
792		H1	DIODE		D9301	8-719-069-60	DIODE UDZSTE-179.1B		
793		H1	JACK		J9304	1-815-103-11	JACK		
794		H1	RESISTOR		R9301	1-216-826-11	METAL CHIP 2.7K 5% 1/10W		
795		H1	RESISTOR		R9302	1-218-457-11	METAL CHIP 910 5% 1/10W		
796		H1	RESISTOR		R9303	1-216-817-11	METAL CHIP 470 5% 1/10W		
797		H1	RESISTOR		R9304	1-216-813-11	METAL CHIP 220 5% 1/10W		
798		H1	RESISTOR		R9385	1-216-864-11	SHORT CHIP 0		
799		H1	RESISTOR		R9386	1-216-864-11	SHORT CHIP 0		
800		H1	SWITCH		S9301	1-572-595-11	SWITCH, TACTIL (REFLOW TYPE)		
801		H1	SWITCH		S9302	1-572-595-11	SWITCH, TACTIL (REFLOW TYPE)		
802		H1	SWITCH		S9303	1-572-595-11	SWITCH, TACTIL (REFLOW TYPE)		
803		H1	SWITCH		S9304	1-572-595-11	SWITCH, TACTIL (REFLOW TYPE)		
804		H1	SWITCH		S9305	1-572-595-11	SWITCH, TACTIL (REFLOW TYPE)		
805		H1	VARISTOR		VD9380	1-801-925-21	VARISTOR, CHIP (1608)		
806		H1	VARISTOR		VD9381	1-801-925-21	VARISTOR, CHIP (1608)		
807		H1	VARISTOR		VD9382	1-801-925-21	VARISTOR, CHIP (1608)		
808		U1	CONNECTOR		CN9201	1-766-382-21	PIN, CONNECTOR (1.5MM)(SMD)10P		
809		U1	JACK		J9201	1-770-053-12	TERMINAL BLOCK, S(LIGHT ANGLE)		
810		U1	JACK		J9202	1-770-053-12	TERMINAL BLOCK, S(LIGHT ANGLE)		
811		U1	RESISTOR		R9201	1-216-864-11	SHORT CHIP 0		
812		U1	RESISTOR		R9203	1-216-864-11	SHORT CHIP 0		
813		U1	RESISTOR		R9204	1-216-864-11	SHORT CHIP 0		
814		U1	RESISTOR		R9207	1-216-864-11	SHORT CHIP 0		

No.	#	Board	Type	⚠/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
815		U1	RESISTOR		R9208	1-216-864-11	SHORT CHIP 0		
816		U1	RESISTOR		R9209	1-216-864-11	SHORT CHIP 0		
817		U1	RESISTOR		R9210	1-216-864-11	SHORT CHIP 0		
818		U1	RESISTOR		R9211	1-216-864-11	SHORT CHIP 0		
819		U1	RESISTOR		R9212	1-216-864-11	SHORT CHIP 0		
820		U1	RESISTOR		R9213	1-216-864-11	SHORT CHIP 0		
821		U1	RESISTOR		R9214	1-216-864-11	SHORT CHIP 0		
822		U1	RESISTOR		R9215	1-216-864-11	SHORT CHIP 0		
823		U1	RESISTOR		R9216	1-216-864-11	SHORT CHIP 0		
824		U1	RESISTOR		R9235	1-216-864-11	SHORT CHIP 0		
825		U1	RESISTOR		R9236	1-216-864-11	SHORT CHIP 0		
826		U1	RESISTOR		R9237	1-216-864-11	SHORT CHIP 0		
827		PB	CAPACITOR		C4500	1-128-304-11	ELECT CHIP 330UF 20.00% 16V		
828		PB	CAPACITOR		C4501	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
829		PB	CAPACITOR		C4502	1-135-960-91	CERAMIC CHIP 10UF 10% 25V		
830		PB	CONNECTOR		CN4500	1-573-806-21	PIN, CONNECTOR (1.5MM) (SMD)6P		
831		PB	DIODE		D4500	8-719-080-41	DIODE RB063L-30TE25		
832		PB	IC		IC4500	6-702-472-01	IC PQ1CZ21H2ZP		
833		PB	COIL		L4500	1-456-066-21	INDUCTOR 220UH		
834		PB	RESISTOR		R4500	1-218-867-11	METAL CHIP 6.8K 0.5% 1/10W		
835		PB	RESISTOR		R4501	1-218-848-11	METAL CHIP 1.1K 0.5% 1/10W		
836		PB	RESISTOR		R4503	1-216-864-11	SHORT CHIP 0		
837		PB	RESISTOR		R4504	1-216-864-11	SHORT CHIP 0		
838		H2	CAPACITOR		C9101	1-162-945-11	CERAMIC CHIP 22PF 5.00% 50V		
839		H2	CAPACITOR		C9102	1-125-891-11	CERAMIC CHIP 0.47UF 10.00% 10V		
840		H2	CAPACITOR		C9103	1-117-137-11	ELECT CHIP 33UF 20.00% 10V		
841		H2	CAPACITOR		C9104	1-115-566-11	CERAMIC CHIP 4.7UF 10.00% 10V		
842		H2	CAPACITOR		C9105	1-115-566-11	CERAMIC CHIP 4.7UF 10.00% 10V		
843		H2	CONNECTOR	*	CN9101	1-760-388-11	CONNECTOR PIN (SMD) 9P		
844		H2	DIODE		D9101	8-719-064-07	DIODE SML-310LTT86		
845		H2	DIODE		D9102	6-500-861-01	DIODE SML-020MVT-T86		
846		H2	DIODE		D9103	8-719-421-59	DIODE MA3130WA-TX		
847		H2	DIODE		D9104	8-719-421-59	DIODE MA3130WA-TX		
848		H2	DIODE		D9105	8-719-421-59	DIODE MA3130WA-TX		
849		H2	DIODE		D9106	8-719-421-59	DIODE MA3130WA-TX		
850		H2	IC		IC9101	6-600-117-01	IC GP1UM27SRK		
851		H2	TRANSISTOR		Q9101	8-729-028-98	TRANSISTOR DTC114WUA-T106		
852		H2	TRANSISTOR		Q9102	8-729-028-98	TRANSISTOR DTC114WUA-T106		
853		H2	TRANSISTOR		Q9103	8-729-028-98	TRANSISTOR DTC114WUA-T106		
854		H2	RESISTOR		R9101	1-216-815-11	METAL CHIP 330 5% 1/10W		
855		H2	RESISTOR		R9103	1-216-820-11	METAL CHIP 820 5% 1/10W		
856		H2	RESISTOR		R9107	1-216-817-11	METAL CHIP 470 5% 1/10W		
857		H2	RESISTOR		R9108	1-216-805-11	METAL CHIP 47 5% 1/10W		
858		H2	RESISTOR		R9110	1-216-820-11	METAL CHIP 820 5% 1/10W		
859		H2	RESISTOR		R9111	1-216-295-91	SHORT CHIP 0		
860		H2	SWITCH		S9101	1-554-419-00	SWITCH, PUSH (1 KEY)		
861		TU	CAPACITOR		C6400	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
862		TU	CAPACITOR		C6401	1-162-966-11	CERAMIC CHIP 0.0022UF 10.00% 50V		
863		TU	CAPACITOR		C6402	1-162-927-11	CERAMIC CHIP 100PF 5.00% 50V		
864		TU	CAPACITOR		C6403	1-162-927-11	CERAMIC CHIP 100PF 5.00% 50V		
865		TU	CAPACITOR		C6404	1-162-927-11	CERAMIC CHIP 100PF 5.00% 50V		
866		TU	CAPACITOR		C6405	1-127-692-11	CERAMIC CHIP 10UF 10% 16V		
867		TU	CAPACITOR		C6406	1-127-692-11	CERAMIC CHIP 10UF 10% 16V		
868		TU	CAPACITOR		C6407	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
869		TU	CAPACITOR		C6408	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
870		TU	CAPACITOR		C6409	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
871		TU	CAPACITOR		C6410	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
872		TU	CAPACITOR		C6411	1-127-692-11	CERAMIC CHIP 10UF 10% 16V		
873		TU	CAPACITOR		C6412	1-127-692-11	CERAMIC CHIP 10UF 10% 16V		
874		TU	CAPACITOR		C6413	1-127-692-11	CERAMIC CHIP 10UF 10% 16V		
875		TU	CAPACITOR		C6414	1-127-692-11	CERAMIC CHIP 10UF 10% 16V		
876		TU	CAPACITOR		C6415	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
877		TU	CAPACITOR		C6416	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
878		TU	CAPACITOR		C6417	1-162-964-11	CERAMIC CHIP 0.001UF 10.00% 50V		
879		TU	CAPACITOR		C6418	1-165-176-11	CERAMIC CHIP 0.047UF 10.00% 16V		
880		TU	CONNECTOR		CN6401	1-766-719-41	CONNECTOR, BOARD TO BOARD 10P		
881		TU	CONNECTOR		CN6403	1-766-719-41	CONNECTOR, BOARD TO BOARD 10P		
882		TU	DIODE		D6401	8-719-070-63	DIODE PDZ10B-115		
883		TU	IC		IC6401	6-703-225-01	IC S-80928CNMC-G8YT2G		
884		TU	TRANSISTOR		Q6401	6-550-585-01	TRANSISTOR 2PC4081R-115		
885		TU	TRANSISTOR		Q6402	6-550-585-01	TRANSISTOR 2PC4081R-115		
886		TU	TRANSISTOR		Q6403	6-550-585-01	TRANSISTOR 2PC4081R-115		
887		TU	TRANSISTOR		Q6404	6-550-585-01	TRANSISTOR 2PC4081R-115		
888		TU	TRANSISTOR		Q6405	6-550-549-01	TRANSISTOR DTC114EUAFT106		

No.	#	Board	Type	⚠/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
889		TU	TRANSISTOR		Q6406	6-550-586-01	TRANSISTOR 2PA1576R-115		
890		TU	TRANSISTOR		Q6407	6-550-585-01	TRANSISTOR 2PC4081R-115		
891		TU	TRANSISTOR		Q6408	6-550-586-01	TRANSISTOR 2PA1576R-115		
892		TU	TRANSISTOR		Q6457	6-550-549-01	TRANSISTOR DTC114EUAFT106		
893		TU	RESISTOR		R6400	1-216-864-11	SHORT CHIP 0		
894		TU	RESISTOR		R6401	1-216-809-11	METAL CHIP 100 5% 1/10W		
895		TU	RESISTOR		R6402	1-216-809-11	METAL CHIP 100 5% 1/10W		
896		TU	RESISTOR		R6403	1-216-821-11	METAL CHIP 1K 5% 1/10W		
897		TU	RESISTOR		R6404	1-216-864-11	SHORT CHIP 0		
898		TU	RESISTOR		R6405	1-216-825-11	METAL CHIP 2.2K 5% 1/10W		
899		TU	RESISTOR		R6409	1-216-821-11	METAL CHIP 1K 5% 1/10W		
900		TU	RESISTOR		R6410	1-216-839-11	METAL CHIP 33K 5% 1/10W		
901		TU	RESISTOR		R6412	1-216-833-11	METAL CHIP 10K 5% 1/10W		
902		TU	RESISTOR		R6413	1-216-837-11	METAL CHIP 22K 5% 1/10W		
903		TU	RESISTOR		R6414	1-216-809-11	METAL CHIP 100 5% 1/10W		
904		TU	RESISTOR		R6415	1-216-809-11	METAL CHIP 100 5% 1/10W		
905		TU	RESISTOR		R6416	1-216-864-11	SHORT CHIP 0		
906		TU	RESISTOR		R6417	1-216-821-11	METAL CHIP 1K 5% 1/10W		
907		TU	RESISTOR		R6418	1-216-864-11	SHORT CHIP 0		
908		TU	RESISTOR		R6420	1-216-864-11	SHORT CHIP 0		
909		TU	RESISTOR		R6421	1-216-821-11	METAL CHIP 1K 5% 1/10W		
910		TU	RESISTOR		R6423	1-216-864-11	SHORT CHIP 0		
911		TU	RESISTOR		R6424	1-216-864-11	SHORT CHIP 0		
912		TU	RESISTOR		R6425	1-216-817-11	METAL CHIP 470 5% 1/10W		
913		TU	RESISTOR		R6426	1-216-817-11	METAL CHIP 470 5% 1/10W		
914		TU	RESISTOR		R6427	1-216-836-11	METAL CHIP 18K 5% 1/10W		
915		TU	RESISTOR		R6428	1-216-833-11	METAL CHIP 10K 5% 1/10W		
916		TU	RESISTOR		R6430	1-216-826-11	METAL CHIP 2.7K 5% 1/10W		
917		TU	RESISTOR		R6431	1-216-839-11	METAL CHIP 33K 5% 1/10W		
918		TU	RESISTOR		R6432	1-216-829-11	METAL CHIP 4.7K 5% 1/10W		
919		TU	RESISTOR		R6433	1-216-828-11	METAL CHIP 3.9K 5% 1/10W		
920		TU	RESISTOR		R6434	1-216-825-11	METAL CHIP 2.2K 5% 1/10W		
921		TU	RESISTOR		R6435	1-216-821-11	METAL CHIP 1K 5% 1/10W		
922		TU	RESISTOR		R6437	1-216-821-11	METAL CHIP 1K 5% 1/10W		
923		TU	RESISTOR		R6438	1-216-821-11	METAL CHIP 1K 5% 1/10W		
924		TU	RESISTOR		R6466	1-216-829-11	METAL CHIP 4.7K 5% 1/10W		
925		TU	RESISTOR		R6468	1-216-829-11	METAL CHIP 4.7K 5% 1/10W		
926		TU	TUNER		TU6400	8-598-593-60	TUNER, FSS BTF-WA421		
927		B	CAPACITOR		C1002	1-126-391-11	ELECT CHIP 47UF 20.00% 6.3V		
928		B	CAPACITOR		C1005	1-125-891-11	CERAMIC CHIP 0.47UF 10.00% 10V		
929		B	CAPACITOR		C1006	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
930		B	CAPACITOR		C1007	1-162-968-11	CERAMIC CHIP 0.0047UF 10.00% 50V		
931		B	CAPACITOR		C1008	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
932		B	CAPACITOR		C1009	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
933		B	CAPACITOR		C1010	1-162-917-11	CERAMIC CHIP 15PF 5.00% 50V		
934		B	CAPACITOR		C1011	1-162-917-11	CERAMIC CHIP 15PF 5.00% 50V		
935		B	CAPACITOR		C1012	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
936		B	CAPACITOR		C1013	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
937		B	CAPACITOR		C1014	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
938		B	CAPACITOR		C1015	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
939		B	CAPACITOR		C1016	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
940		B	CAPACITOR		C1017	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
941		B	CAPACITOR		C1018	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
942		B	CAPACITOR		C1019	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
943		B	CAPACITOR		C1028	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
944		B	CAPACITOR		C1040	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
945		B	CAPACITOR		C1041	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
946		B	CAPACITOR		C1042	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
947		B	CAPACITOR		C1043	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
948		B	CAPACITOR		C1044	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
949		B	CAPACITOR		C1045	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
950		B	CAPACITOR		C1048	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
951		B	CAPACITOR		C1049	1-164-947-11	CERAMIC CHIP 0.01UF 50V		
952		B	CAPACITOR		C1050	1-126-394-11	ELECT CHIP 10UF 20.00% 16V		
953		B	CAPACITOR		C1051	1-125-837-91	CERAMIC CHIP 1UF 10% 6.3V		
954		B	CAPACITOR		C1054	1-126-391-11	ELECT CHIP 47UF 20.00% 6.3V		
955		B	CAPACITOR		C1055	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
956		B	CAPACITOR		C1057	1-162-966-11	CERAMIC CHIP 0.0022UF 10.00% 50V		
957		B	CAPACITOR		C1059	1-162-927-11	CERAMIC CHIP 100PF 5.00% 50V		
958		B	CAPACITOR		C1060	1-126-396-11	ELECT CHIP 47UF 20.00% 16V		
959		B	CAPACITOR		C1192	1-126-390-11	ELECT CHIP 22UF 20.00% 6.3V		
960		B	CAPACITOR		C3002	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
961		B	CAPACITOR		C3003	1-126-396-11	ELECT CHIP 47UF 20.00% 16V		
962		B	CAPACITOR		C3011	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		

No.	#	Board	Type	⚠/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
963		B	CAPACITOR		C3012	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
964		B	CAPACITOR		C3015	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
965		B	CAPACITOR		C3017	1-128-357-11	ELECT CHIP 10UF 20.00% 16V		
966		B	CAPACITOR		C3024	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
967		B	CAPACITOR		C3025	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
968		B	CAPACITOR		C3026	1-126-392-11	ELECT CHIP 100UF 20.00% 6.3V		
969		B	CAPACITOR		C3027	1-126-392-11	ELECT CHIP 100UF 20.00% 6.3V		
970		B	CAPACITOR		C3028	1-126-400-11	ELECT CHIP 22UF 20.00% 35V		
971		B	CAPACITOR		C3029	1-126-400-11	ELECT CHIP 22UF 20.00% 35V		
972		B	CAPACITOR		C3030	1-126-400-11	ELECT CHIP 22UF 20.00% 35V		
973		B	CAPACITOR		C3031	1-126-392-11	ELECT CHIP 100UF 20.00% 6.3V		
974		B	CAPACITOR		C3032	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
975		B	CAPACITOR		C3033	1-126-392-11	ELECT CHIP 100UF 20.00% 6.3V		
976		B	CAPACITOR		C3034	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
977		B	CAPACITOR		C3035	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
978		B	CAPACITOR		C3036	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
979		B	CAPACITOR		C3037	1-126-392-11	ELECT CHIP 100UF 20.00% 6.3V		
980		B	CAPACITOR		C3038	1-126-390-11	ELECT CHIP 22UF 20.00% 6.3V		
981		B	CAPACITOR		C3039	1-126-390-11	ELECT CHIP 22UF 20.00% 6.3V		
982		B	CAPACITOR		C3040	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
983		B	CAPACITOR		C3041	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
984		B	CAPACITOR		C3042	1-107-726-91	CERAMIC CHIP 0.01UF 10.00% 16V		
985		B	CAPACITOR		C3043	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
986		B	CAPACITOR		C3044	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
987		B	CAPACITOR		C3045	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
988		B	CAPACITOR		C3046	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
989		B	CAPACITOR		C3047	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
990		B	CAPACITOR		C3048	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
991		B	CAPACITOR		C3049	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
992		B	CAPACITOR		C3050	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
993		B	CAPACITOR		C3051	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
994		B	CAPACITOR		C3052	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
995		B	CAPACITOR		C3053	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
996		B	CAPACITOR		C3054	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
997		B	CAPACITOR		C3055	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
998		B	CAPACITOR		C3056	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
999		B	CAPACITOR		C3057	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
1000		B	CAPACITOR		C3059	1-162-964-11	CERAMIC CHIP 0.001UF 10.00% 50V		
1001		B	CAPACITOR		C3060	1-137-710-11	CERAMIC CHIP 10UF 20% 6.3V		
1002		B	CAPACITOR		C3061	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1003		B	CAPACITOR		C3062	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1004		B	CAPACITOR		C3063	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1005		B	CAPACITOR		C3064	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1006		B	CAPACITOR		C3065	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1007		B	CAPACITOR		C3066	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1008		B	CAPACITOR		C3067	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1009		B	CAPACITOR		C3068	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1010		B	CAPACITOR		C3069	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1011		B	CAPACITOR		C3070	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1012		B	CAPACITOR		C3071	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1013		B	CAPACITOR		C3072	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1014		B	CAPACITOR		C3073	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1015		B	CAPACITOR		C3074	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1016		B	CAPACITOR		C3075	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1017		B	CAPACITOR		C3076	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1018		B	CAPACITOR		C3077	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1019		B	CAPACITOR		C3078	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1020		B	CAPACITOR		C3079	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1021		B	CAPACITOR		C3080	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1022		B	CAPACITOR		C3081	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1023		B	CAPACITOR		C3082	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1024		B	CAPACITOR		C3083	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
1025		B	CAPACITOR		C3084	1-100-159-91	CERAMIC CHIP 22UF 10% 6.3V		
1026		B	CAPACITOR		C3085	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1027		B	CAPACITOR		C3088	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1028		B	CAPACITOR		C3089	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1029		B	CAPACITOR		C3090	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1030		B	CAPACITOR		C3091	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1031		B	CAPACITOR		C3093	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1032		B	CAPACITOR		C3094	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1033		B	CAPACITOR		C3095	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1034		B	CAPACITOR		C3096	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1035		B	CAPACITOR		C3097	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1036		B	CAPACITOR		C3098	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		

No.	#	Board	Type	⚠/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
1037		B	CAPACITOR		C3100	1-162-964-11	CERAMIC CHIP 0.001UF 10.00% 50V		
1038		B	CAPACITOR		C3101	1-162-927-11	CERAMIC CHIP 100PF 5.00% 50V		
1039		B	CAPACITOR		C3102	1-137-710-11	CERAMIC CHIP 10UF 20% 6.3V		
1040		B	CAPACITOR		C3103	1-137-710-11	CERAMIC CHIP 10UF 20% 6.3V		
1041		B	CAPACITOR		C3104	1-164-874-11	CERAMIC CHIP 100PF 5.00% 50V		
1042		B	CAPACITOR		C3105	1-164-874-11	CERAMIC CHIP 100PF 5.00% 50V		
1043		B	CAPACITOR		C3106	1-164-874-11	CERAMIC CHIP 100PF 5.00% 50V		
1044		B	CAPACITOR		C3107	1-164-874-11	CERAMIC CHIP 100PF 5.00% 50V		
1045		B	CAPACITOR		C3108	1-164-874-11	CERAMIC CHIP 100PF 5.00% 50V		
1046		B	CAPACITOR		C3109	1-164-874-11	CERAMIC CHIP 100PF 5.00% 50V		
1047		B	CAPACITOR		C3110	1-164-874-11	CERAMIC CHIP 100PF 5.00% 50V		
1048		B	CAPACITOR		C3301	1-119-667-11	CERAMIC CHIP 22UF 10V		
1049		B	CAPACITOR		C3302	1-125-837-91	CERAMIC CHIP 1UF 10% 6.3V		
1050		B	CAPACITOR		C3304	1-164-315-11	CERAMIC CHIP 470PF 5.00% 50V		
1051		B	CAPACITOR		C3305	1-137-710-11	CERAMIC CHIP 10UF 20% 6.3V		
1052		B	CAPACITOR		C3306	1-100-159-91	CERAMIC CHIP 22UF 10% 6.3V		
1053		B	CAPACITOR		C3307	1-107-820-11	CERAMIC CHIP 0.1UF 16V		
1054		B	CAPACITOR		C3308	1-100-159-91	CERAMIC CHIP 22UF 10% 6.3V		
1055		B	CAPACITOR		C3309	1-107-820-11	CERAMIC CHIP 0.1UF 16V		
1056		B	CAPACITOR		C3310	1-107-820-11	CERAMIC CHIP 0.1UF 16V		
1057		B	CAPACITOR		C3311	1-107-820-11	CERAMIC CHIP 0.1UF 16V		
1058		B	CAPACITOR		C3312	1-107-820-11	CERAMIC CHIP 0.1UF 16V		
1059		B	CAPACITOR		C3313	1-107-820-11	CERAMIC CHIP 0.1UF 16V		
1060		B	CAPACITOR		C3314	1-107-820-11	CERAMIC CHIP 0.1UF 16V		
1061		B	CAPACITOR		C3315	1-107-820-11	CERAMIC CHIP 0.1UF 16V		
1062		B	CAPACITOR		C3316	1-100-159-91	CERAMIC CHIP 22UF 10% 6.3V		
1063		B	CAPACITOR		C3317	1-107-820-11	CERAMIC CHIP 0.1UF 16V		
1064		B	CAPACITOR		C3318	1-107-820-11	CERAMIC CHIP 0.1UF 16V		
1065		B	CAPACITOR		C3319	1-107-820-11	CERAMIC CHIP 0.1UF 16V		
1066		B	CAPACITOR		C3320	1-107-820-11	CERAMIC CHIP 0.1UF 16V		
1067		B	CAPACITOR		C3321	1-107-820-11	CERAMIC CHIP 0.1UF 16V		
1068		B	CAPACITOR		C3322	1-107-820-11	CERAMIC CHIP 0.1UF 16V		
1069		B	CAPACITOR		C3323	1-107-820-11	CERAMIC CHIP 0.1UF 16V		
1070		B	CAPACITOR		C3324	1-107-820-11	CERAMIC CHIP 0.1UF 16V		
1071		B	CAPACITOR		C3325	1-107-820-11	CERAMIC CHIP 0.1UF 16V		
1072		B	CAPACITOR		C3326	1-107-820-11	CERAMIC CHIP 0.1UF 16V		
1073		B	CAPACITOR		C3327	1-107-820-11	CERAMIC CHIP 0.1UF 16V		
1074		B	CAPACITOR		C3328	1-119-667-11	CERAMIC CHIP 22UF 10V		
1075		B	CAPACITOR		C3329	1-107-820-11	CERAMIC CHIP 0.1UF 16V		
1076		B	CAPACITOR		C3330	1-107-820-11	CERAMIC CHIP 0.1UF 16V		
1077		B	CAPACITOR		C3331	1-107-820-11	CERAMIC CHIP 0.1UF 16V		
1078		B	CAPACITOR		C3332	1-107-820-11	CERAMIC CHIP 0.1UF 16V		
1079		B	CAPACITOR		C3333	1-107-820-11	CERAMIC CHIP 0.1UF 16V		
1080		B	CAPACITOR		C3334	1-107-820-11	CERAMIC CHIP 0.1UF 16V		
1081		B	CAPACITOR		C3335	1-107-820-11	CERAMIC CHIP 0.1UF 16V		
1082		B	CAPACITOR		C3336	1-107-820-11	CERAMIC CHIP 0.1UF 16V		
1083		B	CAPACITOR		C3337	1-107-820-11	CERAMIC CHIP 0.1UF 16V		
1084		B	CAPACITOR		C3338	1-107-820-11	CERAMIC CHIP 0.1UF 16V		
1085		B	CAPACITOR		C3339	1-107-820-11	CERAMIC CHIP 0.1UF 16V		
1086		B	CAPACITOR		C3340	1-107-820-11	CERAMIC CHIP 0.1UF 16V		
1087		B	CAPACITOR		C3341	1-107-820-11	CERAMIC CHIP 0.1UF 16V		
1088		B	CAPACITOR		C3342	1-107-820-11	CERAMIC CHIP 0.1UF 16V		
1089		B	CAPACITOR		C3343	1-107-820-11	CERAMIC CHIP 0.1UF 16V		
1090		B	CAPACITOR		C3344	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1091		B	CAPACITOR		C3345	1-107-820-11	CERAMIC CHIP 0.1UF 16V		
1092		B	CAPACITOR		C3346	1-126-391-11	ELECT CHIP 47UF 20.00% 6.3V		
1093		B	CAPACITOR		C3347	1-100-159-91	CERAMIC CHIP 22UF 10% 6.3V		
1094		B	CAPACITOR		C3348	1-107-820-11	CERAMIC CHIP 0.1UF 16V		
1095		B	CAPACITOR		C3350	1-100-159-91	CERAMIC CHIP 22UF 10% 6.3V		
1096		B	CAPACITOR		C3351	1-107-820-11	CERAMIC CHIP 0.1UF 16V		
1097		B	CAPACITOR		C3600	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
1098		B	CAPACITOR		C3601	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
1099		B	CAPACITOR		C3602	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
1100		B	CAPACITOR		C3603	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
1101		B	CAPACITOR		C3604	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
1102		B	CAPACITOR		C3605	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
1103		B	CAPACITOR		C3606	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
1104		B	CAPACITOR		C3607	1-127-760-11	CERAMIC CHIP 4.7UF 10% 6.3V		
1105		B	CAPACITOR		C3608	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
1106		B	CAPACITOR		C3609	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
1107		B	CAPACITOR		C3610	1-128-995-21	ELECT CHIP 100UF 20% 10V		
1108		B	CAPACITOR		C3611	1-164-230-11	CERAMIC CHIP 220PF 5.00% 50V		
1109		B	CAPACITOR		C3612	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
1110		B	CAPACITOR		C3613	1-128-995-21	ELECT CHIP 100UF 20% 10V		

No.	#	Board	Type	⚠/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
1111		B	CAPACITOR		C3614	1-109-982-11	CERAMIC CHIP 1UF 10.00% 10V		
1112		B	CAPACITOR		C5001	1-162-919-11	CERAMIC CHIP 22PF 5.00% 50V		
1113		B	CAPACITOR		C5002	1-162-919-11	CERAMIC CHIP 22PF 5.00% 50V		
1114		B	CAPACITOR		C5003	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
1115		B	CAPACITOR		C5004	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
1116		B	CAPACITOR		C5005	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
1117		B	CAPACITOR		C5006	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
1118		B	CAPACITOR		C5007	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
1119		B	CAPACITOR		C5008	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
1120		B	CAPACITOR		C5009	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
1121		B	CAPACITOR		C5010	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
1122		B	CAPACITOR		C5011	1-162-962-11	CERAMIC CHIP 470PF 10.00% 50V		
1123		B	CAPACITOR		C5012	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
1124		B	CAPACITOR		C5013	1-162-927-11	CERAMIC CHIP 100PF 5.00% 50V		
1125		B	CAPACITOR		C5014	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
1126		B	CAPACITOR		C5015	1-162-908-11	CERAMIC CHIP 3PF 0.25PF 50V		
1127		B	CAPACITOR		C5016	1-125-837-91	CERAMIC CHIP 1UF 10% 6.3V		
1128		B	CAPACITOR		C5017	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
1129		B	CAPACITOR		C5018	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
1130		B	CAPACITOR		C5019	1-125-837-91	CERAMIC CHIP 1UF 10% 6.3V		
1131		B	CAPACITOR		C5020	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
1132		B	CAPACITOR		C5023	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
1133		B	CAPACITOR		C5024	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
1134		B	CAPACITOR		C5025	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
1135		B	CAPACITOR		C5026	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
1136		B	CAPACITOR		C5027	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
1137		B	CAPACITOR		C5028	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
1138		B	CAPACITOR		C5029	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
1139		B	CAPACITOR		C5030	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
1140		B	CAPACITOR		C5031	1-137-710-11	CERAMIC CHIP 10UF 20% 6.3V		
1141		B	CAPACITOR		C5032	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
1142		B	CAPACITOR		C5033	1-137-710-11	CERAMIC CHIP 10UF 20% 6.3V		
1143		B	CAPACITOR		C5034	1-100-159-91	CERAMIC CHIP 22UF 10% 6.3V		
1144		B	CAPACITOR		C5035	1-100-159-91	CERAMIC CHIP 22UF 10% 6.3V		
1145		B	CAPACITOR		C5036	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
1146		B	CAPACITOR		C5037	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
1147		B	CAPACITOR		C5039	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
1148		B	CAPACITOR		C5040	1-126-392-11	ELECT CHIP 100UF 20.00% 6.3V		
1149		B	CAPACITOR		C5041	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
1150		B	CAPACITOR		C5042	1-126-392-11	ELECT CHIP 100UF 20.00% 6.3V		
1151		B	CAPACITOR		C5801	1-100-159-91	CERAMIC CHIP 22UF 10% 6.3V		
1152		B	CAPACITOR		C5802	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
1153		B	CAPACITOR		C5803	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
1154		B	CAPACITOR		C5804	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1155		B	CAPACITOR		C5805	1-164-935-11	CERAMIC CHIP 470PF 10.00% 50V		
1156		B	CAPACITOR		C5806	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1157		B	CAPACITOR		C5807	1-164-935-11	CERAMIC CHIP 470PF 10.00% 50V		
1158		B	CAPACITOR		C5808	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1159		B	CAPACITOR		C5809	1-164-935-11	CERAMIC CHIP 470PF 10.00% 50V		
1160		B	CAPACITOR		C5810	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1161		B	CAPACITOR		C5811	1-164-935-11	CERAMIC CHIP 470PF 10.00% 50V		
1162		B	CAPACITOR		C5812	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1163		B	CAPACITOR		C5813	1-164-935-11	CERAMIC CHIP 470PF 10.00% 50V		
1164		B	CAPACITOR		C5814	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1165		B	CAPACITOR		C5815	1-164-935-11	CERAMIC CHIP 470PF 10.00% 50V		
1166		B	CAPACITOR		C5816	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
1167		B	CAPACITOR		C5817	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1168		B	CAPACITOR		C5818	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
1169		B	CAPACITOR		C5819	1-164-935-11	CERAMIC CHIP 470PF 10.00% 50V		
1170		B	CAPACITOR		C5820	1-164-935-11	CERAMIC CHIP 470PF 10.00% 50V		
1171		B	CAPACITOR		C5821	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1172		B	CAPACITOR		C5822	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
1173		B	CAPACITOR		C5823	1-126-390-11	ELECT CHIP 22UF 20.00% 6.3V		
1174		B	CAPACITOR		C5824	1-128-934-91	CERAMIC CHIP 0.33UF 20% 10V		
1175		B	CAPACITOR		C5825	1-164-935-11	CERAMIC CHIP 470PF 10.00% 50V		
1176		B	CAPACITOR		C5826	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1177		B	CAPACITOR		C5827	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1178		B	CAPACITOR		C5828	1-162-915-11	CERAMIC CHIP 10PF 0.50PF 50V		
1179		B	CAPACITOR		C5829	1-164-935-11	CERAMIC CHIP 470PF 10.00% 50V		
1180		B	CAPACITOR		C5830	1-162-910-11	CERAMIC CHIP 5PF 0.25PF 50V		
1181		B	CAPACITOR		C5831	1-126-412-11	ELECT CHIP 220UF 20.00% 4V		
1182		B	CAPACITOR		C5832	1-164-935-11	CERAMIC CHIP 470PF 10.00% 50V		
1183		B	CAPACITOR		C5833	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1184		B	CAPACITOR		C5835	1-164-935-11	CERAMIC CHIP 470PF 10.00% 50V		

No.	#	Board	Type	⚠/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
1185		B	CAPACITOR		C5836	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1186		B	CAPACITOR		C5837	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1187		B	CAPACITOR		C5838	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
1188		B	CAPACITOR		C5839	1-164-935-11	CERAMIC CHIP 470PF 10.00% 50V		
1189		B	CAPACITOR		C5840	1-164-935-11	CERAMIC CHIP 470PF 10.00% 50V		
1190		B	CAPACITOR		C5841	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1191		B	CAPACITOR		C5842	1-164-935-11	CERAMIC CHIP 470PF 10.00% 50V		
1192		B	CAPACITOR		C5843	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1193		B	CAPACITOR		C5844	1-164-935-11	CERAMIC CHIP 470PF 10.00% 50V		
1194		B	CAPACITOR		C5845	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1195		B	CAPACITOR		C5846	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1196		B	CAPACITOR		C5847	1-164-935-11	CERAMIC CHIP 470PF 10.00% 50V		
1197		B	CAPACITOR		C5848	1-164-935-11	CERAMIC CHIP 470PF 10.00% 50V		
1198		B	CAPACITOR		C5849	1-164-935-11	CERAMIC CHIP 470PF 10.00% 50V		
1199		B	CAPACITOR		C5850	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1200		B	CAPACITOR		C5851	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1201		B	CAPACITOR		C5852	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
1202		B	CAPACITOR		C5853	1-164-935-11	CERAMIC CHIP 470PF 10.00% 50V		
1203		B	CAPACITOR		C5854	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1204		B	CAPACITOR		C5855	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1205		B	CAPACITOR		C5856	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1206		B	CAPACITOR		C5857	1-164-935-11	CERAMIC CHIP 470PF 10.00% 50V		
1207		B	CAPACITOR		C5858	1-164-935-11	CERAMIC CHIP 470PF 10.00% 50V		
1208		B	CAPACITOR		C5859	1-164-935-11	CERAMIC CHIP 470PF 10.00% 50V		
1209		B	CAPACITOR		C5860	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1210		B	CAPACITOR		C5861	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1211		B	CAPACITOR		C5862	1-164-935-11	CERAMIC CHIP 470PF 10.00% 50V		
1212		B	CAPACITOR		C5863	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1213		B	CAPACITOR		C5864	1-164-935-11	CERAMIC CHIP 470PF 10.00% 50V		
1214		B	CAPACITOR		C5865	1-164-935-11	CERAMIC CHIP 470PF 10.00% 50V		
1215		B	CAPACITOR		C5866	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1216		B	CAPACITOR		C5867	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1217		B	CAPACITOR		C5868	1-164-935-11	CERAMIC CHIP 470PF 10.00% 50V		
1218		B	CAPACITOR		C5869	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1219		B	CAPACITOR		C5870	1-164-935-11	CERAMIC CHIP 470PF 10.00% 50V		
1220		B	CAPACITOR		C5871	1-126-392-11	ELECT CHIP 100UF 20.00% 6.3V		
1221		B	CAPACITOR		C5872	1-126-392-11	ELECT CHIP 100UF 20.00% 6.3V		
1222		B	CAPACITOR		C5873	1-164-935-11	CERAMIC CHIP 470PF 10.00% 50V		
1223		B	CAPACITOR		C5874	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1224		B	CAPACITOR		C5875	1-164-935-11	CERAMIC CHIP 470PF 10.00% 50V		
1225		B	CAPACITOR		C5876	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1226		B	CAPACITOR		C5877	1-164-935-11	CERAMIC CHIP 470PF 10.00% 50V		
1227		B	CAPACITOR		C5878	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1228		B	CAPACITOR		C5879	1-164-935-11	CERAMIC CHIP 470PF 10.00% 50V		
1229		B	CAPACITOR		C5880	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1230		B	CAPACITOR		C5881	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1231		B	CAPACITOR		C5882	1-164-935-11	CERAMIC CHIP 470PF 10.00% 50V		
1232		B	CAPACITOR		C5883	1-164-935-11	CERAMIC CHIP 470PF 10.00% 50V		
1233		B	CAPACITOR		C5884	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1234		B	CAPACITOR		C5885	1-164-935-11	CERAMIC CHIP 470PF 10.00% 50V		
1235		B	CAPACITOR		C5886	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1236		B	CAPACITOR		C5887	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1237		B	CAPACITOR		C5888	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1238		B	CAPACITOR		C5889	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1239		B	CAPACITOR		C5890	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1240		B	CAPACITOR		C5891	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1241		B	CAPACITOR		C5892	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1242		B	CAPACITOR		C5893	1-164-935-11	CERAMIC CHIP 470PF 10.00% 50V		
1243		B	CAPACITOR		C5894	1-164-935-11	CERAMIC CHIP 470PF 10.00% 50V		
1244		B	CAPACITOR		C5895	1-162-964-11	CERAMIC CHIP 0.001UF 10.00% 50V		
1245		B	CONNECTOR		CN1002	1-779-936-21	CONNECTOR, FFC/FPC 18P		
1246		B	CONNECTOR		CN1003	1-774-769-11	CONNECTOR, FFC/FPC 25P		
1247		B	CONNECTOR	*	CN1004	1-766-376-11	PIN, CONNECTOR (1.5MM)(SMD) 9P		
1248		B	CONNECTOR		CN1005	1-774-769-11	CONNECTOR, FFC/FPC 25P		
1249		B	CONNECTOR		CN1007	1-774-769-11	CONNECTOR, FFC/FPC 25P		
1250		B	CONNECTOR		CN1008	1-691-550-11	PIN, CONNECTOR (1.5MM)(SMD) 3P		
1251		B	CONNECTOR	*	CN1009	1-764-250-11	PIN, CONNECTOR (PC BOARD) 4P		
1252		B	CONNECTOR	*	CN5801	1-816-544-22	PIN, CONNECTOR (PC BOARD) 20P		
1253		B	DIODE		D1002	8-719-024-77	DIODE HN1D03FU-TE85L		
1254		B	DIODE		D1003	8-719-081-97	DIODE MMDL914T1		
1255		B	DIODE		D1005	8-719-081-97	DIODE MMDL914T1		
1256		B	DIODE		D1006	8-719-077-59	DIODE 1PS302		
1257		B	DIODE		D1008	8-719-036-94	DIODE RD5.6SB-T1		
1258		B	DIODE		D1009	8-719-036-94	DIODE RD5.6SB-T1		

No.	#	Board	Type	⚠/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
1259		B	DIODE		D1012	8-719-036-94	DIODE RD5.6SB-T1		
1260		B	DIODE		D1192	8-719-036-94	DIODE RD5.6SB-T1		
1261		B	DIODE		D5001	8-719-066-11	DIODE 1PS184-115		
1262		B	DIODE		D5002	8-719-066-11	DIODE 1PS184-115		
1263		B	DIODE		D5004	8-719-081-97	DIODE MMDL914T1		
1264		B	DIODE		D5005	8-719-081-97	DIODE MMDL914T1		
1265		B	DIODE		D5006	8-719-081-97	DIODE MMDL914T1		
1266		B	FERRITE BEAD		FB1001	1-414-445-11	FERRITE 0UH		
1267		B	FERRITE BEAD		FB1002	1-414-445-11	FERRITE 0UH		
1268		B	FERRITE BEAD		FB1003	1-469-775-21	FERRITE 0UH		
1269		B	FERRITE BEAD		FB1004	1-414-445-11	FERRITE 0UH		
1270		B	FERRITE BEAD		FB3009	1-414-234-22	FERRITE 0UH		
1271		B	FERRITE BEAD		FB3301	1-414-445-11	FERRITE 0UH		
1272		B	FERRITE BEAD		FB3302	1-414-864-11	FERRITE 0UH		
1273		B	FERRITE BEAD		FB3303	1-414-445-11	FERRITE 0UH		
1274		B	FERRITE BEAD		FB3304	1-414-445-11	FERRITE 0UH		
1275		B	FERRITE BEAD		FB3305	1-414-445-11	FERRITE 0UH		
1276		B	FERRITE BEAD		FB5001	1-414-445-11	FERRITE 0UH		
1277		B	FERRITE BEAD		FB5002	1-414-445-11	FERRITE 0UH		
1278		B	FERRITE BEAD		FB5003	1-414-445-11	FERRITE 0UH		
1279		B	FERRITE BEAD		FB5004	1-414-445-11	FERRITE 0UH		
1280		B	FERRITE BEAD		FB5005	1-414-445-11	FERRITE 0UH		
1281		B	FERRITE BEAD		FB5006	1-414-445-11	FERRITE 0UH		
1282		B	FERRITE BEAD		FB5007	1-414-445-11	FERRITE 0UH		
1283		B	FERRITE BEAD		FB5008	1-414-445-11	FERRITE 0UH		
1284		B	FERRITE BEAD		FB5009	1-414-445-11	FERRITE 0UH		
1285		B	FERRITE BEAD		FB5010	1-414-864-11	FERRITE 0UH		
1286		B	FERRITE BEAD		FB5011	1-414-864-11	FERRITE 0UH		
1287		B	FERRITE BEAD		FB5012	1-414-864-11	FERRITE 0UH		
1288		B	FERRITE BEAD		FB5013	1-414-864-11	FERRITE 0UH		
1289		B	FERRITE BEAD		FB5801	1-414-864-11	FERRITE 0UH		
1290		B	FERRITE BEAD		FB5802	1-414-864-11	FERRITE 0UH		
1291		B	FERRITE BEAD		FB5803	1-414-445-11	FERRITE 0UH		
1292		B	FERRITE BEAD		FB5804	1-414-445-11	FERRITE 0UH		
1293		B	FERRITE BEAD		FB5805	1-414-445-11	FERRITE 0UH		
1294		B	FERRITE BEAD		FB5806	1-414-445-11	FERRITE 0UH		
1295		B	FERRITE BEAD		FB5807	1-400-180-21	INDUCTOR 0UH		
1296		B	FILTER		FL3001	1-234-560-21	FILTER, LOW PASS		
1297		B	FILTER		FL3002	1-234-559-21	FILTER, LOW PASS		
1298		B	FILTER		FL3003	1-234-559-21	FILTER, LOW PASS		
1299		B	FILTER		FL3004	1-234-177-21	FERRITE 0UH		
1300		B	FILTER		FL3005	1-234-177-21	FERRITE 0UH		
1301		B	FILTER		FL3006	1-234-177-21	FERRITE 0UH		
1302		B	FILTER		FL3007	1-234-177-21	FERRITE 0UH		
1303		B	FILTER		FL3008	1-234-677-21	FILTER, EMI		
1304		B	FILTER		FL3301	1-234-177-21	FERRITE 0UH		
1305		B	FILTER		FL3302	1-234-177-21	FERRITE 0UH		
1306		B	FILTER		FL3303	1-234-177-21	FERRITE 0UH		
1307		B	FILTER		FL3304	1-234-177-21	FERRITE 0UH		
1308		B	FILTER		FL5001	1-234-177-21	FERRITE 0UH		
1309		B	FILTER		FL5801	1-234-177-21	FERRITE 0UH		
1310		B	FILTER		FL5802	1-234-177-21	FERRITE 0UH		
1311		B	IC		IC1001	8-759-460-72	IC BA033FP-E2		
1312		B	IC		IC1002	8-759-476-80	IC LM75CIMX-3		
1313		B	IC		IC1006	6-804-871-01	IC HD64F2377VFQ33V-12346		
1314		B	IC		IC1007	6-703-225-01	IC S-80928CNMC-G8YT2G		
1315		B	IC		IC1008	6-702-688-01	IC M24C64-WMN6T(B)		
1316		B	IC		IC1009	8-759-592-49	IC TC7SZ125FU(TE85R)		
1317		B	IC		IC1010	8-759-549-03	IC SN74LV132APWR		
1318		B	IC		IC3002	6-705-529-01	IC LMH6658MMX/J5000172		
1319		B	IC		IC3003	6-705-529-01	IC LMH6658MMX/J5000172		
1320		B	IC		IC3005	8-759-712-65	IC PQ070XZ01ZP		
1321		B	IC		IC3006	8-759-712-65	IC PQ070XZ01ZP		
1322		B	IC		IC3007	8-752-425-02	IC CXD3802BQ		
1323		B	IC		IC3008	6-706-155-01	IC MT48LC2M32B2P-6-Y14W		
1324		B	IC		IC3301	6-700-227-01	IC MM1561JFBE		
1325		B	IC		IC3302	8-752-422-52	IC CXD2097BQ		
1326		B	IC		IC3303	6-705-992-11	IC HY57V161610ETP-7DR		
1327		B	IC		IC3304	8-759-669-78	IC TLC2933IPWR-12		
1328		B	IC		IC3600	8-752-937-39	IC CXP964032-003R		
1329		B	IC		IC5001	6-804-919-01	IC MX29LV800TTC-70G-12346		
1330		B	IC		IC5002	8-759-549-03	IC SN74LV132APWR		
1331		B	IC		IC5003	8-759-669-44	IC SN74LVC74APWR-12		
1332		B	IC		IC5004	6-704-191-01	IC S-80829CNNB-B8OT2G		

No.	#	Board	Type	⚠/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
1333		B	IC		IC5005	6-704-192-01	IC S-80822CNNB-B8HT2G		
1334		B	IC		IC5007	6-704-190-01	IC SN74ALVCH16823DGGR		
1335		B	IC		IC5008	8-759-712-65	IC PQ070XZ01ZP		
1336		B	IC		IC5009	8-759-712-65	IC PQ070XZ01ZP		
1337		B	IC		IC5801	8-759-676-70	IC MSM56V16160F-10TS-K		
1338		B	IC		IC5802	6-703-689-01	IC CXD9756R		
1339		B	IC		IC5803	6-700-394-01	IC BA25BC0FP-E2		
1340		B	IC		IC5804	6-701-098-11	IC THC63LVDM83R-T		
1341		B	IC		IC7503	6-706-362-01	IC PW166B-10TL		
1342		B	COIL		L1001	1-412-030-11	INDUCTOR 22UH		
1343		B	COIL		L3001	1-469-525-91	INDUCTOR 10UH		
1344		B	COIL		L3004	1-469-525-91	INDUCTOR 10UH		
1345		B	COIL		L3005	1-412-026-11	INDUCTOR 1UH		
1346		B	COIL		L3006	1-412-026-11	INDUCTOR 1UH		
1347		B	COIL		L3007	1-469-525-91	INDUCTOR 10UH		
1348		B	COIL		L3008	1-469-525-91	INDUCTOR 10UH		
1349		B	COIL		L3009	1-469-525-91	INDUCTOR 10UH		
1350		B	COIL		L3010	1-412-029-11	INDUCTOR 10UH		
1351		B	COIL		L3301	1-469-525-91	INDUCTOR 10UH		
1352		B	COIL		L3302	1-469-528-91	INDUCTOR 100UH		
1353		B	COIL		L3303	1-469-528-91	INDUCTOR 100UH		
1354		B	COIL		L3600	1-469-525-91	INDUCTOR 10UH		
1355		B	COIL		L3601	1-469-525-91	INDUCTOR 10UH		
1356		B	COIL		L5801	1-419-774-21	INDUCTOR 0UH		
1357		B	COIL		L5802	1-419-774-21	INDUCTOR 0UH		
1358		B	COIL		L5803	1-419-774-21	INDUCTOR 0UH		
1359		B	COIL		L5804	1-419-774-21	INDUCTOR 0UH		
1360		B	COIL		L5805	1-419-774-21	INDUCTOR 0UH		
1361		B	TRANSISTOR		Q1006	8-729-013-28	TRANSISTOR HN1B01FU-TE85R		
1362		B	TRANSISTOR		Q1009	8-729-025-28	TRANSISTOR 2SK1828		
1363		B	TRANSISTOR		Q1010	8-729-025-28	TRANSISTOR 2SK1828		
1364		B	TRANSISTOR		Q1015	8-729-907-00	TRANSISTOR DTC114EU		
1365		B	TRANSISTOR		Q1016	8-729-907-00	TRANSISTOR DTC114EU		
1366		B	TRANSISTOR		Q1017	8-729-025-28	TRANSISTOR 2SK1828		
1367		B	TRANSISTOR		Q1018	8-729-025-28	TRANSISTOR 2SK1828		
1368		B	TRANSISTOR		Q3004	8-729-117-73	TRANSISTOR 2SC4178-F14		
1369		B	TRANSISTOR		Q3005	8-729-117-73	TRANSISTOR 2SC4178-F14		
1370		B	TRANSISTOR		Q3006	8-729-117-73	TRANSISTOR 2SC4178-F14		
1371		B	TRANSISTOR		Q3007	8-729-122-63	TRANSISTOR 2SA1226-E4		
1372		B	TRANSISTOR		Q3008	8-729-122-63	TRANSISTOR 2SA1226-E4		
1373		B	TRANSISTOR		Q3009	8-729-122-63	TRANSISTOR 2SA1226-E4		
1374		B	TRANSISTOR		Q3011	6-550-585-01	TRANSISTOR 2PC4081R-115		
1375		B	TRANSISTOR		Q3012	8-729-117-73	TRANSISTOR 2SC4178-F14		
1376		B	TRANSISTOR		Q3013	8-729-117-73	TRANSISTOR 2SC4178-F14		
1377		B	TRANSISTOR		Q3015	8-729-010-25	TRANSISTOR MSD601-RT1		
1378		B	TRANSISTOR		Q3304	6-550-586-01	TRANSISTOR 2PA1576R-115		
1379		B	TRANSISTOR		Q3305	6-550-585-01	TRANSISTOR 2PC4081R-115		
1380		B	TRANSISTOR		Q3600	8-729-424-02	TRANSISTOR 2SB709A-QRS-TX		
1381		B	TRANSISTOR		Q5801	6-550-014-01	TRANSISTOR SSM6N15FU(TE85R)		
1382		B	TRANSISTOR		Q5802	8-729-028-86	TRANSISTOR DTA143EUA-T106		
1383		B	TRANSISTOR		Q5803	8-729-907-00	TRANSISTOR DTC114EU		
1384		B	TRANSISTOR		Q5804	8-729-907-00	TRANSISTOR DTC114EU		
1385		B	TRANSISTOR		Q5805	8-729-046-75	TRANSISTOR SI2301DS-T1		
1386		B	RESISTOR		R1005	1-218-990-11	SHORT CHIP 0		
1387		B	RESISTOR		R1006	1-218-941-81	RES-CHIP 100 5% 1/16W		
1388		B	RESISTOR		R1007	1-218-990-11	SHORT CHIP 0		
1389		B	RESISTOR		R1008	1-218-990-11	SHORT CHIP 0		
1390		B	RESISTOR		R1009	1-218-990-11	SHORT CHIP 0		
1391		B	RESISTOR		R1010	1-218-965-11	RES-CHIP 10K 5% 1/16W		
1392		B	RESISTOR		R1011	1-218-965-11	RES-CHIP 10K 5% 1/16W		
1393		B	RESISTOR		R1012	1-218-973-11	RES-CHIP 47K 5% 1/16W		
1394		B	RESISTOR		R1013	1-218-965-11	RES-CHIP 10K 5% 1/16W		
1395		B	RESISTOR		R1014	1-218-973-11	RES-CHIP 47K 5% 1/16W		
1396		B	RESISTOR		R1015	1-218-965-11	RES-CHIP 10K 5% 1/16W		
1397		B	RESISTOR		R1016	1-218-961-11	RES-CHIP 4.7K 5% 1/16W		
1398		B	RESISTOR		R1017	1-216-805-11	METAL CHIP 47 5% 1/10W		
1399		B	RESISTOR		R1018	1-216-805-11	METAL CHIP 47 5% 1/10W		
1400		B	RESISTOR		R1020	1-216-864-11	SHORT CHIP 0		
1401		B	RESISTOR		R1022	1-216-864-11	SHORT CHIP 0		
1402		B	RESISTOR		R1026	1-216-864-11	SHORT CHIP 0		
1403		B	RESISTOR		R1027	1-216-864-11	SHORT CHIP 0		
1404		B	RESISTOR		R1028	1-216-864-11	SHORT CHIP 0		
1405		B	RESISTOR		R1029	1-218-990-11	SHORT CHIP 0		
1406		B	RESISTOR		R1031	1-218-941-81	RES-CHIP 100 5% 1/16W		

No.	#	Board	Type	⚠/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
1407		B	RESISTOR		R1034	1-218-961-11	RES-CHIP 4.7K 5% 1/16W		
1408		B	RESISTOR		R1035	1-216-864-11	SHORT CHIP 0		
1409		B	RESISTOR		R1036	1-216-864-11	SHORT CHIP 0		
1410		B	RESISTOR		R1037	1-216-864-11	SHORT CHIP 0		
1411		B	RESISTOR		R1048	1-218-961-11	RES-CHIP 4.7K 5% 1/16W		
1412		B	RESISTOR		R1049	1-218-961-11	RES-CHIP 4.7K 5% 1/16W		
1413		B	RESISTOR		R1055	1-218-961-11	RES-CHIP 4.7K 5% 1/16W		
1414		B	RESISTOR		R1058	1-220-183-81	RES-CHIP 1.1K 5% 1/16W		
1415		B	RESISTOR		R1060	1-218-941-81	RES-CHIP 100 5% 1/16W		
1416		B	RESISTOR		R1061	1-218-941-81	RES-CHIP 100 5% 1/16W		
1417		B	RESISTOR		R1062	1-218-941-81	RES-CHIP 100 5% 1/16W		
1418		B	RESISTOR		R1063	1-218-941-81	RES-CHIP 100 5% 1/16W		
1419		B	RESISTOR		R1064	1-218-941-81	RES-CHIP 100 5% 1/16W		
1420		B	RESISTOR		R1065	1-218-941-81	RES-CHIP 100 5% 1/16W		
1421		B	RESISTOR		R1066	1-218-941-81	RES-CHIP 100 5% 1/16W		
1422		B	RESISTOR		R1067	1-218-941-81	RES-CHIP 100 5% 1/16W		
1423		B	RESISTOR		R1068	1-218-965-11	RES-CHIP 10K 5% 1/16W		
1424		B	RESISTOR		R1070	1-218-965-11	RES-CHIP 10K 5% 1/16W		
1425		B	RESISTOR		R1071	1-218-965-11	RES-CHIP 10K 5% 1/16W		
1426		B	RESISTOR		R1072	1-218-929-11	RES-CHIP 10 5% 1/16W		
1427		B	RESISTOR		R1073	1-216-833-11	METAL CHIP 10K 5% 1/10W		
1428		B	RESISTOR		R1074	1-218-945-11	RES-CHIP 220 5% 1/16W		
1429		B	RESISTOR		R1077	1-216-841-11	METAL CHIP 47K 5% 1/10W		
1430		B	RESISTOR		R1081	1-216-841-11	METAL CHIP 47K 5% 1/10W		
1431		B	RESISTOR		R1082	1-218-965-11	RES-CHIP 10K 5% 1/16W		
1432		B	RESISTOR		R1084	1-218-965-11	RES-CHIP 10K 5% 1/16W		
1433		B	RESISTOR		R1085	1-218-965-11	RES-CHIP 10K 5% 1/16W		
1434		B	RESISTOR		R1086	1-218-941-81	RES-CHIP 100 5% 1/16W		
1435		B	RESISTOR		R1087	1-218-941-81	RES-CHIP 100 5% 1/16W		
1436		B	RESISTOR		R1088	1-218-959-11	RES-CHIP 3.3K 5% 1/16W		
1437		B	RESISTOR		R1089	1-218-941-81	RES-CHIP 100 5% 1/16W		
1438		B	RESISTOR		R1090	1-218-941-81	RES-CHIP 100 5% 1/16W		
1439		B	RESISTOR		R1091	1-218-941-81	RES-CHIP 100 5% 1/16W		
1440		B	RESISTOR		R1092	1-218-941-81	RES-CHIP 100 5% 1/16W		
1441		B	RESISTOR		R1094	1-218-965-11	RES-CHIP 10K 5% 1/16W		
1442		B	RESISTOR		R1095	1-218-961-11	RES-CHIP 4.7K 5% 1/16W		
1443		B	RESISTOR		R1096	1-218-965-11	RES-CHIP 10K 5% 1/16W		
1444		B	RESISTOR		R1099	1-218-965-11	RES-CHIP 10K 5% 1/16W		
1445		B	RESISTOR		R1100	1-216-864-11	SHORT CHIP 0		
1446		B	RESISTOR		R1101	1-216-864-11	SHORT CHIP 0		
1447		B	RESISTOR		R1102	1-216-864-11	SHORT CHIP 0		
1448		B	RESISTOR		R1103	1-216-864-11	SHORT CHIP 0		
1449		B	RESISTOR		R1104	1-216-813-11	METAL CHIP 220 5% 1/10W		
1450		B	RESISTOR		R1105	1-216-864-11	SHORT CHIP 0		
1451		B	RESISTOR		R1106	1-216-864-11	SHORT CHIP 0		
1452		B	RESISTOR		R1107	1-216-818-11	METAL CHIP 560 5% 1/10W		
1453		B	RESISTOR		R1144	1-218-973-11	RES-CHIP 47K 5% 1/16W		
1454		B	RESISTOR		R1145	1-218-973-11	RES-CHIP 47K 5% 1/16W		
1455		B	RESISTOR		R1146	1-218-973-11	RES-CHIP 47K 5% 1/16W		
1456		B	RESISTOR		R1147	1-218-961-11	RES-CHIP 4.7K 5% 1/16W		
1457		B	RESISTOR		R1148	1-218-961-11	RES-CHIP 4.7K 5% 1/16W		
1458		B	RESISTOR		R1157	1-218-959-11	RES-CHIP 3.3K 5% 1/16W		
1459		B	RESISTOR		R1158	1-218-945-11	RES-CHIP 220 5% 1/16W		
1460		B	RESISTOR		R1163	1-216-821-11	METAL CHIP 1K 5% 1/10W		
1461		B	RESISTOR		R1164	1-216-841-11	METAL CHIP 47K 5% 1/10W		
1462		B	RESISTOR		R1165	1-216-841-11	METAL CHIP 47K 5% 1/10W		
1463		B	RESISTOR		R1166	1-216-829-11	METAL CHIP 4.7K 5% 1/10W		
1464		B	RESISTOR		R1167	1-216-829-11	METAL CHIP 4.7K 5% 1/10W		
1465		B	RESISTOR		R1168	1-216-833-11	METAL CHIP 10K 5% 1/10W		
1466		B	RESISTOR		R1169	1-216-833-11	METAL CHIP 10K 5% 1/10W		
1467		B	RESISTOR		R1170	1-216-809-11	METAL CHIP 100 5% 1/10W		
1468		B	RESISTOR		R1171	1-216-809-11	METAL CHIP 100 5% 1/10W		
1469		B	RESISTOR		R1172	1-216-849-11	METAL CHIP 220K 5% 1/10W		
1470		B	RESISTOR		R1173	1-218-941-81	RES-CHIP 100 5% 1/16W		
1471		B	RESISTOR		R1175	1-216-864-11	SHORT CHIP 0		
1472		B	RESISTOR		R1177	1-216-864-11	SHORT CHIP 0		
1473		B	RESISTOR		R1202	1-218-724-11	METAL CHIP 22K 0.5% 1/10W		
1474		B	RESISTOR		R1203	1-218-724-11	METAL CHIP 22K 0.5% 1/10W		
1475		B	RESISTOR		R1204	1-218-865-11	METAL CHIP 5.6K 0.5% 1/10W		
1476		B	RESISTOR		R3001	1-216-809-11	METAL CHIP 100 5% 1/10W		
1477		B	RESISTOR		R3002	1-216-809-11	METAL CHIP 100 5% 1/10W		
1478		B	RESISTOR		R3003	1-216-809-11	METAL CHIP 100 5% 1/10W		
1479		B	RESISTOR		R3007	1-216-864-11	SHORT CHIP 0		
1480		B	RESISTOR		R3008	1-216-864-11	SHORT CHIP 0		

No.	#	Board	Type	⚠/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
1481		B	RESISTOR		R3009	1-216-864-11	SHORT CHIP 0		
1482		B	RESISTOR		R3010	1-216-864-11	SHORT CHIP 0		
1483		B	RESISTOR		R3011	1-216-864-11	SHORT CHIP 0		
1484		B	RESISTOR		R3012	1-216-864-11	SHORT CHIP 0		
1485		B	RESISTOR		R3026	1-218-952-11	RES-CHIP 820 5% 1/16W		
1486		B	RESISTOR		R3027	1-218-952-11	RES-CHIP 820 5% 1/16W		
1487		B	RESISTOR		R3028	1-218-952-11	RES-CHIP 820 5% 1/16W		
1488		B	RESISTOR		R3053	1-218-675-11	METAL CHIP 200 0.5% 1/10W		
1489		B	RESISTOR		R3054	1-218-679-11	METAL CHIP 300 0.5% 1/10W		
1490		B	RESISTOR		R3055	1-218-679-11	METAL CHIP 300 0.5% 1/10W		
1491		B	RESISTOR		R3059	1-218-675-11	METAL CHIP 200 0.5% 1/10W		
1492		B	RESISTOR		R3060	1-218-679-11	METAL CHIP 300 0.5% 1/10W		
1493		B	RESISTOR		R3061	1-218-679-11	METAL CHIP 300 0.5% 1/10W		
1494		B	RESISTOR		R3062	1-216-809-11	METAL CHIP 100 5% 1/10W		
1495		B	RESISTOR		R3063	1-216-809-11	METAL CHIP 100 5% 1/10W		
1496		B	RESISTOR		R3064	1-216-809-11	METAL CHIP 100 5% 1/10W		
1497		B	RESISTOR		R3066	1-216-823-11	METAL CHIP 1.5K 5% 1/10W		
1498		B	RESISTOR		R3067	1-216-823-11	METAL CHIP 1.5K 5% 1/10W		
1499		B	RESISTOR		R3068	1-216-823-11	METAL CHIP 1.5K 5% 1/10W		
1500		B	RESISTOR		R3070	1-216-864-11	SHORT CHIP 0		
1501		B	RESISTOR		R3074	1-216-864-11	SHORT CHIP 0		
1502		B	RESISTOR		R3075	1-216-864-11	SHORT CHIP 0		
1503		B	RESISTOR		R3083	1-216-864-11	SHORT CHIP 0		
1504		B	RESISTOR		R3084	1-218-684-11	METAL CHIP 470 0.5% 1/10W		
1505		B	RESISTOR		R3085	1-218-684-11	METAL CHIP 470 0.5% 1/10W		
1506		B	RESISTOR		R3086	1-218-684-11	METAL CHIP 470 0.5% 1/10W		
1507		B	RESISTOR		R3088	1-216-864-11	SHORT CHIP 0		
1508		B	RESISTOR		R3090	1-218-684-11	METAL CHIP 470 0.5% 1/10W		
1509		B	RESISTOR		R3091	1-218-712-11	METAL CHIP 6.8K 0.5% 1/10W		
1510		B	RESISTOR		R3092	1-218-957-11	RES-CHIP 2.2K 5% 1/16W		
1511		B	RESISTOR		R3093	1-218-684-11	METAL CHIP 470 0.5% 1/10W		
1512		B	RESISTOR		R3094	1-218-708-11	METAL CHIP 4.7K 0.5% 1/10W		
1513		B	RESISTOR		R3096	1-218-684-11	METAL CHIP 470 0.5% 1/10W		
1514		B	RESISTOR		R3098	1-218-708-11	METAL CHIP 4.7K 0.5% 1/10W		
1515		B	RESISTOR		R3099	1-218-652-11	METAL CHIP 22 0.5% 1/10W		
1516		B	RESISTOR		R3100	1-218-708-11	METAL CHIP 4.7K 0.5% 1/10W		
1517		B	RESISTOR		R3101	1-216-847-11	METAL CHIP 150K 5% 1/10W		
1518		B	RESISTOR		R3104	1-218-668-11	METAL CHIP 100 0.5% 1/10W		
1519		B	RESISTOR		R3106	1-218-688-11	METAL CHIP 680 0.5% 1/10W		
1520		B	RESISTOR		R3107	1-218-668-11	METAL CHIP 100 0.5% 1/10W		
1521		B	RESISTOR		R3109	1-218-965-11	RES-CHIP 10K 5% 1/16W		
1522		B	RESISTOR		R3111	1-216-864-11	SHORT CHIP 0		
1523		B	RESISTOR		R3112	1-218-688-11	METAL CHIP 680 0.5% 1/10W		
1524		B	RESISTOR		R3113	1-216-801-11	METAL CHIP 22 5% 1/10W		
1525		B	RESISTOR		R3115	1-216-801-11	METAL CHIP 22 5% 1/10W		
1526		B	RESISTOR		R3116	1-216-801-11	METAL CHIP 22 5% 1/10W		
1527		B	RESISTOR		R3120	1-218-965-11	RES-CHIP 10K 5% 1/16W		
1528		B	RESISTOR		R3121	1-218-965-11	RES-CHIP 10K 5% 1/16W		
1529		B	RESISTOR		R3122	1-218-692-11	METAL CHIP 1K 0.5% 1/10W		
1530		B	RESISTOR		R3123	1-218-692-11	METAL CHIP 1K 0.5% 1/10W		
1531		B	RESISTOR		R3124	1-218-693-11	METAL CHIP 1.1K 0.5% 1/10W		
1532		B	RESISTOR		R3125	1-218-692-11	METAL CHIP 1K 0.5% 1/10W		
1533		B	RESISTOR		R3126	1-216-864-11	SHORT CHIP 0		
1534		B	RESISTOR		R3127	1-218-708-11	METAL CHIP 4.7K 0.5% 1/10W		
1535		B	RESISTOR		R3128	1-218-696-11	METAL CHIP 1.5K 0.5% 1/10W		
1536		B	RESISTOR		R3129	1-216-864-11	SHORT CHIP 0		
1537		B	RESISTOR		R3131	1-218-720-11	METAL CHIP 15K 0.5% 1/10W		
1538		B	RESISTOR		R3136	1-218-965-11	RES-CHIP 10K 5% 1/16W		
1539		B	RESISTOR		R3137	1-216-864-11	SHORT CHIP 0		
1540		B	RESISTOR		R3138	1-218-941-81	RES-CHIP 100 5% 1/16W		
1541		B	RESISTOR		R3139	1-218-941-81	RES-CHIP 100 5% 1/16W		
1542		B	RESISTOR		R3141	1-216-864-11	SHORT CHIP 0		
1543		B	RESISTOR		R3142	1-216-864-11	SHORT CHIP 0		
1544		B	RESISTOR		R3143	1-218-990-11	SHORT CHIP 0		
1545		B	RESISTOR		R3145	1-218-990-11	SHORT CHIP 0		
1546		B	RESISTOR		R3146	1-218-933-11	RES-CHIP 22 5% 1/16W		
1547		B	RESISTOR		R3147	1-218-985-11	RES-CHIP 470K 5% 1/16W		
1548		B	RESISTOR		R3150	1-218-990-11	SHORT CHIP 0		
1549		B	RESISTOR		R3151	1-218-937-11	RES-CHIP 47 5% 1/16W		
1550		B	RESISTOR		R3152	1-218-937-11	RES-CHIP 47 5% 1/16W		
1551		B	RESISTOR		R3155	1-218-965-11	RES-CHIP 10K 5% 1/16W		
1552		B	RESISTOR		R3157	1-218-937-11	RES-CHIP 47 5% 1/16W		
1553		B	RESISTOR		R3158	1-218-965-11	RES-CHIP 10K 5% 1/16W		
1554		B	RESISTOR		R3162	1-218-937-11	RES-CHIP 47 5% 1/16W		

No.	#	Board	Type	⚠/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
1555		B	RESISTOR		R3163	1-218-937-11	RES-CHIP 47 5% 1/16W		
1556		B	RESISTOR		R3165	1-218-965-11	RES-CHIP 10K 5% 1/16W		
1557		B	RESISTOR		R3167	1-218-965-11	RES-CHIP 10K 5% 1/16W		
1558		B	RESISTOR		R3168	1-218-990-11	SHORT CHIP 0		
1559		B	RESISTOR		R3169	1-218-990-11	SHORT CHIP 0		
1560		B	RESISTOR		R3170	1-218-990-11	SHORT CHIP 0		
1561		B	RESISTOR		R3301	1-218-937-11	RES-CHIP 47 5% 1/16W		
1562		B	RESISTOR		R3302	1-218-937-11	RES-CHIP 47 5% 1/16W		
1563		B	RESISTOR		R3308	1-218-937-11	RES-CHIP 47 5% 1/16W		
1564		B	RESISTOR		R3309	1-218-945-11	METAL CHIP 220 5% 1/16W		
1565		B	RESISTOR		R3310	1-218-945-11	METAL CHIP 220 5% 1/16W		
1566		B	RESISTOR		R3311	1-208-695-11	METAL CHIP 3.3K 0.5% 1/16W		
1567		B	RESISTOR		R3312	1-218-945-11	METAL CHIP 220 5% 1/16W		
1568		B	RESISTOR		R3313	1-218-990-11	SHORT CHIP 0		
1569		B	RESISTOR		R3316	1-218-990-11	SHORT CHIP 0		
1570		B	RESISTOR		R3317	1-218-990-11	SHORT CHIP 0		
1571		B	RESISTOR		R3318	1-220-180-11	METAL CHIP 620 5% 1/16W		
1572		B	RESISTOR		R3319	1-208-873-81	METAL CHIP 270 0.5% 1/16W		
1573		B	RESISTOR		R3324	1-218-990-11	SHORT CHIP 0		
1574		B	RESISTOR		R3325	1-218-941-81	RES-CHIP 100 5% 1/16W		
1575		B	RESISTOR		R3326	1-218-941-81	RES-CHIP 100 5% 1/16W		
1576		B	RESISTOR		R3344	1-218-933-11	RES-CHIP 22 5% 1/16W		
1577		B	RESISTOR		R3345	1-218-933-11	RES-CHIP 22 5% 1/16W		
1578		B	RESISTOR		R3352	1-218-990-11	SHORT CHIP 0		
1579		B	RESISTOR		R3353	1-218-990-11	SHORT CHIP 0		
1580		B	RESISTOR		R3363	1-218-941-81	RES-CHIP 100 5% 1/16W		
1581		B	RESISTOR		R3370	1-218-933-11	RES-CHIP 22 5% 1/16W		
1582		B	RESISTOR		R3371	1-218-985-11	RES-CHIP 470K 5% 1/16W		
1583		B	RESISTOR		R3372	1-218-969-11	RES-CHIP 22K 5% 1/16W		
1584		B	RESISTOR		R3373	1-218-933-11	RES-CHIP 22 5% 1/16W		
1585		B	RESISTOR		R3374	1-218-945-11	RES-CHIP 220 5% 1/16W		
1586		B	RESISTOR		R3375	1-218-953-11	RES-CHIP 1K 5% 1/16W		
1587		B	RESISTOR		R3376	1-218-947-11	RES-CHIP 330 5% 1/16W		
1588		B	RESISTOR		R3377	1-218-945-11	RES-CHIP 220 5% 1/16W		
1589		B	RESISTOR		R3378	1-218-959-11	RES-CHIP 3.3K 5% 1/16W		
1590		B	RESISTOR		R3379	1-208-696-11	METAL CHIP 3.6K 0.5% 1/16W		
1591		B	RESISTOR		R3380	1-218-990-11	SHORT CHIP 0		
1592		B	RESISTOR		R3381	1-218-985-11	RES-CHIP 470K 5% 1/16W		
1593		B	RESISTOR		R3382	1-218-965-11	RES-CHIP 10K 5% 1/16W		
1594		B	RESISTOR		R3383	1-218-990-11	SHORT CHIP 0		
1595		B	RESISTOR		R3600	1-218-941-81	RES-CHIP 100 5% 1/16W		
1596		B	RESISTOR		R3601	1-218-941-81	RES-CHIP 100 5% 1/16W		
1597		B	RESISTOR		R3602	1-218-941-81	RES-CHIP 100 5% 1/16W		
1598		B	RESISTOR		R3603	1-218-965-11	RES-CHIP 10K 5% 1/16W		
1599		B	RESISTOR		R3604	1-218-990-11	SHORT CHIP 0		
1600		B	RESISTOR		R3605	1-218-937-11	RES-CHIP 47 5% 1/16W		
1601		B	RESISTOR		R3606	1-218-937-11	RES-CHIP 47 5% 1/16W		
1602		B	RESISTOR		R3607	1-218-937-11	RES-CHIP 47 5% 1/16W		
1603		B	RESISTOR		R3608	1-218-965-11	RES-CHIP 10K 5% 1/16W		
1604		B	RESISTOR		R3609	1-208-683-11	METAL CHIP 1K 0.5% 1/16W		
1605		B	RESISTOR		R3610	1-208-697-11	METAL CHIP 3.9K 0.5% 1/16W		
1606		B	RESISTOR		R3611	1-218-959-11	RES-CHIP 3.3K 5% 1/16W		
1607		B	RESISTOR		R3612	1-218-989-11	RES-CHIP 1M 5% 1/16W		
1608		B	RESISTOR		R3613	1-218-957-11	RES-CHIP 2.2K 5% 1/16W		
1609		B	RESISTOR		R3614	1-218-965-11	RES-CHIP 10K 5% 1/16W		
1610		B	RESISTOR		R3615	1-218-956-11	RES-CHIP 1.8K 5% 1/16W		
1611		B	RESISTOR		R3616	1-218-971-11	RES-CHIP 33K 5% 1/16W		
1612		B	RESISTOR		R5002	1-216-859-11	METAL CHIP 1.5M 5% 1/10W		
1613		B	RESISTOR		R5003	1-216-864-11	SHORT CHIP 0		
1614		B	RESISTOR		R5004	1-218-990-11	SHORT CHIP 0		
1615		B	RESISTOR		R5005	1-216-864-11	SHORT CHIP 0		
1616		B	RESISTOR		R5006	1-216-864-11	SHORT CHIP 0		
1617		B	RESISTOR		R5007	1-216-864-11	SHORT CHIP 0		
1618		B	RESISTOR		R5008	1-216-802-11	METAL CHIP 27 5% 1/10W		
1619		B	RESISTOR		R5009	1-216-801-11	METAL CHIP 22 5% 1/10W		
1620		B	RESISTOR		R5011	1-216-864-11	SHORT CHIP 0		
1621		B	RESISTOR		R5012	1-216-864-11	SHORT CHIP 0		
1622		B	RESISTOR		R5013	1-218-959-11	RES-CHIP 3.3K 5% 1/16W		
1623		B	RESISTOR		R5016	1-218-959-11	RES-CHIP 3.3K 5% 1/16W		
1624		B	RESISTOR		R5017	1-216-864-11	SHORT CHIP 0		
1625		B	RESISTOR		R5019	1-216-805-11	METAL CHIP 47 5% 1/10W		
1626		B	RESISTOR		R5020	1-216-805-11	METAL CHIP 47 5% 1/10W		
1627		B	RESISTOR		R5022	1-216-827-11	METAL CHIP 3.3K 5% 1/10W		
1628		B	RESISTOR		R5027	1-216-864-11	SHORT CHIP 0		

No.	#	Board	Type	⚠/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
1629		B	RESISTOR		R5028	1-216-864-11	SHORT CHIP 0		
1630		B	RESISTOR		R5029	1-216-864-11	SHORT CHIP 0		
1631		B	RESISTOR		R5030	1-216-864-11	SHORT CHIP 0		
1632		B	RESISTOR		R5031	1-216-864-11	SHORT CHIP 0		
1633		B	RESISTOR		R5032	1-216-864-11	SHORT CHIP 0		
1634		B	RESISTOR		R5033	1-218-990-11	SHORT CHIP 0		
1635		B	RESISTOR		R5034	1-216-864-11	SHORT CHIP 0		
1636		B	RESISTOR		R5035	1-218-990-11	SHORT CHIP 0		
1637		B	RESISTOR		R5036	1-218-990-11	SHORT CHIP 0		
1638		B	RESISTOR		R5037	1-218-990-11	SHORT CHIP 0		
1639		B	RESISTOR		R5038	1-218-990-11	SHORT CHIP 0		
1640		B	RESISTOR		R5042	1-218-990-11	SHORT CHIP 0		
1641		B	RESISTOR		R5043	1-218-941-81	RES-CHIP 100 5% 1/16W		
1642		B	RESISTOR		R5044	1-218-941-81	RES-CHIP 100 5% 1/16W		
1643		B	RESISTOR		R5045	1-218-941-81	RES-CHIP 100 5% 1/16W		
1644		B	RESISTOR		R5047	1-216-827-11	METAL CHIP 3.3K 5% 1/10W		
1645		B	RESISTOR		R5049	1-216-801-11	METAL CHIP 22 5% 1/10W		
1646		B	RESISTOR		R5050	1-216-829-11	METAL CHIP 4.7K 5% 1/10W		
1647		B	RESISTOR		R5052	1-216-829-11	METAL CHIP 4.7K 5% 1/10W		
1648		B	RESISTOR		R5053	1-216-809-11	METAL CHIP 100 5% 1/10W		
1649		B	RESISTOR		R5054	1-216-827-11	METAL CHIP 3.3K 5% 1/10W		
1650		B	RESISTOR		R5056	1-216-864-11	SHORT CHIP 0		
1651		B	RESISTOR		R5059	1-216-864-11	SHORT CHIP 0		
1652		B	RESISTOR		R5060	1-216-864-11	SHORT CHIP 0		
1653		B	RESISTOR		R5063	1-216-864-11	SHORT CHIP 0		
1654		B	RESISTOR		R5064	1-218-990-11	SHORT CHIP 0		
1655		B	RESISTOR		R5065	1-218-990-11	SHORT CHIP 0		
1656		B	RESISTOR		R5066	1-218-990-11	SHORT CHIP 0		
1657		B	RESISTOR		R5067	1-218-990-11	SHORT CHIP 0		
1658		B	RESISTOR		R5068	1-216-801-11	METAL CHIP 22 5% 1/10W		
1659		B	RESISTOR		R5069	1-216-864-11	SHORT CHIP 0		
1660		B	RESISTOR		R5070	1-218-990-11	SHORT CHIP 0		
1661		B	RESISTOR		R5071	1-216-813-11	METAL CHIP 220 5% 1/10W		
1662		B	RESISTOR		R5072	1-216-827-11	METAL CHIP 3.3K 5% 1/10W		
1663		B	RESISTOR		R5073	1-216-827-11	METAL CHIP 3.3K 5% 1/10W		
1664		B	RESISTOR		R5074	1-216-803-11	METAL CHIP 33 5% 1/10W		
1665		B	RESISTOR		R5075	1-216-864-11	SHORT CHIP 0		
1666		B	RESISTOR		R5078	1-216-839-11	METAL CHIP 33K 5% 1/10W		
1667		B	RESISTOR		R5079	1-216-833-11	METAL CHIP 10K 5% 1/10W		
1668		B	RESISTOR		R5081	1-216-809-11	METAL CHIP 100 5% 1/10W		
1669		B	RESISTOR		R5085	1-216-864-11	SHORT CHIP 0		
1670		B	RESISTOR		R5089	1-216-864-11	SHORT CHIP 0		
1671		B	RESISTOR		R5090	1-216-839-11	METAL CHIP 33K 5% 1/10W		
1672		B	RESISTOR		R5093	1-216-864-11	SHORT CHIP 0		
1673		B	RESISTOR		R5096	1-216-864-11	SHORT CHIP 0		
1674		B	RESISTOR		R5097	1-216-864-11	SHORT CHIP 0		
1675		B	RESISTOR		R5098	1-218-961-11	RES-CHIP 4.7K 5% 1/16W		
1676		B	RESISTOR		R5099	1-216-864-11	SHORT CHIP 0		
1677		B	RESISTOR		R5101	1-218-959-11	RES-CHIP 3.3K 5% 1/16W		
1678		B	RESISTOR		R5102	1-218-864-11	METAL CHIP 5.1K 0.5% 1/10W		
1679		B	RESISTOR		R5103	1-208-683-11	METAL CHIP 1K 0.5% 1/16W		
1680		B	RESISTOR		R5104	1-208-898-81	METAL CHIP 3K 0.5% 1/16W		
1681		B	RESISTOR		R5105	1-208-683-11	METAL CHIP 1K 0.5% 1/16W		
1682		B	RESISTOR		R5106	1-216-801-11	METAL CHIP 22 5% 1/10W		
1683		B	RESISTOR		R5107	1-216-864-11	SHORT CHIP 0		
1684		B	RESISTOR		R5108	1-216-805-11	METAL CHIP 47 5% 1/10W		
1685		B	RESISTOR		R5109	1-216-805-11	METAL CHIP 47 5% 1/10W		
1686		B	RESISTOR		R5110	1-216-805-11	METAL CHIP 47 5% 1/10W		
1687		B	RESISTOR		R5111	1-216-805-11	METAL CHIP 47 5% 1/10W		
1688		B	RESISTOR		R5112	1-216-864-11	SHORT CHIP 0		
1689		B	RESISTOR		R5113	1-216-864-11	SHORT CHIP 0		
1690		B	RESISTOR		R5114	1-218-941-81	RES-CHIP 100 5% 1/16W		
1691		B	RESISTOR		R5115	1-218-941-81	RES-CHIP 100 5% 1/16W		
1692		B	RESISTOR		R5116	1-218-941-81	RES-CHIP 100 5% 1/16W		
1693		B	RESISTOR		R5117	1-218-941-81	RES-CHIP 100 5% 1/16W		
1694		B	RESISTOR		R5118	1-218-941-81	RES-CHIP 100 5% 1/16W		
1695		B	RESISTOR		R5127	1-216-821-11	METAL CHIP 1K 5% 1/10W		
1696		B	RESISTOR		R5128	1-216-821-11	METAL CHIP 1K 5% 1/10W		
1697		B	RESISTOR		R5129	1-216-805-11	METAL CHIP 47 5% 1/10W		
1698		B	RESISTOR		R5801	1-218-961-11	RES-CHIP 4.7K 5% 1/16W		
1699		B	RESISTOR		R5803	1-218-961-11	RES-CHIP 4.7K 5% 1/16W		
1700		B	RESISTOR		R5805	1-216-864-11	SHORT CHIP 0		
1701		B	RESISTOR		R5806	1-216-864-11	SHORT CHIP 0		
1702		B	RESISTOR		R5808	1-218-941-81	RES-CHIP 100 5% 1/16W		

No.	#	Board	Type	⚠/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
1703		B	RESISTOR		R5809	1-218-965-11	RES-CHIP 10K 5% 1/16W		
1704		B	RESISTOR		R5810	1-216-864-11	SHORT CHIP 0		
1705		B	RESISTOR		R5811	1-218-965-11	RES-CHIP 10K 5% 1/16W		
1706		B	RESISTOR		R5812	1-216-864-11	SHORT CHIP 0		
1707		B	RESISTOR		R5813	1-218-965-11	RES-CHIP 10K 5% 1/16W		
1708		B	RESISTOR		R5814	1-216-864-11	SHORT CHIP 0		
1709		B	RESISTOR		R5815	1-216-864-11	SHORT CHIP 0		
1710		B	RESISTOR		R5817	1-216-833-11	METAL CHIP 10K 5% 1/10W		
1711		B	RESISTOR		R5818	1-216-864-11	SHORT CHIP 0		
1712		B	RESISTOR		R5819	1-218-937-11	RES-CHIP 47 5% 1/16W		
1713		B	RESISTOR		R5820	1-216-864-11	SHORT CHIP 0		
1714		B	RESISTOR		R5823	1-216-833-11	METAL CHIP 10K 5% 1/10W		
1715		B	RESISTOR		R5824	1-216-833-11	METAL CHIP 10K 5% 1/10W		
1716		B	RESISTOR		R5836	1-218-990-11	SHORT CHIP 0		
1717		B	RESISTOR		R5838	1-216-864-11	SHORT CHIP 0		
1718		B	RESISTOR		R5849	1-216-812-11	METAL CHIP 180 5% 1/10W		
1719		B	NETWORK		RB1001	1-234-372-21	RES, NETWORK 100X4 (1005)		
1720		B	NETWORK		RB1002	1-234-378-21	RES, NETWORK 10KX4 (1005)		
1721		B	NETWORK		RB1005	1-234-372-21	RES, NETWORK 100X4 (1005)		
1722		B	NETWORK		RB1006	1-234-372-21	RES, NETWORK 100X4 (1005)		
1723		B	NETWORK		RB1009	1-234-380-21	RES, NETWORK 47KX4 (1005)		
1724		B	NETWORK		RB1011	1-234-372-21	RES, NETWORK 100X4 (1005)		
1725		B	NETWORK		RB1012	1-234-372-21	RES, NETWORK 100X4 (1005)		
1726		B	NETWORK		RB1013	1-234-372-21	RES, NETWORK 100X4 (1005)		
1727		B	NETWORK		RB1014	1-234-372-21	RES, NETWORK 100X4 (1005)		
1728		B	NETWORK		RB1015	1-234-372-21	RES, NETWORK 100X4 (1005)		
1729		B	NETWORK		RB1016	1-234-372-21	RES, NETWORK 100X4 (1005)		
1730		B	NETWORK		RB1017	1-234-372-21	RES, NETWORK 100X4 (1005)		
1731		B	NETWORK		RB1019	1-234-372-21	RES, NETWORK 100X4 (1005)		
1732		B	NETWORK		RB1021	1-234-372-21	RES, NETWORK 100X4 (1005)		
1733		B	NETWORK		RB1023	1-234-372-21	RES, NETWORK 100X4 (1005)		
1734		B	NETWORK		RB1024	1-239-674-81	RESISTOR, NETWORK 100		
1735		B	NETWORK		RB1025	1-234-372-21	RES, NETWORK 100X4 (1005)		
1736		B	NETWORK		RB1026	1-234-372-21	RES, NETWORK 100X4 (1005)		
1737		B	NETWORK		RB1027	1-234-372-21	RES, NETWORK 100X4 (1005)		
1738		B	NETWORK		RB1028	1-239-674-81	RESISTOR, NETWORK 100		
1739		B	NETWORK		RB1029	1-239-674-81	RESISTOR, NETWORK 100		
1740		B	NETWORK		RB1030	1-234-372-21	RES, NETWORK 100X4 (1005)		
1741		B	NETWORK		RB1031	1-234-372-21	RES, NETWORK 100X4 (1005)		
1742		B	NETWORK		RB1032	1-234-372-21	RES, NETWORK 100X4 (1005)		
1743		B	NETWORK		RB1033	1-234-372-21	RES, NETWORK 100X4 (1005)		
1744		B	NETWORK		RB3001	1-234-378-21	RES, NETWORK 10KX4 (1005)		
1745		B	NETWORK		RB3002	1-234-378-21	RES, NETWORK 10KX4 (1005)		
1746		B	NETWORK		RB3003	1-234-378-21	RES, NETWORK 10KX4 (1005)		
1747		B	NETWORK		RB3004	1-234-378-21	RES, NETWORK 10KX4 (1005)		
1748		B	NETWORK		RB3005	1-234-378-21	RES, NETWORK 10KX4 (1005)		
1749		B	NETWORK		RB3006	1-234-372-21	RES, NETWORK 100X4 (1005)		
1750		B	NETWORK		RB3007	1-234-372-21	RES, NETWORK 100X4 (1005)		
1751		B	NETWORK		RB3008	1-234-372-21	RES, NETWORK 100X4 (1005)		
1752		B	NETWORK		RB3009	1-234-372-21	RES, NETWORK 100X4 (1005)		
1753		B	NETWORK		RB3010	1-234-378-21	RES, NETWORK 10KX4 (1005)		
1754		B	NETWORK		RB3011	1-234-372-21	RES, NETWORK 100X4 (1005)		
1755		B	NETWORK		RB3012	1-234-372-21	RES, NETWORK 100X4 (1005)		
1756		B	NETWORK		RB3013	1-234-378-21	RES, NETWORK 10KX4 (1005)		
1757		B	NETWORK		RB3014	1-234-372-21	RES, NETWORK 100X4 (1005)		
1758		B	NETWORK		RB3015	1-234-372-21	RES, NETWORK 100X4 (1005)		
1759		B	NETWORK		RB3016	1-234-378-21	RES, NETWORK 10KX4 (1005)		
1760		B	NETWORK		RB3017	1-234-378-21	RES, NETWORK 10KX4 (1005)		
1761		B	NETWORK		RB3018	1-234-378-21	RES, NETWORK 10KX4 (1005)		
1762		B	NETWORK		RB3019	1-234-372-21	RES, NETWORK 100X4 (1005)		
1763		B	NETWORK		RB3020	1-234-372-21	RES, NETWORK 100X4 (1005)		
1764		B	NETWORK		RB3021	1-234-372-21	RES, NETWORK 100X4 (1005)		
1765		B	NETWORK		RB3022	1-234-372-21	RES, NETWORK 100X4 (1005)		
1766		B	NETWORK		RB3027	1-234-372-21	RES, NETWORK 100X4 (1005)		
1767		B	NETWORK		RB3301	1-234-371-21	RES, NETWORK 47X4 (1005)		
1768		B	NETWORK		RB3302	1-234-372-21	RES, NETWORK 100X4 (1005)		
1769		B	NETWORK		RB3303	1-234-372-21	RES, NETWORK 100X4 (1005)		
1770		B	NETWORK		RB3304	1-234-372-21	RES, NETWORK 100X4 (1005)		
1771		B	NETWORK		RB3305	1-234-372-21	RES, NETWORK 100X4 (1005)		
1772		B	NETWORK		RB3306	1-234-371-21	RES, NETWORK 47X4 (1005)		
1773		B	NETWORK		RB3307	1-234-371-21	RES, NETWORK 47X4 (1005)		
1774		B	NETWORK		RB3308	1-234-371-21	RES, NETWORK 47X4 (1005)		
1775		B	NETWORK		RB3309	1-234-372-21	RES, NETWORK 100X4 (1005)		
1776		B	NETWORK		RB3310	1-234-372-21	RES, NETWORK 100X4 (1005)		

No.	#	Board	Type	⚠/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
1777		B	NETWORK		RB3311	1-234-372-21	RES, NETWORK 100X4 (1005)		
1778		B	NETWORK		RB3312	1-234-372-21	RES, NETWORK 100X4 (1005)		
1779		B	NETWORK		RB3313	1-234-372-21	RES, NETWORK 100X4 (1005)		
1780		B	NETWORK		RB3314	1-234-372-21	RES, NETWORK 100X4 (1005)		
1781		B	NETWORK		RB3600	1-234-371-21	RES, NETWORK 47X4 (1005)		
1782		B	NETWORK		RB5001	1-234-371-21	RES, NETWORK 47X4 (1005)		
1783		B	NETWORK		RB5002	1-234-371-21	RES, NETWORK 47X4 (1005)		
1784		B	NETWORK		RB5003	1-234-371-21	RES, NETWORK 47X4 (1005)		
1785		B	NETWORK		RB5004	1-234-371-21	RES, NETWORK 47X4 (1005)		
1786		B	NETWORK		RB5005	1-234-371-21	RES, NETWORK 47X4 (1005)		
1787		B	NETWORK		RB5006	1-234-371-21	RES, NETWORK 47X4 (1005)		
1788		B	NETWORK		RB5013	1-234-371-21	RES, NETWORK 47X4 (1005)		
1789		B	NETWORK		RB5014	1-234-371-21	RES, NETWORK 47X4 (1005)		
1790		B	NETWORK		RB5015	1-234-371-21	RES, NETWORK 47X4 (1005)		
1791		B	NETWORK		RB5016	1-234-371-21	RES, NETWORK 47X4 (1005)		
1792		B	NETWORK		RB5017	1-234-371-21	RES, NETWORK 47X4 (1005)		
1793		B	NETWORK		RB5018	1-234-371-21	RES, NETWORK 47X4 (1005)		
1794		B	NETWORK		RB5019	1-234-400-21	CONDUCTOR, NETWORK (2010)		
1795		B	NETWORK		RB5020	1-234-400-21	CONDUCTOR, NETWORK (2010)		
1796		B	NETWORK		RB5021	1-234-400-21	CONDUCTOR, NETWORK (2010)		
1797		B	NETWORK		RB5022	1-234-400-21	CONDUCTOR, NETWORK (2010)		
1798		B	NETWORK		RB5023	1-234-371-21	RES, NETWORK 47X4 (1005)		
1799		B	NETWORK		RB5024	1-234-371-21	RES, NETWORK 47X4 (1005)		
1800		B	NETWORK		RB5025	1-234-371-21	RES, NETWORK 47X4 (1005)		
1801		B	NETWORK		RB5026	1-234-371-21	RES, NETWORK 47X4 (1005)		
1802		B	NETWORK		RB5027	1-239-674-81	RESISTOR, NETWORK 100		
1803		B	NETWORK		RB5028	1-234-370-21	RES, NETWORK 22X4 (1005)		
1804		B	NETWORK		RB5029	1-234-370-21	RES, NETWORK 22X4 (1005)		
1805		B	NETWORK		RB5030	1-234-370-21	RES, NETWORK 22X4 (1005)		
1806		B	NETWORK		RB5031	1-234-370-21	RES, NETWORK 22X4 (1005)		
1807		B	NETWORK		RB5032	1-239-674-81	RESISTOR, NETWORK 100		
1808		B	NETWORK		RB5801	1-234-371-21	RES, NETWORK 47X4 (1005)		
1809		B	NETWORK		RB5802	1-234-371-21	RES, NETWORK 47X4 (1005)		
1810		B	NETWORK		RB5803	1-234-371-21	RES, NETWORK 47X4 (1005)		
1811		B	NETWORK		RB5804	1-234-371-21	RES, NETWORK 47X4 (1005)		
1812		B	NETWORK		RB5805	1-234-371-21	RES, NETWORK 47X4 (1005)		
1813		B	NETWORK		RB5806	1-234-371-21	RES, NETWORK 47X4 (1005)		
1814		B	NETWORK		RB5807	1-234-370-21	RES, NETWORK 22X4 (1005)		
1815		B	NETWORK		RB5820	1-234-372-21	RES, NETWORK 100X4 (1005)		
1816		B	NETWORK		RB5821	1-234-372-21	RES, NETWORK 100X4 (1005)		
1817		B	NETWORK		RB5822	1-234-372-21	RES, NETWORK 100X4 (1005)		
1818		B	NETWORK		RB5823	1-234-372-21	RES, NETWORK 100X4 (1005)		
1819		B	CRYSTAL		X1001	1-813-326-21	VIBRATOR, CRYSTAL		
1820		B	CRYSTAL		X3002	1-795-951-21	QUARTZ CRYSTAL OSCILLATOR(SMD)		
1821		B	CRYSTAL		X3600	1-795-244-11	VIBRATOR, CERAMIC		
1822		B	CRYSTAL		X5001	1-767-655-21	VIBRATOR, CRYSTAL		
1823		B	CRYSTAL		X5801	1-795-416-21	VIBRATOR, CRYSTAL		
1824		B	CRYSTAL		X5802	1-795-850-21	OSCILLATOR, CRYSTAL		
1825		P	CAPACITOR		C5000	1-126-193-11	ELECT CHIP 1UF 20.00% 50V		
1826		P	CAPACITOR		C5001	1-126-193-11	ELECT CHIP 1UF 20.00% 50V		
1827		P	CAPACITOR		C5002	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
1828		P	CAPACITOR		C5003	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
1829		P	CAPACITOR		C5004	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
1830		P	CAPACITOR		C5005	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
1831		P	CAPACITOR		C5006	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
1832		P	CAPACITOR		C5007	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
1833		P	CAPACITOR		C5008	1-162-964-11	CERAMIC CHIP 0.001UF 10.00% 50V		
1834		P	CAPACITOR		C5009	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
1835		P	CAPACITOR		C5010	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
1836		P	CAPACITOR		C5011	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
1837		P	CAPACITOR		C5012	1-162-964-11	CERAMIC CHIP 0.001UF 10.00% 50V		
1838		P	CAPACITOR		C5013	1-162-964-11	CERAMIC CHIP 0.001UF 10.00% 50V		
1839		P	CAPACITOR		C5014	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
1840		P	CAPACITOR		C5015	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
1841		P	CAPACITOR		C5016	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
1842		P	CAPACITOR		C5017	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
1843		P	CAPACITOR		C5018	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
1844		P	CAPACITOR		C5019	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
1845		P	CAPACITOR		C5020	1-165-176-11	CERAMIC CHIP 0.047UF 10.00% 16V		
1846		P	CAPACITOR		C5021	1-127-692-11	CERAMIC CHIP 10UF 10% 16V		
1847		P	CAPACITOR		C5022	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
1848		P	CAPACITOR		C5023	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
1849		P	CAPACITOR		C5024	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
1850		P	CAPACITOR		C5025	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		

No.	#	Board	Type	⚠/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
1851		P	CAPACITOR		C5026	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
1852		P	CAPACITOR		C5027	1-126-396-11	ELECT CHIP 47UF 20.00% 16V		
1853		P	CAPACITOR		C5028	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
1854		P	CAPACITOR		C5100	1-100-588-21	ELECT CHIP 1000UF 20% 6.3V		
1855		P	CAPACITOR		C5102	1-137-897-21	ELECT CHIP 150UF 20% 4V		
1856		P	CAPACITOR		C5103	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
1857		P	CAPACITOR		C5104	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
1858		P	CAPACITOR		C5105	1-100-118-21	ELECT CHIP 82UF 20% 16V		
1859		P	CAPACITOR		C5107	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
1860		P	CAPACITOR		C5108	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
1861		P	CAPACITOR		C5200	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
1862		P	CAPACITOR		C5201	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
1863		P	CAPACITOR		C5202	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
1864		P	CAPACITOR		C5203	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
1865		P	CAPACITOR		C5204	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
1866		P	CAPACITOR		C5205	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
1867		P	CAPACITOR		C5206	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
1868		P	CAPACITOR		C5207	1-162-966-11	CERAMIC CHIP 0.0022UF 10.00% 50V		
1869		P	CAPACITOR		C5208	1-128-993-21	ELECT CHIP 22UF 20% 10V		
1870		P	CAPACITOR		C5209	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
1871		P	CAPACITOR		C5210	1-162-966-11	CERAMIC CHIP 0.0022UF 10.00% 50V		
1872		P	CAPACITOR		C5211	1-164-230-11	CERAMIC CHIP 220PF 5.00% 50V		
1873		P	CAPACITOR		C5212	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
1874		P	CAPACITOR		C5213	1-162-966-11	CERAMIC CHIP 0.0022UF 10.00% 50V		
1875		P	CAPACITOR		C5214	1-162-966-11	CERAMIC CHIP 0.0022UF 10.00% 50V		
1876		P	CAPACITOR		C5215	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
1877		P	CAPACITOR		C5216	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
1878		P	CAPACITOR		C5217	1-162-966-11	CERAMIC CHIP 0.0022UF 10.00% 50V		
1879		P	CAPACITOR		C5218	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
1880		P	CAPACITOR		C5219	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
1881		P	CAPACITOR		C5220	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
1882		P	CAPACITOR		C5221	1-164-230-11	CERAMIC CHIP 220PF 5.00% 50V		
1883		P	CAPACITOR		C5222	1-162-919-11	CERAMIC CHIP 22PF 5.00% 50V		
1884		P	CAPACITOR		C5223	1-162-919-11	CERAMIC CHIP 22PF 5.00% 50V		
1885		P	CAPACITOR		C5224	1-162-919-11	CERAMIC CHIP 22PF 5.00% 50V		
1886		P	CAPACITOR		C5225	1-162-966-11	CERAMIC CHIP 0.0022UF 10.00% 50V		
1887		P	CAPACITOR		C5226	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
1888		P	CAPACITOR		C5227	1-128-993-21	ELECT CHIP 22UF 20% 10V		
1889		P	CAPACITOR		C5228	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
1890		P	CAPACITOR		C5229	1-126-412-11	ELECT CHIP 220UF 20.00% 4V		
1891		P	CAPACITOR		C5230	1-126-412-11	ELECT CHIP 220UF 20.00% 4V		
1892		P	CAPACITOR		C5231	1-126-412-11	ELECT CHIP 220UF 20.00% 4V		
1893		P	CAPACITOR		C5232	1-128-993-21	ELECT CHIP 22UF 20% 10V		
1894		P	CAPACITOR		C5233	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
1895		P	CAPACITOR		C5234	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
1896		P	CAPACITOR		C5300	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
1897		P	CAPACITOR		C5301	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
1898		P	CAPACITOR		C5302	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
1899		P	CAPACITOR		C5303	1-162-916-11	CERAMIC CHIP 12PF 5.00% 50V		
1900		P	CAPACITOR		C5304	1-162-916-11	CERAMIC CHIP 12PF 5.00% 50V		
1901		P	CONNECTOR	*	CN5000	1-818-400-11	HDMI CONNECTOR		
1902		P	CONNECTOR		CN5002	1-794-519-21	PIN, CONNECTOR (PC BOARD) 14P		
1903		P	DIODE		D5001	8-719-977-28	DIODE DTZ10B		
1904		P	DIODE		D5003	8-719-977-28	DIODE DTZ10B		
1905		P	DIODE		D5006	8-719-404-50	DIODE MA111-TX		
1906		P	DIODE		D5007	8-719-404-50	DIODE MA111-TX		
1907		P	DIODE		D5100	6-500-294-01	DIODE PTZ-TE25-3.9B		
1908		P	DIODE		D5101	8-719-210-39	DIODE EC10QS-04		
1909		P	FERRITE BEAD		FB5000	1-414-235-22	FERRITE 0UH		
1910		P	FERRITE BEAD		FB5001	1-414-235-22	FERRITE 0UH		
1911		P	FERRITE BEAD		FB5002	1-414-235-22	FERRITE 0UH		
1912		P	FERRITE BEAD		FB5003	1-414-235-22	FERRITE 0UH		
1913		P	FERRITE BEAD		FB5004	1-414-445-11	FERRITE 0UH		
1914		P	FERRITE BEAD		FB5200	1-414-235-22	FERRITE 0UH		
1915		P	FERRITE BEAD		FB5201	1-414-235-22	FERRITE 0UH		
1916		P	FERRITE BEAD		FB5202	1-414-235-22	FERRITE 0UH		
1917		P	FERRITE BEAD		FB5203	1-414-235-22	FERRITE 0UH		
1918		P	FILTER	*	FL5000	1-813-308-11	INDUCTOR 0UH		
1919		P	FILTER	*	FL5001	1-813-308-11	INDUCTOR 0UH		
1920		P	FILTER	*	FL5002	1-813-308-11	INDUCTOR 0UH		
1921		P	FILTER	*	FL5003	1-813-308-11	INDUCTOR 0UH		
1922		P	FILTER		FL5004	1-234-177-21	FERRITE 0UH		
1923		P	IC		IC5000	6-704-001-01	IC BR24L02F-WE2		
1924		P	IC		IC5001	6-704-499-01	IC SII9993CTG100		

No.	#	Board	Type	⚠/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
1925		P	IC		IC5100	6-704-407-01	IC PQ1CZ41H2ZPH		
1926		P	IC		IC5101	8-759-533-85	IC L88M05T-FA-TL		
1927		P	IC		IC5200	6-704-819-01	IC CS4335-KSZR		
1928		P	IC		IC5201	6-706-257-01	IC FMS6418AM16X		
1929		P	IC		IC5202	8-759-331-71	IC NJM4558E(TE2)		
1930		P	IC		IC5203	6-703-042-01	IC CD4052BNSR		
1931		P	IC		IC5301	6-804-248-01	IC HD64F3694FXV-DA4		
1932		P	JACK		J5000	1-794-623-21	JACK, PIN 2P		
1933		P	COIL		L5001	1-412-026-11	INDUCTOR 1UH		
1934		P	COIL		L5100	1-456-046-21	INDUCTOR 10UH		
1935		P	COIL		L5101	1-400-303-21	INDUCTOR 68UH		
1936		P	IC LINK	⚠	PS5100	1-576-612-21	FUSE 1A 32V		
1937		P	IC LINK	⚠	PS5101	1-576-647-11	FUSE 0.2A 50V		
1938		P	TRANSISTOR		Q5000	8-729-421-22	TRANSISTOR UN2211		
1939		P	TRANSISTOR		Q5001	6-550-014-01	TRANSISTOR SSM6N15FU(TE85R)		
1940		P	TRANSISTOR		Q5002	8-729-421-22	TRANSISTOR UN2211		
1941		P	TRANSISTOR		Q5200	8-729-027-62	TRANSISTOR DTC144WKA-T146		
1942		P	TRANSISTOR		Q5201	8-729-024-88	TRANSISTOR MUN2212T1		
1943		P	TRANSISTOR		Q5202	8-729-024-88	TRANSISTOR MUN2212T1		
1944		P	TRANSISTOR		Q5204	8-729-421-22	TRANSISTOR UN2211		
1945		P	TRANSISTOR		Q5205	8-729-421-22	TRANSISTOR UN2211		
1946		P	TRANSISTOR		Q5300	8-729-027-62	TRANSISTOR DTC144WKA-T146		
1947		P	RESISTOR		R5000	1-218-644-11	METAL CHIP 10 0.5% 1/10W		
1948		P	RESISTOR		R5001	1-216-845-11	METAL CHIP 100K 5% 1/10W		
1949		P	RESISTOR		R5002	1-216-821-11	METAL CHIP 1K 5% 1/10W		
1950		P	RESISTOR		R5003	1-216-845-11	METAL CHIP 100K 5% 1/10W		
1951		P	RESISTOR		R5006	1-216-833-11	METAL CHIP 10K 5% 1/10W		
1952		P	RESISTOR		R5009	1-218-706-11	METAL CHIP 3.9K 0.5% 1/10W		
1953		P	RESISTOR		R5010	1-216-809-11	METAL CHIP 100 5% 1/10W		
1954		P	RESISTOR		R5011	1-216-809-11	METAL CHIP 100 5% 1/10W		
1955		P	RESISTOR		R5012	1-216-809-11	METAL CHIP 100 5% 1/10W		
1956		P	RESISTOR		R5013	1-218-706-11	METAL CHIP 3.9K 0.5% 1/10W		
1957		P	RESISTOR		R5015	1-218-706-11	METAL CHIP 3.9K 0.5% 1/10W		
1958		P	RESISTOR		R5017	1-218-706-11	METAL CHIP 3.9K 0.5% 1/10W		
1959		P	RESISTOR		R5019	1-216-816-11	METAL CHIP 390 5% 1/10W		
1960		P	RESISTOR		R5020	1-216-829-11	METAL CHIP 4.7K 5% 1/10W		
1961		P	RESISTOR		R5021	1-218-854-11	METAL CHIP 2K 0.5% 1/10W		
1962		P	RESISTOR		R5022	1-218-823-11	METAL CHIP 100 0.5% 1/10W		
1963		P	RESISTOR		R5023	1-216-829-11	METAL CHIP 4.7K 5% 1/10W		
1964		P	RESISTOR		R5024	1-218-706-11	METAL CHIP 3.9K 0.5% 1/10W		
1965		P	RESISTOR		R5025	1-216-803-11	METAL CHIP 33 5% 1/10W		
1966		P	RESISTOR		R5026	1-216-803-11	METAL CHIP 33 5% 1/10W		
1967		P	RESISTOR		R5027	1-216-803-11	METAL CHIP 33 5% 1/10W		
1968		P	RESISTOR		R5103	1-218-701-11	METAL CHIP 2.4K 0.5% 1/10W		
1969		P	RESISTOR		R5104	1-218-706-11	METAL CHIP 3.9K 0.5% 1/10W		
1970		P	RESISTOR		R5105	1-216-864-11	SHORT CHIP 0		
1971		P	RESISTOR		R5106	1-216-864-11	SHORT CHIP 0		
1972		P	RESISTOR		R5201	1-216-845-11	METAL CHIP 100K 5% 1/10W		
1973		P	RESISTOR		R5202	1-218-665-11	METAL CHIP 75 0.5% 1/10W		
1974		P	RESISTOR		R5203	1-216-833-11	METAL CHIP 10K 5% 1/10W		
1975		P	RESISTOR		R5204	1-218-665-11	METAL CHIP 75 0.5% 1/10W		
1976		P	RESISTOR		R5205	1-218-665-11	METAL CHIP 75 0.5% 1/10W		
1977		P	RESISTOR		R5206	1-218-665-11	METAL CHIP 75 0.5% 1/10W		
1978		P	RESISTOR		R5207	1-216-845-11	METAL CHIP 100K 5% 1/10W		
1979		P	RESISTOR		R5209	1-218-665-11	METAL CHIP 75 0.5% 1/10W		
1980		P	RESISTOR		R5212	1-218-665-11	METAL CHIP 75 0.5% 1/10W		
1981		P	RESISTOR		R5213	1-216-841-11	METAL CHIP 47K 5% 1/10W		
1982		P	RESISTOR		R5214	1-216-857-11	METAL CHIP 1M 5% 1/10W		
1983		P	RESISTOR		R5215	1-216-821-11	METAL CHIP 1K 5% 1/10W		
1984		P	RESISTOR		R5216	1-216-857-11	METAL CHIP 1M 5% 1/10W		
1985		P	RESISTOR		R5217	1-216-821-11	METAL CHIP 1K 5% 1/10W		
1986		P	RESISTOR		R5218	1-216-857-11	METAL CHIP 1M 5% 1/10W		
1987		P	RESISTOR		R5219	1-216-821-11	METAL CHIP 1K 5% 1/10W		
1988		P	RESISTOR		R5222	1-216-857-11	METAL CHIP 1M 5% 1/10W		
1989		P	RESISTOR		R5223	1-216-857-11	METAL CHIP 1M 5% 1/10W		
1990		P	RESISTOR		R5225	1-216-829-11	METAL CHIP 4.7K 5% 1/10W		
1991		P	RESISTOR		R5227	1-216-857-11	METAL CHIP 1M 5% 1/10W		
1992		P	RESISTOR		R5231	1-218-694-11	METAL CHIP 1.2K 0.5% 1/10W		
1993		P	RESISTOR		R5232	1-216-833-11	METAL CHIP 10K 5% 1/10W		
1994		P	RESISTOR		R5233	1-218-716-11	METAL CHIP 10K 0.5% 1/10W		
1995		P	RESISTOR		R5234	1-216-841-11	METAL CHIP 47K 5% 1/10W		
1996		P	RESISTOR		R5235	1-216-845-11	METAL CHIP 100K 5% 1/10W		
1997		P	RESISTOR		R5236	1-216-821-11	METAL CHIP 1K 5% 1/10W		
1998		P	RESISTOR		R5237	1-218-686-11	METAL CHIP 560 0.5% 1/10W		

No.	#	Board	Type	⚠/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
1999		P	RESISTOR		R5238	1-216-829-11	METAL CHIP 4.7K 5% 1/10W		
2000		P	RESISTOR		R5239	1-218-694-11	METAL CHIP 1.2K 0.5% 1/10W		
2001		P	RESISTOR		R5240	1-218-716-11	METAL CHIP 10K 0.5% 1/10W		
2002		P	RESISTOR		R5241	1-218-665-11	METAL CHIP 75 0.5% 1/10W		
2003		P	RESISTOR		R5242	1-218-665-11	METAL CHIP 75 0.5% 1/10W		
2004		P	RESISTOR		R5243	1-218-665-11	METAL CHIP 75 0.5% 1/10W		
2005		P	RESISTOR		R5244	1-216-845-11	METAL CHIP 100K 5% 1/10W		
2006		P	RESISTOR		R5245	1-218-686-11	METAL CHIP 560 0.5% 1/10W		
2007		P	RESISTOR		R5247	1-216-845-11	METAL CHIP 100K 5% 1/10W		
2008		P	RESISTOR		R5248	1-216-821-11	METAL CHIP 1K 5% 1/10W		
2009		P	RESISTOR		R5249	1-216-845-11	METAL CHIP 100K 5% 1/10W		
2010		P	RESISTOR		R5250	1-216-845-11	METAL CHIP 100K 5% 1/10W		
2011		P	RESISTOR		R5251	1-216-809-11	METAL CHIP 100 5% 1/10W		
2012		P	RESISTOR		R5252	1-216-845-11	METAL CHIP 100K 5% 1/10W		
2013		P	RESISTOR		R5253	1-216-821-11	METAL CHIP 1K 5% 1/10W		
2014		P	RESISTOR		R5254	1-216-817-11	METAL CHIP 470 5% 1/10W		
2015		P	RESISTOR		R5255	1-216-817-11	METAL CHIP 470 5% 1/10W		
2016		P	RESISTOR		R5258	1-216-845-11	METAL CHIP 100K 5% 1/10W		
2017		P	RESISTOR		R5259	1-216-837-11	METAL CHIP 22K 5% 1/10W		
2018		P	RESISTOR		R5260	1-216-837-11	METAL CHIP 22K 5% 1/10W		
2019		P	RESISTOR		R5261	1-216-821-11	METAL CHIP 1K 5% 1/10W		
2020		P	RESISTOR		R5262	1-216-809-11	METAL CHIP 100 5% 1/10W		
2021		P	RESISTOR		R5265	1-216-821-11	METAL CHIP 1K 5% 1/10W		
2022		P	RESISTOR		R5266	1-216-821-11	METAL CHIP 1K 5% 1/10W		
2023		P	RESISTOR		R5302	1-216-833-11	METAL CHIP 10K 5% 1/10W		
2024		P	RESISTOR		R5303	1-216-833-11	METAL CHIP 10K 5% 1/10W		
2025		P	RESISTOR		R5304	1-216-809-11	METAL CHIP 100 5% 1/10W		
2026		P	RESISTOR		R5305	1-216-809-11	METAL CHIP 100 5% 1/10W		
2027		P	RESISTOR		R5306	1-216-809-11	METAL CHIP 100 5% 1/10W		
2028		P	RESISTOR		R5307	1-216-809-11	METAL CHIP 100 5% 1/10W		
2029		P	RESISTOR		R5308	1-216-809-11	METAL CHIP 100 5% 1/10W		
2030		P	RESISTOR		R5309	1-216-833-11	METAL CHIP 10K 5% 1/10W		
2031		P	RESISTOR		R5310	1-216-833-11	METAL CHIP 10K 5% 1/10W		
2032		P	RESISTOR		R5311	1-216-833-11	METAL CHIP 10K 5% 1/10W		
2033		P	RESISTOR		R5312	1-216-833-11	METAL CHIP 10K 5% 1/10W		
2034		P	RESISTOR		R5313	1-216-833-11	METAL CHIP 10K 5% 1/10W		
2035		P	RESISTOR		R5314	1-216-833-11	METAL CHIP 10K 5% 1/10W		
2036		P	RESISTOR		R5315	1-216-809-11	METAL CHIP 100 5% 1/10W		
2037		P	RESISTOR		R5317	1-216-809-11	METAL CHIP 100 5% 1/10W		
2038		P	RESISTOR		R5320	1-216-809-11	METAL CHIP 100 5% 1/10W		
2039		P	RESISTOR		R5321	1-216-809-11	METAL CHIP 100 5% 1/10W		
2040		P	RESISTOR		R5322	1-216-809-11	METAL CHIP 100 5% 1/10W		
2041		P	RESISTOR		R5323	1-216-809-11	METAL CHIP 100 5% 1/10W		
2042		P	RESISTOR		R5325	1-216-809-11	METAL CHIP 100 5% 1/10W		
2043		P	RESISTOR		R5326	1-216-809-11	METAL CHIP 100 5% 1/10W		
2044		P	NETWORK		RB5000	1-233-574-11	RES, CHIP NETWORK 10 (3216)		
2045		P	NETWORK		RB5001	1-233-574-11	RES, CHIP NETWORK 10 (3216)		
2046		P	NETWORK		RB5002	1-234-524-21	RES, CHIP NETWORK 33 (3216)		
2047		P	NETWORK		RB5300	1-236-908-11	RES, CHIP NETWORK 10K		
2048		P	VARISTOR		VD5000	1-805-043-11	ABSORBER, CHIP SURGE		
2049		P	VARISTOR		VD5001	1-805-043-11	ABSORBER, CHIP SURGE		
2050		P	VARISTOR		VD5002	1-805-043-11	ABSORBER, CHIP SURGE		
2051		P	VARISTOR		VD5003	1-805-043-11	ABSORBER, CHIP SURGE		
2052		P	VARISTOR		VD5004	1-805-043-11	ABSORBER, CHIP SURGE		
2053		P	VARISTOR		VD5005	1-805-043-11	ABSORBER, CHIP SURGE		
2054		P	VARISTOR		VD5006	1-805-043-11	ABSORBER, CHIP SURGE		
2055		P	VARISTOR		VD5007	1-805-043-11	ABSORBER, CHIP SURGE		
2056		P	VARISTOR		VD5008	1-805-043-11	ABSORBER, CHIP SURGE		
2057		P	VARISTOR		VD5009	1-805-043-11	ABSORBER, CHIP SURGE		
2058		P	CRYSTAL		X5300	1-767-984-21	VIBRATOR, CRYSTAL		
2059		G1	CAPACITOR		C6002	1-119-895-51	CERAMIC 4700PF 20.00% 250V		
2060		G1	CAPACITOR		C6003	1-161-964-91	CERAMIC 0.0047UF 250V		
2061		G1	CAPACITOR		C6004	1-165-530-11	MYLAR 0.47UF 10 275V		
2062		G1	CAPACITOR		C6005	1-165-529-11	MYLAR 0.22UF 10 275V		
2063		G1	CAPACITOR		C6006	1-119-895-51	CERAMIC 4700PF 20.00% 250V		
2064		G1	CAPACITOR		C6007	1-161-964-91	CERAMIC 0.0047UF 250V		
2065		G1	CAPACITOR		C6008	1-100-877-11	ELECT 270UF 20% 250V		
2066		G1	CAPACITOR		C6009	1-100-877-11	ELECT 270UF 20% 250V		
2067		G1	CAPACITOR		C6010	1-100-877-11	ELECT 270UF 20% 250V		
2068		G1	CAPACITOR		C6011	1-100-877-11	ELECT 270UF 20% 250V		
2069		G1	CAPACITOR		C6012	1-136-201-61	MYLAR 0.22UF 10.00% 400V		
2070		G1	CAPACITOR		C6013	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
2071		G1	CAPACITOR		C6015	1-162-960-11	CERAMIC CHIP 220PF 10.00% 50V		
2072		G1	CAPACITOR		C6016	1-162-964-11	CERAMIC CHIP 0.001UF 10.00% 50V		

No.	#	Board	Type	⚠/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
2073		G1	CAPACITOR		C6017	1-107-905-11	ELECT 4.7UF 20.00% 50V		
2074		G1	CAPACITOR		C6018	1-107-888-11	ELECT 47UF 20.00% 25V		
2075		G1	CAPACITOR		C6019	1-136-479-11	FILM 0.001UF 5.00% 100V		
2076		G1	CAPACITOR		C6020	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
2077		G1	CAPACITOR		C6021	1-107-906-11	ELECT 10UF 20.00% 50V		
2078		G1	CAPACITOR		C6023	1-136-203-11	MYLAR 0.01UF 5.00% 630V		
2079		G1	CAPACITOR		C6025	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
2080		G1	CAPACITOR		C6026	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
2081		G1	CAPACITOR		C6027	1-136-165-00	FILM 0.1UF 5.00% 50V		
2082		G1	CAPACITOR		C6028	1-165-585-21	ELECT CHIP 47UF 20% 25V		
2083		G1	CAPACITOR		C6029	1-126-398-11	ELECT CHIP 4.7UF 20.00% 35V		
2084		G1	CAPACITOR		C6030	1-107-909-11	ELECT 47UF 20.00% 50V		
2085		G1	CAPACITOR		C6031	1-131-872-91	CERAMIC CHIP 1000PF 10% 630V		
2086		G1	CAPACITOR		C6032	1-107-824-11	CERAMIC 220PF 5.00% 1KV		
2087		G1	CAPACITOR		C6033	1-107-824-11	CERAMIC 220PF 5.00% 1KV		
2088		G1	CAPACITOR		C6034	1-135-871-22	FILM 15000PF 3% 800V		
2089		G1	CAPACITOR		C6035	1-135-871-22	FILM 15000PF 3% 800V		
2090		G1	CAPACITOR		C6036	1-128-361-11	ELECT CHIP 470UF 20.00% 10V		
2091		G1	CAPACITOR		C6037	1-126-401-21	ELECT CHIP 1UF 20.00% 50V		
2092		G1	CAPACITOR		C6038	1-162-927-11	CERAMIC CHIP 100PF 5.00% 50V		
2093		G1	CAPACITOR		C6039	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
2094		G1	CAPACITOR		C6040	1-126-392-11	ELECT CHIP 100UF 20.00% 6.3V		
2095		G1	CAPACITOR		C6041	1-100-436-91	CERAMIC CHIP 0.033UF 10% 25V		
2096		G1	CAPACITOR		C6042	1-165-736-31	ELECT 680UF 20% 25V		
2097		G1	CAPACITOR		C6043	1-165-736-31	ELECT 680UF 20% 25V		
2098		G1	CAPACITOR		C6044	1-165-736-31	ELECT 680UF 20% 25V		
2009		G1	CAPACITOR		C6045	1-162-964-11	CERAMIC CHIP 0.001UF 10.00% 50V		
2100		G1	CAPACITOR		C6046	1-165-736-31	ELECT 680UF 20% 25V		
2101		G1	CAPACITOR		C6047	1-128-946-31	ELECT 2200UF 20% 10V		
2102		G1	CAPACITOR		C6048	1-128-405-11	ELECT CHIP 22UF 20% 50V		
2103		G1	CAPACITOR		C6049	1-128-953-31	ELECT 470UF 20% 25V		
2104		G1	CAPACITOR		C6051	1-100-791-21	ELECT CHIP 56UF 20% 25V		
2105		G1	CONNECTOR	*	CN6002	1-691-961-11	PIN, CONNECTOR (PC BOARD) 3P		
2106		G1	CONNECTOR	*	CN6003	1-564-595-11	PLUG, CONNECTOR 14P		
2107		G1	CONNECTOR	*	CN6004	1-564-512-11	PLUG, CONNECTOR 9P		
2108		G1	CONNECTOR	*	CN6006	1-564-507-11	PLUG, CONNECTOR 4P		
2109		G1	DIODE		D6001	8-719-510-53	DIODE D4SB60L		
2110		G1	DIODE		D6002	8-719-083-78	DIODE 10ERA60-TP		
2111		G1	DIODE		D6003	8-719-083-78	DIODE 10ERA60-TP		
2112		G1	DIODE		D6004	8-719-083-83	DIODE UDZS-TE17-15B		
2113		G1	DIODE		D6005	8-719-080-69	DIODE M1FS4-4063		
2114		G1	DIODE		D6006	8-719-081-97	DIODE MMDL914T1		
2115		G1	DIODE		D6007	8-719-948-45	DIODE ERA22-08		
2116		G1	DIODE		D6008	8-719-083-83	DIODE UDZS-TE17-15B		
2117		G1	DIODE		D6009	8-719-083-83	DIODE UDZS-TE17-15B		
2118		G1	DIODE		D6010	8-719-080-75	DIODE M1FL20U-4063		
2119		G1	DIODE		D6011	8-719-080-75	DIODE M1FL20U-4063		
2120		G1	DIODE		D6012	8-719-979-64	DIODE UF4005PKG23		
2121		G1	DIODE		D6013	8-719-083-83	DIODE UDZS-TE17-15B		
2122		G1	DIODE		D6014	8-719-083-83	DIODE UDZS-TE17-15B		
2123		G1	DIODE		D6015	8-719-080-75	DIODE M1FL20U-4063		
2124		G1	DIODE		D6016	8-719-510-12	DIODE D10SC4M		
2125		G1	DIODE		D6017	8-719-054-36	DIODE FCH10A06		
2126		G1	DIODE		D6018	8-719-054-36	DIODE FCH10A06		
2127		G1	DIODE		D6019	8-719-054-36	DIODE FCH10A06		
2128		G1	DIODE		D6020	8-719-054-36	DIODE FCH10A06		
2129		G1	DIODE		D6021	8-719-054-36	DIODE FCH10A06		
2130		G1	DIODE		D6022	8-719-080-75	DIODE M1FL20U-4063		
2131		G1	FUSE	⚠	F6001	1-576-230-12	FUSE 3.15A 250V		
2132		G1	FERRITE BEAD		FB6001	1-410-397-21	FERRITE 1.1UH		
2133		G1	FUSE HOLDER		FH6001	1-533-223-11	FUSE HOLDER 0A 0V		
2134		G1	FUSE HOLDER		FH6002	1-533-223-11	FUSE HOLDER 0A 0V		
2135		G1	IC		IC6001	6-600-102-01	IC STR-A6459		
2136		G1	IC		IC6002	6-705-768-01	IC MCZ3001UB		
2137		G1	IC		IC6003	8-759-540-60	IC TL431BCLPRA		
2138		G1	IC		IC6004	8-759-533-85	IC L88M05T-FA-TL		
2139		G1	IC		IC6005	8-759-540-60	IC TL431BCLPRA		
2140		G1	COIL		L6003	1-456-293-11	COIL, LINE FILTER		
2141		G1	COIL		L6004	1-456-293-11	COIL, LINE FILTER		
2142		G1	COIL		L6005	1-412-537-31	INDUCTOR 100UH		
2143		G1	COIL		L6006	1-469-848-21	INDUCTOR 10UH		
2144		G1	PHOTO COUPLER		PH6001	8-749-016-81	PHOTO COUPLER PC123Y22		
2145		G1	PHOTO COUPLER		PH6002	8-749-016-81	PHOTO COUPLER PC123Y22		
2146		G1	TRANSISTOR		Q6001	8-729-422-33	TRANSISTOR 2SD601A-Q-TX		

No.	#	Board	Type	⚠/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
2147		G1	TRANSISTOR		Q6002	8-729-026-49	TRANSISTOR 2SA1037AK-T146-R		
2148		G1	TRANSISTOR		Q6003	8-729-026-49	TRANSISTOR 2SA1037AK-T146-R		
2149		G1	TRANSISTOR		Q6004	8-729-120-28	TRANSISTOR 2SC1623-L5L6		
2150		G1	TRANSISTOR		Q6005	6-550-526-01	TRANSISTOR 2SK2842-LB180		
2151		G1	TRANSISTOR		Q6006	6-550-526-01	TRANSISTOR 2SK2842-LB180		
2152		G1	TRANSISTOR		Q6007	8-729-422-33	TRANSISTOR 2SD601A-Q-TX		
2153		G1	RESISTOR		R6003	1-219-513-11	METAL 4.7M 5% 1/2W		
2154		G1	RESISTOR		R6008	1-245-562-11	METAL 1 5% 5W		
2155		G1	RESISTOR		R6009	1-245-562-11	METAL 1 5% 5W		
2156		G1	RESISTOR		R6010	1-219-759-11	METAL 1M 5% 1/2W		
2157		G1	RESISTOR		R6011	1-245-562-11	METAL 1 5% 5W		
2158		G1	RESISTOR		R6012	1-245-562-11	METAL 1 5% 5W		
2159		G1	RESISTOR		R6019	1-218-760-11	METAL CHIP 220K 0.5% 1/10W		
2160		G1	RESISTOR		R6020	1-218-760-11	METAL CHIP 220K 0.5% 1/10W		
2161		G1	RESISTOR		R6021	1-218-760-11	METAL CHIP 220K 0.5% 1/10W		
2162		G1	RESISTOR		R6022	1-218-760-11	METAL CHIP 220K 0.5% 1/10W		
2163		G1	RESISTOR		R6023	1-208-823-11	METAL CHIP 51K 0.5% 1/10W		
2164		G1	RESISTOR		R6024	1-208-823-11	METAL CHIP 51K 0.5% 1/10W		
2165		G1	RESISTOR		R6025	1-208-823-11	METAL CHIP 51K 0.5% 1/10W		
2166		G1	RESISTOR		R6026	1-260-300-11	CARBON 4.7 5% 1/2W		
2167		G1	RESISTOR		R6027	1-216-837-11	METAL CHIP 22K 5% 1/10W		
2168		G1	RESISTOR		R6028	1-216-833-11	METAL CHIP 10K 5% 1/10W		
2169		G1	RESISTOR		R6029	1-216-144-11	RES-CHIP 5.6 5% 1/8W		
2170		G1	RESISTOR		R6030	1-216-144-11	RES-CHIP 5.6 5% 1/8W		
2171		G1	RESISTOR		R6031	1-202-933-61	FUSIBLE 0.1 10% 1/2W		
2172		G1	RESISTOR		R6032	1-216-822-11	METAL CHIP 1.2K 5% 1/10W		
2173		G1	RESISTOR		R6033	1-218-877-11	METAL CHIP 18K 0.5% 1/10W		
2174		G1	RESISTOR		R6034	1-218-823-11	METAL CHIP 100 0.5% 1/10W		
2175		G1	RESISTOR		R6035	1-218-875-11	METAL CHIP 15K 0.5% 1/10W		
2176		G1	RESISTOR		R6037	1-208-847-11	METAL CHIP 510K 0.5% 1/10W		
2177		G1	RESISTOR		R6038	1-208-847-11	METAL CHIP 510K 0.5% 1/10W		
2178		G1	RESISTOR		R6039	1-208-847-11	METAL CHIP 510K 0.5% 1/10W		
2179		G1	RESISTOR		R6040	1-216-827-11	METAL CHIP 3.3K 5% 1/10W		
2180		G1	RESISTOR		R6042	1-260-127-11	CARBON 220K 5% 1/2W		
2181		G1	RESISTOR		R6043	1-216-845-11	METAL CHIP 100K 5% 1/10W		
2182		G1	RESISTOR		R6044	1-218-827-11	METAL CHIP 150 0.5% 1/10W		
2183		G1	RESISTOR		R6045	1-216-833-11	METAL CHIP 10K 5% 1/10W		
2184		G1	RESISTOR		R6046	1-216-833-11	METAL CHIP 10K 5% 1/10W		
2185		G1	RESISTOR		R6047	1-216-821-11	METAL CHIP 1K 5% 1/10W		
2186		G1	RESISTOR		R6048	1-216-833-11	METAL CHIP 10K 5% 1/10W		
2187		G1	RESISTOR		R6049	1-216-837-11	METAL CHIP 22K 5% 1/10W		
2188		G1	RESISTOR		R6050	1-216-833-11	METAL CHIP 10K 5% 1/10W		
2189		G1	RESISTOR		R6051	1-216-837-11	METAL CHIP 22K 5% 1/10W		
2190		G1	RESISTOR		R6052	1-218-883-11	METAL CHIP 33K 0.5% 1/10W		
2191		G1	RESISTOR		R6053	1-218-865-11	METAL CHIP 5.6K 0.5% 1/10W		
2192		G1	RESISTOR		R6054	1-249-393-11	CARBON 10 5% 1/4W		
2193		G1	RESISTOR		R6055	1-249-393-11	CARBON 10 5% 1/4W		
2194		G1	RESISTOR		R6056	1-249-393-11	CARBON 10 5% 1/4W		
2195		G1	RESISTOR		R6057	1-216-833-11	METAL CHIP 10K 5% 1/10W		
2196		G1	RESISTOR		R6058	1-216-833-11	METAL CHIP 10K 5% 1/10W		
2197		G1	RESISTOR		R6059	1-216-821-11	METAL CHIP 1K 5% 1/10W		
2198		G1	RESISTOR		R6060	1-216-864-11	SHORT CHIP 0		
2199		G1	RESISTOR		R6061	1-219-984-51	METAL 0.1 2% 2W		
2200		G1	RESISTOR		R6062	1-216-817-11	METAL CHIP 470 5% 1/10W		
2201		G1	RESISTOR		R6063	1-216-864-11	SHORT CHIP 0		
2202		G1	RESISTOR		R6064	1-216-833-11	METAL CHIP 10K 5% 1/10W		
2203		G1	RESISTOR		R6065	1-216-833-11	METAL CHIP 10K 5% 1/10W		
2204		G1	RESISTOR		R6067	1-216-821-11	METAL CHIP 1K 5% 1/10W		
2205		G1	RESISTOR		R6068	1-216-864-11	SHORT CHIP 0		
2206		G1	RESISTOR		R6069	1-216-833-11	METAL CHIP 10K 5% 1/10W		
2207		G1	RESISTOR		R6070	1-216-864-11	SHORT CHIP 0		
2208		G1	RESISTOR		R6071	1-218-866-11	METAL CHIP 6.2K 0.5% 1/10W		
2209		G1	RESISTOR		R6072	1-218-848-11	METAL CHIP 1.1K 0.5% 1/10W		
2210		G1	RESISTOR		R6073	1-249-377-11	CARBON 0.47 5% 1/4W		
2211		G1	RESISTOR		R6074	1-216-821-11	METAL CHIP 1K 5% 1/10W		
2212		G1	RESISTOR		R6075	1-216-822-11	METAL CHIP 1.2K 5% 1/10W		
2213		G1	RESISTOR		R6076	1-208-823-11	METAL CHIP 51K 0.5% 1/10W		
2214		G1	RESISTOR		R6077	1-216-144-11	RES-CHIP 5.6 5% 1/8W		
2215		G1	RESISTOR		R6078	1-216-144-11	RES-CHIP 5.6 5% 1/8W		
2216		G1	RESISTOR		R6079	1-208-847-11	METAL CHIP 510K 0.5% 1/10W		
2217		G1	RESISTOR		R6080	1-219-759-42	METAL 1M 5% 1/2W		
2218		G1	TRANSFORMER		T6001	1-433-844-11	TRANSFORMER, CONVERTER		
2219		G1	TRANSFORMER		T6002	1-443-166-11	POWER TRANSFORMER		
2220		G1	TRANSFORMER		T6003	1-443-164-11	POWER TRANSFORMER		

No.	#	Board	Type	⚠/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
2221		G1	VARISTOR		VD6001	1-804-991-21	VARISTOR		

9-878-257-02

Sony EMCS Corporation
Ichinomiya TEC

English
2005HL08-Data
Made in Japan
© 2005. 8